



TabScan - Toyota - V2.90 Diagnostic Coverage

NOTES:

●: This function is supported

▲: This function is the new feature in this version

○: This function is not supported

※: This function may be supported which depends on the actual condition of the vehicle

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
*Vehicles before 1997	4WD(SIL)	○	●	●	●	●	
*Vehicles before 1997	A/C(SIL)	○	●	●	●	●	
*Vehicles before 1997	ABS-VSC	○	●	●	●	●	
*Vehicles before 1997	ABS-VSC-TRC(SIL)	○	●	●	●	●	
*Vehicles before 1997	ARS	○	●	●	●	●	0006
*Vehicles before 1997	Air suspension-ahc-tems	○	●	●	●	●	
*Vehicles before 1997	Back door	○	●	●	●	●	
*Vehicles before 1997	Body	○	●	●	●	●	
*Vehicles before 1997	Body no.2	○	●	●	●	●	
*Vehicles before 1997	Body no.2(system jzs. system gs17 #)	○	●	●	●	●	
*Vehicles before 1997	Cruise control	○	●	●	●	●	0003 0036
*Vehicles before 1997	D-seat sw	○	○	○	●	●	
*Vehicles before 1997	Driver door	○	●	●	●	●	
*Vehicles before 1997	Driver seat	○	○	○	●	●	
*Vehicles before 1997	ECT(SIL)	○	●	●	●	●	0001 0006
*Vehicles before 1997	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
*Vehicles before 1997	Gateway	○	●	●	●	●	0002 0019 0007 0020
*Vehicles before 1997	Immobilizer	○	●	●	●	●	
*Vehicles before 1997	Master switch	○	○	○	●	●	0016
*Vehicles before 1997	Mirror	○	○	○	●	●	
*Vehicles before 1997	Mirror l	○	○	○	●	●	
*Vehicles before 1997	Mirror(left and right)	○	○	○	●	●	
*Vehicles before 1997	Movable pedal	○	○	○	●	●	
*Vehicles before 1997	Night view	○	●	●	●	●	
*Vehicles before 1997	Passenger door	○	●	●	●	●	
*Vehicles before 1997	Passenger seat	○	○	○	●	●	
*Vehicles before 1997	Rear left door	○	●	●	●	●	
*Vehicles before 1997	Rear left seat	○	○	○	●	●	
*Vehicles before 1997	Rear right door	○	●	●	●	●	
*Vehicles before 1997	Rear right seat	○	○	○	●	●	
*Vehicles before 1997	Rear seat switch	○	○	○	●	●	
*Vehicles before 1997	Retractable hardtop	○	●	●	●	●	
*Vehicles before 1997	Security (sil)	○	●	●	●	●	
*Vehicles before 1997	Sliding roof	○	○	○	●	●	
*Vehicles before 1997	Srs airbag(sil)	○	●	●	●	●	0006
*Vehicles before 1997	Steering pad switch	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
*Vehicles before 1997	Tilt&telescopic	○	●	●	●	●	0026
*Vehicles before 1997	Immobilizer (built-in engine)	○	●	●	●	●	
*Vehicles before 2000	4WD(SIL)	○	●	●	●	●	
*Vehicles before 2000	A/C(SIL)	○	●	●	●	●	
*Vehicles before 2000	ABS-VSC	○	●	●	●	●	
*Vehicles before 2000	ABS-VSC-TRC(SIL)	○	●	●	●	●	
*Vehicles before 2000	ARS	○	●	●	●	●	0006
*Vehicles before 2000	Air suspension-ahc-tems	○	●	●	●	●	
*Vehicles before 2000	Back door	○	●	●	●	●	
*Vehicles before 2000	Body	○	●	●	●	●	
*Vehicles before 2000	Body no.2	○	●	●	●	●	
*Vehicles before 2000	Body no.2(system jzs. system gs17 #)	○	●	●	●	●	
*Vehicles before 2000	Body no.4	○	●	○	●	●	
*Vehicles before 2000	Body no.5	○	○	○	●	●	
*Vehicles before 2000	Clearance sonar	○	●	●	●	●	0046
*Vehicles before 2000	Combination switch	○	○	○	●	●	
*Vehicles before 2000	D-seat sw	○	○	○	●	●	
*Vehicles before 2000	Driver door	○	●	●	●	●	
*Vehicles before 2000	Driver seat	○	○	○	●	●	
*Vehicles before 2000	ECT(SIL)	○	●	●	●	●	0001 0006
*Vehicles before 2000	Electric power steering (ehps system sil zzw)	○	●	●	●	●	
*Vehicles before 2000	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
*Vehicles before 2000	Electric power steering (with brush type system sil nhw11)	○	●	●	●	●	
*Vehicles before 2000	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
*Vehicles before 2000	Gateway	○	●	●	●	●	0002 0019 0007 0020
*Vehicles before 2000	HV(SIL)	○	●	●	●	●	
*Vehicles before 2000	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
*Vehicles before 2000	Immobilizer	○	●	●	●	●	
*Vehicles before 2000	J / b seat p (other than the system. uzs system. jzs series gs)	○	●	●	●	●	
*Vehicles before 2000	J / b seat p (series. uzs system. jzs series gs)	○	●	●	●	●	
*Vehicles before 2000	Master switch	○	○	○	●	●	0016
*Vehicles before 2000	Meter	○	○	○	●	●	0172 0006 0174 0072
*Vehicles before 2000	Mirror	○	○	○	●	●	
*Vehicles before 2000	Mirror l	○	○	○	●	●	
*Vehicles before 2000	Mirror(letf and right)	○	○	○	●	●	
*Vehicles before 2000	Movable pedal	○	○	○	●	●	
*Vehicles before 2000	Night view	○	●	●	●	●	
*Vehicles before 2000	Passenger door	○	●	●	●	●	
*Vehicles before 2000	Passenger seat	○	○	○	●	●	
*Vehicles before 2000	Radar cruise	○	●	●	●	●	0003 0035 0036
*Vehicles before 2000	Rain sensor	○	○	○	●	●	
*Vehicles before 2000	Rear left door	○	●	●	●	●	
*Vehicles before 2000	Rear left seat	○	○	○	●	●	
*Vehicles before 2000	Rear right door	○	●	●	●	●	
*Vehicles before 2000	Rear right seat	○	○	○	●	●	
*Vehicles before 2000	Rear seat switch	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
*Vehicles before 2000	Retractable hardtop	○	●	●	●	●	
*Vehicles before 2000	Security (sil)	○	●	●	●	●	
*Vehicles before 2000	Sliding roof	○	○	○	●	●	
*Vehicles before 2000	Srs airbag(sil)	○	●	●	●	●	0006
*Vehicles before 2000	Steering pad switch	○	○	○	●	●	
*Vehicles before 2000	Tilt&telescopic	○	●	●	●	●	0026
*Vehicles before 2000	Immobilizer (built-in engine)	○	●	●	●	●	
*Vehicles before 2000	Cruise control (internal sil hv)	○	●	●	●	●	
*Vehicles before 2000	Cruise control (with built-in diesel engine sil)	○	●	●	●	●	
*Vehicles before 2000	Cruise control (with built-in gasoline engine sil)	○	●	●	●	●	
*Vehicles before 2003	4WD(SIL)	○	●	●	●	●	
*Vehicles before 2003	A/C(SIL)	○	●	●	●	●	
*Vehicles before 2003	ABS-VSC	○	●	●	●	●	
*Vehicles before 2003	ABS-VSC-TRC(SIL)	○	●	●	●	●	
*Vehicles before 2003	AFS(SIL)	○	●	●	●	●	0043
*Vehicles before 2003	ARS	○	●	●	●	●	0006
*Vehicles before 2003	Air suspension-ahc-tems	○	●	●	●	●	
*Vehicles before 2003	Back door	○	●	●	●	●	
*Vehicles before 2003	Back guide monitor ipa	○	●	●	●	●	
*Vehicles before 2003	Body	○	●	●	●	●	
*Vehicles before 2003	Body no.2	○	●	●	●	●	
*Vehicles before 2003	Body no.2(system jzs. system gs17 #)	○	●	●	●	●	
*Vehicles before 2003	Body no.4	○	●	○	●	●	
*Vehicles before 2003	Body no.5	○	○	○	●	●	
*Vehicles before 2003	Clearance sonar	○	●	●	●	●	0046
*Vehicles before 2003	Combination switch	○	○	○	●	●	
*Vehicles before 2003	D-seat sw	○	○	○	●	●	
*Vehicles before 2003	Driver door	○	●	●	●	●	
*Vehicles before 2003	Driver seat	○	○	○	●	●	
*Vehicles before 2003	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
*Vehicles before 2003	ECT(SIL)	○	●	●	●	●	0001 0006
*Vehicles before 2003	ECT(SIL2)	○	●	●	●	●	0026 0006 0016
*Vehicles before 2003	Electric power steering (ehps system sil zzw)	○	●	●	●	●	
*Vehicles before 2003	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
*Vehicles before 2003	Electric power steering (with brush type system sil nhw11)	○	●	●	●	●	
*Vehicles before 2003	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
*Vehicles before 2003	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
*Vehicles before 2003	Engine(sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
*Vehicles before 2003	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
*Vehicles before 2003	Gateway	○	●	●	●	●	0002 0019 0007 0020
*Vehicles before 2003	HV(CAN)	○	●	●	●	●	
*Vehicles before 2003	HV(SIL)	○	●	●	●	●	
*Vehicles before 2003	Hv battery (can)	○	●	●	●	●	0002
*Vehicles before 2003	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
*Vehicles before 2003	Immobilizer	○	●	●	●	●	
*Vehicles before 2003	J / b seat p (other than the system. uzs system. jzs series gs)	○	●	●	●	●	
*Vehicles before 2003	J / b seat p (series. uzs system. jzs series gs)	○	●	●	●	●	
*Vehicles before 2003	Master switch	○	○	○	●	●	0016
*Vehicles before 2003	Meter	○	○	○	●	●	0172 0006 0174 0072
*Vehicles before 2003	Mild hv	○	●	●	●	●	
*Vehicles before 2003	Mirror	○	○	○	●	●	
*Vehicles before 2003	Mirror l	○	○	○	●	●	
*Vehicles before 2003	Mirror(letf and right)	○	○	○	●	●	
*Vehicles before 2003	Movable pedal	○	○	○	●	●	
*Vehicles before 2003	Night view	○	●	●	●	●	
*Vehicles before 2003	Passenger door	○	●	●	●	●	
*Vehicles before 2003	Passenger seat	○	○	○	●	●	
*Vehicles before 2003	Power source control	○	●	●	●	●	0041
*Vehicles before 2003	Radar cruise (built sil engine)	○	●	●	●	●	
*Vehicles before 2003	Radar cruise (built-sil hv)	○	●	●	●	●	
*Vehicles before 2003	Radar cruise (internal can engine)	○	●	●	●	●	
*Vehicles before 2003	Rain sensor	○	○	○	●	●	
*Vehicles before 2003	Rear left door	○	●	●	●	●	
*Vehicles before 2003	Rear left seat	○	○	○	●	●	
*Vehicles before 2003	Rear right door	○	●	●	●	●	
*Vehicles before 2003	Rear right seat	○	○	○	●	●	
*Vehicles before 2003	Rear seat switch	○	○	○	●	●	
*Vehicles before 2003	Retractable hardtop	○	●	●	●	●	
*Vehicles before 2003	Security (sil)	○	●	●	●	●	
*Vehicles before 2003	Sliding roof	○	○	○	●	●	
*Vehicles before 2003	Srs airbag(sil)	○	●	●	●	●	0006
*Vehicles before 2003	Srs airbag(sil2)	○	●	●	●	●	0006
*Vehicles before 2003	Steering pad switch	○	○	○	●	●	
*Vehicles before 2003	Stop & go	○	●	●	●	●	
*Vehicles before 2003	Tilt&telescopic	○	●	●	●	●	0026
*Vehicles before 2003	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
*Vehicles before 2003	Transmission control	○	●	●	●	●	
*Vehicles before 2003	VGRS	○	●	●	●	●	0005 0006
*Vehicles before 2003	Wiper	○	○	○	●	●	
*Vehicles before 2003	Immobilizer (built-in engine)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
*Vehicles before 2003	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
*Vehicles before 2003	Radar cruise	○	●	●	●	●	0003 0035 0036
*Vehicles before 2003	Cruise control (internal sil hv)	○	●	●	●	●	
*Vehicles before 2003	Cruise control (with built-in can engine)	○	●	●	●	●	
*Vehicles before 2003	Cruise control (with built-in can hv)	○	●	●	●	●	
*Vehicles before 2003	Cruise control (with built-in diesel engine sil)	○	●	●	●	●	
*Vehicles before 2003	Cruise control (with built-in engine sil2)	○	●	●	●	●	
*Vehicles before 2003	Cruise control (with built-in gasoline engine sil)	○	●	●	●	●	
*Vehicles before 2005	4WD(CAN)	○	●	●	●	●	
*Vehicles before 2005	4WD(SIL)	○	●	●	●	●	
*Vehicles before 2005	A/C(CAN)	○	●	●	●	●	
*Vehicles before 2005	A/C(SIL)	○	●	●	●	●	
*Vehicles before 2005	ABS-VSC	○	●	●	●	●	
*Vehicles before 2005	ABS-VSC-TRC(CAN)	○	●	●	●	●	
*Vehicles before 2005	ABS-VSC-TRC(SIL)	○	●	●	●	●	
*Vehicles before 2005	AFS(SIL)	○	●	●	●	●	0043
*Vehicles before 2005	ARS	○	●	●	●	●	0006
*Vehicles before 2005	Accessory gateway	○	●	●	●	●	0002
*Vehicles before 2005	Air suspension-ahc-tems	○	●	●	●	●	
*Vehicles before 2005	Back door	○	●	●	●	●	
*Vehicles before 2005	Back guide monitor ipa	○	●	●	●	●	
*Vehicles before 2005	Body	○	●	●	●	●	
*Vehicles before 2005	Body no.2	○	●	●	●	●	
*Vehicles before 2005	Body no.2(system jzs. system gs17 #)	○	●	●	●	●	
*Vehicles before 2005	Body no.4	○	●	○	●	●	
*Vehicles before 2005	Body no.5	○	○	○	●	●	
*Vehicles before 2005	Clearance sonar	○	●	●	●	●	0046
*Vehicles before 2005	Combination switch	○	○	○	●	●	
*Vehicles before 2005	D-door motor	○	●	●	●	●	0016
*Vehicles before 2005	D-seat sw	○	○	○	●	●	
*Vehicles before 2005	Driver door	○	●	●	●	●	
*Vehicles before 2005	Driver seat	○	○	○	●	●	
*Vehicles before 2005	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
*Vehicles before 2005	ECT(SIL)	○	●	●	●	●	0001 0006
*Vehicles before 2005	ECT(SIL2)	○	●	●	●	●	0026 0006 0016
*Vehicles before 2005	Electric power steering (ehps system sil zzw)	○	●	●	●	●	
*Vehicles before 2005	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
*Vehicles before 2005	Electric power steering (sil rack type)	○	●	●	●	●	
*Vehicles before 2005	Electric power steering (with brush type system sil nhw11)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
*Vehicles before 2005	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
*Vehicles before 2005	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
*Vehicles before 2005	Engine(sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
*Vehicles before 2005	Gateway	○	●	●	●	●	0002 0019 0007 0020
*Vehicles before 2005	HV(CAN)	○	●	●	●	●	
*Vehicles before 2005	HV(SIL)	○	●	●	●	●	
*Vehicles before 2005	Hv battery (can)	○	●	●	●	●	0002
*Vehicles before 2005	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
*Vehicles before 2005	Immobilizer	○	●	●	●	●	
*Vehicles before 2005	J / b seat p (other than the system. uzs system. jzs series gs)	○	●	●	●	●	
*Vehicles before 2005	J / b seat p (series. uzs system. jzs series gs)	○	●	●	●	●	
*Vehicles before 2005	Key(can)	○	●	●	●	●	
*Vehicles before 2005	Lane keeping assist	○	●	●	●	●	0153
*Vehicles before 2005	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
*Vehicles before 2005	Master switch	○	●	●	●	●	0016
*Vehicles before 2005	Meter (can)	○	●	●	●	●	
*Vehicles before 2005	Meter(sil)	○	○	○	●	●	
*Vehicles before 2005	Mild hv	○	●	●	●	●	
*Vehicles before 2005	Mirror	○	○	○	●	●	
*Vehicles before 2005	Mirror l	○	○	○	●	●	
*Vehicles before 2005	Mirror(letf and right)	○	○	○	●	●	
*Vehicles before 2005	Movable pedal	○	○	○	●	●	
*Vehicles before 2005	Night view	○	●	●	●	●	
*Vehicles before 2005	P-door motor	○	●	●	●	●	0016
*Vehicles before 2005	Passenger door	○	●	●	●	●	
*Vehicles before 2005	Passenger seat	○	○	○	●	●	
*Vehicles before 2005	Power source control	○	●	●	●	●	0041
*Vehicles before 2005	Radar cruise (built sil engine)	○	●	●	●	●	
*Vehicles before 2005	Radar cruise (built-sil hv)	○	●	●	●	●	
*Vehicles before 2005	Radar cruise (internal can engine)	○	●	●	●	●	
*Vehicles before 2005	Rain sensor	○	○	○	●	●	
*Vehicles before 2005	Rear left door	○	●	●	●	●	
*Vehicles before 2005	Rear left seat	○	○	○	●	●	
*Vehicles before 2005	Rear right door	○	●	●	●	●	
*Vehicles before 2005	Rear right seat	○	○	○	●	●	
*Vehicles before 2005	Rear seat switch	○	○	○	●	●	
*Vehicles before 2005	Remote security	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
*Vehicles before 2005	Retractable hardtop	○	●	●	●	●	
*Vehicles before 2005	Rl-door motor	○	●	●	●	●	0016
*Vehicles before 2005	Rr-door motor	○	●	●	●	●	0016
*Vehicles before 2005	Security (can)	○	●	●	●	●	
*Vehicles before 2005	Security (sil)	○	●	●	●	●	
*Vehicles before 2005	Sliding roof	○	●	●	●	●	
*Vehicles before 2005	Smart key(sil)	○	●	●	●	●	
*Vehicles before 2005	Srs airbag(sil)	○	●	●	●	●	0006
*Vehicles before 2005	Srs airbag(sil2)	○	●	●	●	●	0006
*Vehicles before 2005	Stabilizer	○	●	●	●	●	
*Vehicles before 2005	Steering pad switch	○	○	○	●	●	
*Vehicles before 2005	Stop & go	○	●	●	●	●	
*Vehicles before 2005	Tilt&telescopic	○	●	●	●	●	0026
*Vehicles before 2005	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
*Vehicles before 2005	Transmission control	○	●	●	●	●	
*Vehicles before 2005	VGRS	○	●	●	●	●	0005 0006
*Vehicles before 2005	Wiper	○	○	○	●	●	
*Vehicles before 2005	Immobilizer (built-in engine)	○	●	●	●	●	
*Vehicles before 2005	Pre-crash 1 (can)	○	●	●	●	●	
*Vehicles before 2005	Pre-crash(sil)	○	●	●	●	●	
*Vehicles before 2005	Radar cruise	○	●	●	●	●	0003 0035 0036
*Vehicles before 2005	Cruise control (internal sil hv)	○	●	●	●	●	
*Vehicles before 2005	Cruise control (with built-in can engine)	○	●	●	●	●	
*Vehicles before 2005	Cruise control (with built-in can hv)	○	●	●	●	●	
*Vehicles before 2005	Cruise control (with built-in diesel engine sil)	○	●	●	●	●	
*Vehicles before 2005	Cruise control (with built-in engine sil2)	○	●	●	●	●	
*Vehicles before 2005	Cruise control (with built-in gasoline engine sil)	○	●	●	●	●	
4Runner	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
4Runner	Air conditioner	○	●	●	●	●	0065
4Runner	Back door p/w	○	●	●	●	●	
4Runner	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
4Runner	Cruise control	○	●	●	●	●	0003 0036
4Runner	D-door motor	○	●	●	●	●	0016
4Runner	D-seat sw	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
4Runner	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
4Runner	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
4Runner	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
4Runner	Master switch	○	●	●	●	●	0016
4Runner	P-door motor	○	●	●	●	●	0016
4Runner	PPS	○	●	●	●	●	0025 0006
4Runner	Power source control	○	●	●	●	●	0041
4Runner	Rl-door motor	○	●	●	●	●	0016
4Runner	Rr-door motor	○	●	●	●	●	0016
4Runner	Sliding roof	○	●	●	●	●	
4Runner	Srs airbag	○	●	●	●	●	0006
4Runner	Starting control	○	●	●	●	●	
4Runner	Gateway	○	●	●	●	●	0002 0019 0007 0020
4Runner	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
4Runner	Navigation system	○	●	●	●	●	
4Runner	Driver seat	○	●	●	●	●	
4Runner	KDSS	○	●	●	●	●	0006 0103
4Runner	Occupant detection	○	●	●	●	●	0032
4Runner	Pm2 gateway	○	●	●	●	●	0002
4Runner	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
4Runner	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
4Runner	Back door	○	●	●	●	●	
4Runner	Body	○	●	●	●	●	
4Runner	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
4Runner	Air suspension	○	●	●	●	●	0054 0006 0158 0152
4Runner	Pm1 gateway	○	●	●	●	●	0002
4Runner	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
4Runner	Telematics	○	●	●	●	●	0048 0124

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
86	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
86	Air conditioner	○	●	●	●	●	0065
86	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
86	Cruise control	○	●	●	●	●	0003 0036
86	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
86	EMPS	○	●	●	●	●	0006 0025
86	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
86	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
86	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
86	Master switch	○	●	●	●	●	0016
86	Occupant detection	○	●	●	●	●	0032
86	Power source control	○	●	●	●	●	0041
86	Srs airbag	○	●	●	●	●	0006
86	Theft deterrent	○	○	○	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
86	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
86	A/C	○	●	●	●	●	
86	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
86	Meter	○	●	●	●	●	0172 0006 0174 0072
86	Remote engine starter	○	○	○	●	●	0047 0013 0085 0086
86	Security	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
86	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
86	Srs airbag(can)	○	●	●	●	●	0006
Agya	A/B	○	●	●	●	●	0023 0006 0174
Agya	A/T	○	●	●	●	●	0016
Agya	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Agya	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Agya	EPS	○	●	●	●	●	0023 0006 0174 0025
Allion/premio	4WD(SIL)	○	●	●	●	●	
Allion/premio	A/C(SIL)	○	●	●	●	●	
Allion/premio	ABS-VSC	○	●	●	●	●	
Allion/premio	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Allion/premio	AFS(SIL)	○	●	●	●	●	0043
Allion/premio	Air suspension-ahc-tems	○	●	●	●	●	
Allion/premio	Back door	○	●	●	●	●	
Allion/premio	Body no.2	○	●	●	●	●	
Allion/premio	Clearance sonar	○	●	●	●	●	0046
Allion/premio	D-seat sw	○	○	○	●	●	
Allion/premio	Driver door	○	●	●	●	●	
Allion/premio	Driver seat	○	○	○	●	●	
Allion/premio	Electric power steering	○	●	●	●	●	
Allion/premio	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Allion/premio	Gateway	○	●	●	●	●	0002 0019 0007 0020
Allion/premio	Immobilizer	○	●	●	●	●	
Allion/premio	Immobilizer (built-in engine)	○	●	●	●	●	
Allion/premio	Master switch	○	○	○	●	●	0016
Allion/premio	Meter	○	○	○	●	●	0172 0006 0174 0072
Allion/premio	Mirror	○	○	○	●	●	
Allion/premio	Mirror l	○	○	○	●	●	
Allion/premio	Mirror(letf and right)	○	○	○	●	●	
Allion/premio	Passenger door	○	●	●	●	●	
Allion/premio	Passenger seat	○	○	○	●	●	
Allion/premio	Power source control	○	●	●	●	●	0041
Allion/premio	Rear left door	○	●	●	●	●	
Allion/premio	Rear left seat	○	○	○	●	●	
Allion/premio	Rear right door	○	●	●	●	●	
Allion/premio	Rear right seat	○	○	○	●	●	
Allion/premio	Security (sil)	○	●	●	●	●	
Allion/premio	Sliding roof	○	○	○	●	●	
Allion/premio	Srs airbag(sil)	○	●	●	●	●	0006
Allion/premio	Srs airbag(sil2)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Allion/premio	Steering pad switch	○	○	○	●	●	
Allion/premio	Tilt&telescopic	○	●	●	●	●	0026
Allion/premio	A/C(CAN)	○	●	●	●	●	
Allion/premio	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Allion/premio	Accessory gateway	○	●	●	●	●	0002
Allion/premio	Back guide monitor ipa	○	●	●	●	●	
Allion/premio	D-door motor	○	●	●	●	●	0016
Allion/premio	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Allion/premio	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Allion/premio	HI autoleveling	○	●	●	●	●	0042 0083 0056
Allion/premio	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Allion/premio	Master switch	○	●	●	●	●	0016
Allion/premio	Meter (can)	○	●	●	●	●	
Allion/premio	Navigation system	○	●	●	●	●	
Allion/premio	P-door motor	○	●	●	●	●	0016
Allion/premio	Rl-door motor	○	●	●	●	●	0016
Allion/premio	Rr-door motor	○	●	●	●	●	0016
Allion/premio	Security (can)	○	●	●	●	●	
Allion/premio	Cruise control	○	●	●	●	●	0003 0036
Alphard	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Alphard	AFS	○	●	●	●	●	
Alphard	Air conditioner	○	●	●	●	●	0065
Alphard	Back door	○	●	●	●	●	
Alphard	Clearance sonar	○	●	●	●	●	0046
Alphard	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Alphard	Cruise control	○	●	●	●	●	0003 0036
Alphard	D-door motor	○	●	●	●	●	0016
Alphard	Driver seat	○	●	●	●	●	
Alphard	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Alphard	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Alphard	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Alphard	Four wheel drive	○	●	●	●	●	0016 0081
Alphard	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Alphard	Master switch	○	●	●	●	●	0016
Alphard	Mirror	○	●	●	●	●	
Alphard	Navigation system	○	●	●	●	●	
Alphard	P-door motor	○	●	●	●	●	0016
Alphard	Parking assist monitor system	○	●	●	●	●	
Alphard	Rear left door	○	●	●	●	●	
Alphard	Rear right door	○	●	●	●	●	
Alphard	Rl-door motor	○	●	●	●	●	0016
Alphard	Rr-door motor	○	●	●	●	●	0016
Alphard	Sliding roof	○	●	●	●	●	
Alphard	Srs airbag	○	●	●	●	●	0006
Alphard	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Alphard	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Alphard	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Alphard	Gateway	○	●	●	●	●	0002 0019 0007 0020
Alphard	EMS	○	●	●	●	●	0054 0006 0158 0152
Alphard	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Alphard hv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Alphard hv	AFS	○	●	●	●	●	
Alphard hv	Air conditioner	○	●	●	●	●	0065
Alphard hv	Back door	○	●	●	●	●	
Alphard hv	Clearance sonar	○	●	●	●	●	0046
Alphard hv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Alphard hv	Cruise control	○	●	●	●	●	0003 0036
Alphard hv	D-door motor	○	●	●	●	●	0016
Alphard hv	Driver seat	○	●	●	●	●	
Alphard hv	EMPS	○	●	●	●	●	0006 0025
Alphard hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Alphard hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Alphard hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Alphard hv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Alphard hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Alphard hv	Master switch	○	●	●	●	●	0016
Alphard hv	Mirror	○	●	●	●	●	
Alphard hv	P-door motor	○	●	●	●	●	0016
Alphard hv	Rear left door	○	●	●	●	●	
Alphard hv	Rear right door	○	●	●	●	●	
Alphard hv	RI-door motor	○	●	●	●	●	0016
Alphard hv	Rr-door motor	○	●	●	●	●	0016
Alphard hv	Sliding roof	○	●	●	●	●	
Alphard hv	Srs airbag	○	●	●	●	●	0006
Alphard hv	Vehicle proximity notification system	○	●	●	●	●	
Alphard hv/vellfire hv	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Alphard hv/vellfire hv	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Alphard hv/vellfire hv	HV(SIL)	○	●	●	●	●	
Alphard hv/vellfire hv	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
Alphard hv/vellfire hv	Immobilizer	○	●	●	●	●	
Alphard hv/vellfire hv	Radar cruise	○	●	●	●	●	0003 0035 0036
Alphard hv/vellfire hv	Srs airbag(sil)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Alphard hv/vellfire hv	Srs airbag(sil2)	○	●	●	●	●	0006
Alphard hv/vellfire hv	Cruise control (internal sil hv)	○	●	●	●	●	
Alphard hv/vellfire hv	4WD(SIL)	○	●	●	●	●	
Alphard hv/vellfire hv	A/C(SIL)	○	●	●	●	●	
Alphard hv/vellfire hv	ABS-VSC	○	●	●	●	●	
Alphard hv/vellfire hv	AFS(SIL)	○	●	●	●	●	0043
Alphard hv/vellfire hv	ARS	○	●	●	●	●	0006
Alphard hv/vellfire hv	Air suspension-ahc-tems	○	●	●	●	●	
Alphard hv/vellfire hv	Back door	○	●	●	●	●	
Alphard hv/vellfire hv	Body no.2	○	●	●	●	●	
Alphard hv/vellfire hv	Body no.3	○	●	●	●	●	
Alphard hv/vellfire hv	Body no.4	○	●	○	●	●	
Alphard hv/vellfire hv	Body no.5	○	○	○	●	●	
Alphard hv/vellfire hv	Clearance sonar	○	●	●	●	●	0046
Alphard hv/vellfire hv	Combination switch	○	○	○	●	●	
Alphard hv/vellfire hv	Cruise control (with built-in gasoline engine sil)	○	●	●	●	●	
Alphard hv/vellfire hv	D-seat sw	○	○	○	●	●	
Alphard hv/vellfire hv	Driver door	○	●	●	●	●	
Alphard hv/vellfire hv	Driver seat	○	○	○	●	●	
Alphard hv/vellfire hv	Electric power steering	○	●	●	●	●	
Alphard hv/vellfire hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Alphard hv/vellfire hv	Immobilizer (built-in engine)	○	●	●	●	●	
Alphard hv/vellfire hv	Master switch	○	○	○	●	●	0016
Alphard hv/vellfire hv	Meter	○	○	○	●	●	0172 0006 0174 0072
Alphard hv/vellfire hv	Mirror	○	○	○	●	●	
Alphard hv/vellfire hv	Mirror l	○	○	○	●	●	
Alphard hv/vellfire hv	Mirror(letf and right)	○	○	○	●	●	
Alphard hv/vellfire hv	Night view	○	●	●	●	●	
Alphard hv/vellfire hv	Passenger door	○	●	●	●	●	
Alphard hv/vellfire hv	Passenger seat	○	○	○	●	●	
Alphard hv/vellfire hv	Power source control	○	●	●	●	●	0041
Alphard hv/vellfire hv	Rain sensor	○	○	○	●	●	
Alphard hv/vellfire hv	Rear left door	○	●	●	●	●	
Alphard hv/vellfire hv	Rear left seat	○	○	○	●	●	
Alphard hv/vellfire hv	Rear right door	○	●	●	●	●	
Alphard hv/vellfire hv	Rear right seat	○	○	○	●	●	
Alphard hv/vellfire hv	Security (sil)	○	●	●	●	●	
Alphard hv/vellfire hv	Sliding roof	○	○	○	●	●	
Alphard hv/vellfire hv	Steering pad switch	○	○	○	●	●	
Alphard hv/vellfire hv	Tilt&telescopic	○	●	●	●	●	0026
Alphard hv/vellfire hv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Alphard hv/vellfire hv	Transmission control	○	●	●	●	●	
Alphard hv/vellfire hv	VGRS	○	●	●	●	●	0005 0006
Alphard hv/vellfire hv	Wiper	○	○	○	●	●	
Alphard hv/vellfire hv	Radar cruise (built sil engine)	○	●	●	●	●	
Alphard hv/vellfire hv	Radar cruise (built-sil hv)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Alphard hv/vellfire hv	A/C(CAN)	○	●	●	●	●	
Alphard hv/vellfire hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Alphard hv/vellfire hv	AFS	○	●	●	●	●	
Alphard hv/vellfire hv	Accessory gateway	○	●	●	●	●	0002
Alphard hv/vellfire hv	Cruise control	○	●	●	●	●	0003 0036
Alphard hv/vellfire hv	D-door motor	○	●	●	●	●	0016
Alphard hv/vellfire hv	Driver seat	○	●	●	●	●	
Alphard hv/vellfire hv	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Alphard hv/vellfire hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Alphard hv/vellfire hv	HV(CAN)	○	●	●	●	●	
Alphard hv/vellfire hv	Lane keeping assist	○	●	●	●	●	0153
Alphard hv/vellfire hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Alphard hv/vellfire hv	Master switch	○	●	●	●	●	0016
Alphard hv/vellfire hv	Meter (can)	○	●	●	●	●	
Alphard hv/vellfire hv	Mirror	○	●	●	●	●	
Alphard hv/vellfire hv	Navigation system	○	●	●	●	●	
Alphard hv/vellfire hv	P-door motor	○	●	●	●	●	0016
Alphard hv/vellfire hv	Panoramic view monitor	○	●	●	●	●	
Alphard hv/vellfire hv	Rl-door motor	○	●	●	●	●	0016
Alphard hv/vellfire hv	Rr-door motor	○	●	●	●	●	0016
Alphard hv/vellfire hv	Sliding roof	○	●	●	●	●	
Alphard hv/vellfire hv	Vehicle proximity notification system	○	●	●	●	●	
Alphard hv/vellfire hv	Pre-crash 1 (can)	○	●	●	●	●	
Alphard/vellfire	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Alphard/vellfire	AFS	○	●	●	●	●	
Alphard/vellfire	Air conditioner	○	●	●	●	●	0065
Alphard/vellfire	Back door	○	●	●	●	●	
Alphard/vellfire	Clearance sonar	○	●	●	●	●	0046
Alphard/vellfire	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Alphard/vellfire	Cruise control	○	●	●	●	●	0003 0036
Alphard/vellfire	D-door motor	○	●	●	●	●	0016
Alphard/vellfire	Driver seat	○	●	●	●	●	
Alphard/vellfire	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Alphard/vellfire	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Alphard/vellfire	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Alphard/vellfire	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Alphard/vellfire	Master switch	○	●	●	●	●	0016
Alphard/vellfire	Mirror	○	●	●	●	●	
Alphard/vellfire	Navigation system	○	●	●	●	●	
Alphard/vellfire	P-door motor	○	●	●	●	●	0016
Alphard/vellfire	Rear left door	○	●	●	●	●	
Alphard/vellfire	Rear right door	○	●	●	●	●	
Alphard/vellfire	Rl-door motor	○	●	●	●	●	0016
Alphard/vellfire	Rr-door motor	○	●	●	●	●	0016
Alphard/vellfire	Sliding roof	○	●	●	●	●	
Alphard/vellfire	Srs airbag	○	●	●	●	●	0006
Alphard/vellfire	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Alphard/vellfire	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Alphard/vellfire	Gateway	○	●	●	●	●	0002 0019 0007 0020
Alphard/vellfire	4WD(SIL)	○	●	●	●	●	
Alphard/vellfire	A/C(SIL)	○	●	●	●	●	
Alphard/vellfire	ABS-VSC	○	●	●	●	●	
Alphard/vellfire	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Alphard/vellfire	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Alphard/vellfire	AFS(SIL)	○	●	●	●	●	0043
Alphard/vellfire	ARS	○	●	●	●	●	0006
Alphard/vellfire	Air suspension-ahc-tems	○	●	●	●	●	
Alphard/vellfire	Body no.2	○	●	●	●	●	
Alphard/vellfire	Body no.3	○	●	●	●	●	
Alphard/vellfire	Body no.4	○	●	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Alphard/vellfire	Body no.5	○	○	○	●	●	
Alphard/vellfire	Combination switch	○	○	○	●	●	
Alphard/vellfire	D-seat sw	○	○	○	●	●	
Alphard/vellfire	Driver door	○	●	●	●	●	
Alphard/vellfire	Driver seat	○	○	○	●	●	
Alphard/vellfire	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Alphard/vellfire	Electric power steering (sil rack type)	○	●	●	●	●	
Alphard/vellfire	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Alphard/vellfire	Immobilizer	○	●	●	●	●	
Alphard/vellfire	Immobilizer (built-in engine)	○	●	●	●	●	
Alphard/vellfire	Master switch	○	○	○	●	●	0016
Alphard/vellfire	Meter	○	○	○	●	●	0172 0006 0174 0072
Alphard/vellfire	Mirror	○	○	○	●	●	
Alphard/vellfire	Mirror l	○	○	○	●	●	
Alphard/vellfire	Mirror(left and right)	○	○	○	●	●	
Alphard/vellfire	Night view	○	●	●	●	●	
Alphard/vellfire	Passenger door	○	●	●	●	●	
Alphard/vellfire	Passenger seat	○	○	○	●	●	
Alphard/vellfire	Power source control	○	●	●	●	●	0041
Alphard/vellfire	Rain sensor	○	○	○	●	●	
Alphard/vellfire	Rear left seat	○	○	○	●	●	
Alphard/vellfire	Rear right seat	○	○	○	●	●	
Alphard/vellfire	Security (sil)	○	●	●	●	●	
Alphard/vellfire	Sliding roof	○	○	○	●	●	
Alphard/vellfire	Srs airbag(sil)	○	●	●	●	●	0006
Alphard/vellfire	Srs airbag(sil2)	○	●	●	●	●	0006
Alphard/vellfire	Stabilizer	○	●	●	●	●	
Alphard/vellfire	Steering pad switch	○	○	○	●	●	
Alphard/vellfire	Tilt&telescopic	○	●	●	●	●	0026
Alphard/vellfire	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Alphard/vellfire	VGRS	○	●	●	●	●	0005 0006
Alphard/vellfire	Wiper	○	○	○	●	●	
Alphard/vellfire	4WD(CAN)	○	●	●	●	●	
Alphard/vellfire	A/C(CAN)	○	●	●	●	●	
Alphard/vellfire	Accessory gateway	○	●	●	●	●	0002
Alphard/vellfire	Back guide monitor ipa	○	●	●	●	●	
Alphard/vellfire	Electric power steering	○	●	●	●	●	
Alphard/vellfire	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Alphard/vellfire	Lane keeping assist	○	●	●	●	●	0153

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Alphard/vellfire	Meter (can)	○	●	●	●	●	
Alphard/vellfire	Security (can)	○	●	●	●	●	
Alphard/vellfire	Panoramic view monitor	○	●	●	●	●	
Alphard/vellfire	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Alphard/vellfire	Pre-crash 1 (can)	○	●	●	●	●	
Alphard/vellfire	Radar cruise	○	●	●	●	●	0003 0035 0036
Altezza/altezza gita	A/C(SIL)	○	●	●	●	●	
Altezza/altezza gita	ABS-VSC	○	●	●	●	●	
Altezza/altezza gita	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Altezza/altezza gita	AFS(SIL)	○	●	●	●	●	0043
Altezza/altezza gita	ARS	○	●	●	●	●	0006
Altezza/altezza gita	Back door	○	●	●	●	●	
Altezza/altezza gita	Body	○	●	●	●	●	
Altezza/altezza gita	Body no.2	○	●	●	●	●	
Altezza/altezza gita	Clearance sonar	○	●	●	●	●	0046
Altezza/altezza gita	Driver door	○	●	●	●	●	
Altezza/altezza gita	Driver seat	○	○	○	●	●	
Altezza/altezza gita	ECT(SIL)	○	●	●	●	●	0001 0006
Altezza/altezza gita	Electric power steering	○	●	●	●	●	
Altezza/altezza gita	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Altezza/altezza gita	Gateway	○	●	●	●	●	0002 0019 0007 0020
Altezza/altezza gita	Immobilizer	○	●	●	●	●	
Altezza/altezza gita	Master switch	○	○	○	●	●	0016
Altezza/altezza gita	Meter	○	○	○	●	●	0172 0006 0174 0072
Altezza/altezza gita	Mirror	○	○	○	●	●	
Altezza/altezza gita	Mirror l	○	○	○	●	●	
Altezza/altezza gita	Mirror(letf and right)	○	○	○	●	●	
Altezza/altezza gita	Passenger door	○	●	●	●	●	
Altezza/altezza gita	Passenger seat	○	○	○	●	●	
Altezza/altezza gita	Rear left door	○	●	●	●	●	
Altezza/altezza gita	Rear left seat	○	○	○	●	●	
Altezza/altezza gita	Rear right door	○	●	●	●	●	
Altezza/altezza gita	Rear right seat	○	○	○	●	●	
Altezza/altezza gita	Rear seat switch	○	○	○	●	●	
Altezza/altezza gita	Security (sil)	○	●	●	●	●	
Altezza/altezza gita	Sliding roof	○	○	○	●	●	
Altezza/altezza gita	Srs airbag(sil)	○	●	●	●	●	0006
Altezza/altezza gita	Srs airbag(sil2)	○	●	●	●	●	0006
Altezza/altezza gita	Steering pad switch	○	○	○	●	●	
Altezza/altezza gita	Tilt&telescopic	○	●	●	●	●	0026
Altezza/altezza gita	4WD(SIL)	○	●	●	●	●	
Altezza/altezza gita	D-seat sw	○	○	○	●	●	
Aqua	A/C(CAN)	○	●	●	●	●	
Aqua	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Aqua	D-door motor	○	●	●	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Aqua	Diagnostic recorder	○	●	●	●	●	
Aqua	Electric power steering	○	●	●	●	●	
Aqua	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Aqua	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Aqua	HV	○	●	●	●	●	0002 0006
Aqua	HI autoleveling	○	●	●	●	●	0042 0083 0056
Aqua	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Aqua	Meter (can)	○	●	●	●	●	
Aqua	Power source control	○	●	●	●	●	0041
Aqua	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Aqua	Security (can)	○	●	●	●	●	
Aqua	Srs airbag	○	●	●	●	●	0006
Aqua	Vehicle proximity notification system	○	●	●	●	●	
Aristo	4WD(SIL)	○	●	●	●	●	
Aristo	A/C(SIL)	○	●	●	●	●	
Aristo	ABS-VSC	○	●	●	●	●	
Aristo	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Aristo	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Aristo	AFS(SIL)	○	●	●	●	●	0043
Aristo	ARS	○	●	●	●	●	0006
Aristo	Air suspension-ahc-tems	○	●	●	●	●	
Aristo	Back door	○	●	●	●	●	
Aristo	Body	○	●	●	●	●	
Aristo	Body no.2	○	●	●	●	●	
Aristo	Body no.3	○	●	●	●	●	
Aristo	Clearance sonar	○	●	●	●	●	0046
Aristo	Combination switch	○	○	○	●	●	
Aristo	Cruise control	○	●	●	●	●	0003 0036
Aristo	D-seat sw	○	○	○	●	●	
Aristo	Driver door	○	●	●	●	●	
Aristo	Driver seat	○	○	○	●	●	
Aristo	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Aristo	Electric power steering (sil rack type)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Aristo	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Aristo	Gateway	○	●	●	●	●	0002 0019 0007 0020
Aristo	Immobilizer	○	●	●	●	●	
Aristo	Immobilizer (built-in engine)	○	●	●	●	●	
Aristo	Master switch	○	○	○	●	●	0016
Aristo	Meter	○	○	○	●	●	0172 0006 0174 0072
Aristo	Mirror	○	○	○	●	●	
Aristo	Mirror l	○	○	○	●	●	
Aristo	Mirror(left and right)	○	○	○	●	●	
Aristo	Night view	○	●	●	●	●	
Aristo	Passenger door	○	●	●	●	●	
Aristo	Passenger seat	○	○	○	●	●	
Aristo	Power source control	○	●	●	●	●	0041
Aristo	Rain sensor	○	○	○	●	●	
Aristo	Rear left door	○	●	●	●	●	
Aristo	Rear left seat	○	○	○	●	●	
Aristo	Rear right door	○	●	●	●	●	
Aristo	Rear right seat	○	○	○	●	●	
Aristo	Security (sil)	○	●	●	●	●	
Aristo	Sliding roof	○	○	○	●	●	
Aristo	Srs airbag(sil)	○	●	●	●	●	0006
Aristo	Srs airbag(sil2)	○	●	●	●	●	0006
Aristo	Stabilizer	○	●	●	●	●	
Aristo	Steering pad switch	○	○	○	●	●	
Aristo	Tilt&telescopic	○	●	●	●	●	0026
Aristo	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Aristo	VGRS	○	●	●	●	●	0005 0006
Aristo	Wiper	○	○	○	●	●	
Auris	4WD(CAN)	○	●	●	●	●	
Auris	A/C(CAN)	○	●	●	●	●	
Auris	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Auris	Accessory gateway	○	●	●	●	●	0002
Auris	D-door motor	○	●	●	●	●	0016
Auris	Electric power steering	○	●	●	●	●	
Auris	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Auris	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Auris	Hl autoleveling	○	●	●	●	●	0042 0083 0056

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Auris	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Auris	Meter (can)	○	●	●	●	●	
Auris	Sliding roof	○	●	●	●	●	
Auris	Srs airbag(sil2)	○	●	●	●	●	0006
Auris	AFS	○	●	●	●	●	
Auris	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Auris	Master switch	○	●	●	●	●	0016
Auris	P-door motor	○	●	●	●	●	0016
Auris	Power source control	○	●	●	●	●	0041
Auris	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Auris	Rl-door motor	○	●	●	●	●	0016
Auris	Rr-door motor	○	●	●	●	●	0016
Auris	Security (can)	○	●	●	●	●	
Auris	Srs airbag	○	●	●	●	●	0006
Auris	Starting control	○	●	●	●	●	
Auris	Stop & start	○	●	●	●	●	
Auris	Immobilizer	○	●	●	●	●	
Auris	4WD(SIL)	○	●	●	●	●	
Auris	A/C(SIL)	○	●	●	●	●	
Auris	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Auris	AFS(SIL)	○	●	●	●	●	0043
Auris	Air suspension-ahc-tems	○	●	●	●	●	
Auris	Back door	○	●	●	●	●	
Auris	Back guide monitor ipa	○	●	●	●	●	
Auris	Body no.2	○	●	●	●	●	
Auris	Clearance sonar	○	●	●	●	●	0046
Auris	D-seat sw	○	○	○	●	●	
Auris	Driver door	○	●	●	●	●	
Auris	Driver seat	○	○	○	●	●	
Auris	Electric power steering (can brush / brushless)	○	●	●	●	●	
Auris	Electric power steering (can rack type)	○	●	●	●	●	
Auris	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Auris	Electric power steering (sil rack type)	○	●	●	●	●	
Auris	Gateway	○	●	●	●	●	0002 0019 0007 0020
Auris	Meter(sil)	○	○	○	●	●	
Auris	Mirror	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Auris	Mirror l	○	○	○	●	●	
Auris	Mirror(left and right)	○	○	○	●	●	
Auris	Passenger door	○	●	●	●	●	
Auris	Passenger seat	○	○	○	●	●	
Auris	Rear left door	○	●	●	●	●	
Auris	Rear left seat	○	○	○	●	●	
Auris	Rear right door	○	●	●	●	●	
Auris	Rear right seat	○	○	○	●	●	
Auris	Security (sil)	○	●	●	●	●	
Auris	Srs airbag(sil)	○	●	●	●	●	0006
Auris	Steering pad switch	○	○	○	●	●	
Auris	Tilt&telescopic	○	●	●	●	●	0026
Auris	Immobilizer (built-in engine)	○	●	●	●	●	
Auris	Charging control	○	●	●	●	●	
Auris hv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Auris hv	AFS	○	●	●	●	●	
Auris hv	Air conditioner	○	●	●	●	●	0065
Auris hv	Clearance sonar	○	●	●	●	●	0046
Auris hv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Auris hv	Cruise control	○	●	●	●	●	0003 0036
Auris hv	D-door motor	○	●	●	●	●	0016
Auris hv	EMPS	○	●	●	●	●	0006 0025
Auris hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Auris hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Auris hv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Auris hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Auris hv	Master switch	○	●	●	●	●	0016
Auris hv	Navigation system	○	●	●	●	●	
Auris hv	P-door motor	○	●	●	●	●	0016
Auris hv	Pml gateway	○	●	●	●	●	0002

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Auris hv	Power source control	○	●	●	●	●	0041
Auris hv	Rl-door motor	○	●	●	●	●	0016
Auris hv	Rr-door motor	○	●	●	●	●	0016
Auris hv	Sliding roof	○	●	●	●	●	
Auris hv	Srs airbag	○	●	●	●	●	0006
Auris hv	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Auris hv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Auris hv	Transmission control	○	●	●	●	●	
Auris hv	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Auris hv	Pm2 gateway	○	●	●	●	●	0002
Auris hv	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Avalon	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Avalon	Air conditioner	○	●	●	●	●	0065
Avalon	Body	○	●	●	●	●	
Avalon	Body no.5	○	○	○	●	●	
Avalon	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Avalon	Combination switch	○	○	○	●	●	
Avalon	Cruise control	○	●	●	●	●	0003 0036
Avalon	Driver seat	○	○	○	●	●	
Avalon	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Avalon	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Avalon	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Avalon	Gateway	○	●	●	●	●	0002 0019 0007 0020
Avalon	Mirror l	○	○	○	●	●	
Avalon	Mirror r	○	○	○	●	●	
Avalon	Navigation system	○	●	●	●	●	
Avalon	Occupant detection	○	●	●	●	●	0032
Avalon	Power source control	○	●	●	●	●	0041
Avalon	Rain sensor	○	○	○	●	●	
Avalon	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Avalon	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Avalon	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Avalon	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Avalon	Clearance sonar	○	●	●	●	●	0046
Avalon	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Avalon	D-door motor	○	●	●	●	●	0016
Avalon	Driver seat	○	●	●	●	●	
Avalon	EMPS	○	●	●	●	●	0006 0025
Avalon	HI autoleveling	○	●	●	●	●	0042 0083 0056
Avalon	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Avalon	Master switch	○	●	●	●	●	0016
Avalon	Mirror l	○	●	●	●	●	
Avalon	Mirror r	○	●	●	●	●	
Avalon	P-door motor	○	●	●	●	●	0016
Avalon	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Avalon	Rl-door motor	○	●	●	●	●	0016
Avalon	Rr-door motor	○	●	●	●	●	0016
Avalon	Sliding roof	○	●	●	●	●	
Avalon	Starting control	○	●	●	●	●	
Avalon	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Avalon	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Avalon	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Avalon	Radar cruise	○	●	●	●	●	0003 0035 0036
Avalon	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Avalon	Laser cruise	○	●	●	●	●	0003 0035 0036
Avalon	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Avalon	Accessory gateway	○	●	●	●	●	0002
Avalon	Telematics	○	●	●	●	●	0048 0124

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Avalon hv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Avalon hv	Air conditioner	○	●	●	●	●	0065
Avalon hv	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Avalon hv	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Avalon hv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Avalon hv	D-door motor	○	●	●	●	●	0016
Avalon hv	Driver seat	○	●	●	●	●	
Avalon hv	EMPS	○	●	●	●	●	0006 0025
Avalon hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Avalon hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Avalon hv	HI autoleveling	○	●	●	●	●	0042 0083 0056
Avalon hv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Avalon hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Avalon hv	Master switch	○	●	●	●	●	0016
Avalon hv	Mirror l	○	●	●	●	●	
Avalon hv	Mirror r	○	●	●	●	●	
Avalon hv	Navigation system	○	●	●	●	●	
Avalon hv	Occupant detection	○	●	●	●	●	0032
Avalon hv	P-door motor	○	●	●	●	●	0016
Avalon hv	Pm1 gateway	○	●	●	●	●	0002
Avalon hv	Power source control	○	●	●	●	●	0041
Avalon hv	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Avalon hv	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Avalon hv	Radar cruise	○	●	●	●	●	0003 0035 0036
Avalon hv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Avalon hv	Rl-door motor	○	●	●	●	●	0016
Avalon hv	Rr-door motor	○	●	●	●	●	0016
Avalon hv	Sliding roof	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Avalon hv	Srs airbag	○	●	●	●	●	0006
Avalon hv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Avalon hv	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Avalon hv	Telematics	○	●	●	●	●	0048 0124
Avanza	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Avanza	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Avanza	EMPS	○	●	●	●	●	0006 0025
Avanza	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Avanza	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Avanza	Srs airbag	○	●	●	●	●	0006
Avensis	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Avensis	AFS	○	●	●	●	●	
Avensis	Air conditioner	○	●	●	●	●	0065
Avensis	Charging control	○	●	●	●	●	
Avensis	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Avensis	Cruise control	○	●	●	●	●	0003 0036
Avensis	D-door motor	○	●	●	●	●	0016
Avensis	Driver seat	○	●	●	●	●	
Avensis	EMPS	○	●	●	●	●	0006 0025
Avensis	Electric parking brake	○	●	●	●	●	0006 0016
Avensis	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Avensis	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Avensis	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Avensis	Master switch	○	●	●	●	●	0016
Avensis	Navigation system	○	●	●	●	●	
Avensis	P-door motor	○	●	●	●	●	0016
Avensis	Pm1 gateway	○	●	●	●	●	0002
Avensis	Pm2 gateway	○	●	●	●	●	0002
Avensis	Power source control	○	●	●	●	●	0041
Avensis	RI-door motor	○	●	●	●	●	0016
Avensis	Rr-door motor	○	●	●	●	●	0016
Avensis	Sliding roof	○	●	●	●	●	
Avensis	Srs airbag	○	●	●	●	●	0006
Avensis	Starting control	○	●	●	●	●	
Avensis	Tilt&telescopic	○	●	●	●	●	0026
Avensis	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Avensis	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Avensis	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Avensis	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Avensis	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Avensis	Lane keeping assist	○	●	●	●	●	0153
Avensis	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Avensis	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Avensis	Radar cruise	○	●	●	●	●	0003 0035 0036
Avensis	ABS-VSC	○	●	●	●	●	
Avensis	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Avensis	Body	○	●	●	●	●	
Avensis	ECT(SIL)	○	●	●	●	●	0001 0006
Avensis	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Avensis	Gateway	○	●	●	●	●	0002 0019 0007 0020
Avensis	Immobilizer	○	●	●	●	●	
Avensis	Mirror	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Avensis	Mirror l	○	○	○	●	●	
Avensis	Mirror(letf and right)	○	○	○	●	●	
Avensis	Rain sensor	○	○	○	●	●	
Avensis	Security (sil)	○	●	●	●	●	
Avensis	Srs airbag(sil)	○	●	●	●	●	0006
Avensis	Srs airbag(sil2)	○	●	●	●	●	0006
Avensis	A/C(CAN)	○	●	●	●	●	
Avensis	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Avensis	Electric power steering	○	●	●	●	●	
Avensis	Meter (can)	○	●	●	●	●	
Avensis	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Avensis	Tvss	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Avensis verso/picnic	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Avensis verso/picnic	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Avensis verso/picnic	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Avensis verso/picnic	Srs airbag	○	●	●	●	●	0006
Avensis verso/picnic	Cruise control	○	●	●	●	●	0003 0036
Aygo	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Aygo	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Aygo	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Aygo	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Aygo	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Aygo	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Aygo	Navigation system	○	●	●	●	●	
Aygo	Power source control	○	●	●	●	●	0041
Aygo	Srs airbag	○	●	●	●	●	0006
Aygo	Starting control	○	●	●	●	●	
Aygo	Stop and go	○	●	●	●	●	0032 0028 0033
Aygo	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
BB	4WD(SIL)	○	●	●	●	●	
BB	A/C(SIL)	○	●	●	●	●	
BB	ABS-VSC	○	●	●	●	●	
BB	ABS-VSC-TRC(SIL)	○	●	●	●	●	
BB	Air suspension-ahc-tems	○	●	●	●	●	
BB	Body	○	●	●	●	●	
BB	Electric power steering	○	●	●	●	●	
BB	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
BB	Gateway	○	●	●	●	●	0002 0019 0007 0020
BB	Immobilizer	○	●	●	●	●	
BB	Immobilizer (built-in engine)	○	●	●	●	●	
BB	Master switch	○	○	○	●	●	0016
BB	Meter	○	○	○	●	●	0172 0006 0174 0072
BB	Security (sil)	○	●	●	●	●	
BB	Sliding roof	○	○	○	●	●	
BB	Srs airbag(sil)	○	●	●	●	●	0006
BB	Steering pad switch	○	○	○	●	●	
BB	ABS-VSC-TRC(CAN)	○	●	●	●	●	
BB	AFS(SIL)	○	●	●	●	●	0043
BB	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
BB	Electric power steering (sil rack type)	○	●	●	●	●	
BB	Srs airbag(sil2)	○	●	●	●	●	0006
BB	A/B	○	●	●	●	●	0023 0006 0174

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
BB	A/T	○	●	●	●	●	0016
BB	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
BB	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
BB	EPS	○	●	●	●	●	0023 0006 0174 0025
BB	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
BB	VSC	○	●	●	●	●	0049 0107 0006 0174 0183
Belta	A/C(CAN)	○	●	●	●	●	
Belta	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Belta	Accessory gateway	○	●	●	●	●	0002
Belta	Charging control	○	●	●	●	●	
Belta	D-door motor	○	●	●	●	●	0016
Belta	Electric power steering	○	●	●	●	●	
Belta	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Belta	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Belta	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Belta	Meter (can)	○	●	●	●	●	
Belta	Security (can)	○	●	●	●	●	
Belta	Srs airbag(sil2)	○	●	●	●	●	0006
Belta	4WD(CAN)	○	●	●	●	●	
Belta	4WD(SIL)	○	●	●	●	●	
Belta	A/C(SIL)	○	●	●	●	●	
Belta	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Belta	AFS(SIL)	○	●	●	●	●	0043
Belta	Air suspension-ahc-tems	○	●	●	●	●	
Belta	Electric power steering (can brush / brushless)	○	●	●	●	●	
Belta	Electric power steering (can rack type)	○	●	●	●	●	
Belta	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Belta	Electric power steering (sil rack type)	○	●	●	●	●	
Belta	Gateway	○	●	●	●	●	0002 0019 0007 0020
Belta	Immobilizer	○	●	●	●	●	
Belta	Immobilizer (built-in engine)	○	●	●	●	●	
Belta	Master switch	○	●	●	●	●	0016
Belta	Meter(sil)	○	○	○	●	●	
Belta	P-door motor	○	●	●	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Belta	Rl-door motor	○	●	●	●	●	0016
Belta	Rr-door motor	○	●	●	●	●	0016
Belta	Security (sil)	○	●	●	●	●	
Belta	Sliding roof	○	●	●	●	●	
Belta	Srs airbag	○	●	●	●	●	0006
Belta	Srs airbag(sil)	○	●	●	●	●	0006
Belta	Steering pad switch	○	○	○	●	●	
Blade	4WD(CAN)	○	●	●	●	●	
Blade	A/C(CAN)	○	●	●	●	●	
Blade	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Blade	Accessory gateway	○	●	●	●	●	0002
Blade	D-door motor	○	●	●	●	●	0016
Blade	Electric power steering	○	●	●	●	●	
Blade	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Blade	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Blade	Gateway	○	●	●	●	●	0002 0019 0007 0020
Blade	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Blade	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Blade	Master switch	○	●	●	●	●	0016
Blade	Meter (can)	○	●	●	●	●	
Blade	Navigation system	○	●	●	●	●	
Blade	P-door motor	○	●	●	●	●	0016
Blade	Rl-door motor	○	●	●	●	●	0016
Blade	Rr-door motor	○	●	●	●	●	0016
Blade	Security (can)	○	●	●	●	●	
Blade	Srs airbag	○	●	●	●	●	0006
Blade	Back guide monitor ipa	○	●	●	●	●	
Blade	Srs airbag(sil2)	○	●	●	●	●	0006
Blade	4WD(SIL)	○	●	●	●	●	
Blade	A/C(SIL)	○	●	●	●	●	
Blade	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Blade	AFS	○	●	●	●	●	
Blade	AFS(SIL)	○	●	●	●	●	0043
Blade	Air suspension-ahc-tems	○	●	●	●	●	
Blade	Back door	○	●	●	●	●	
Blade	Body no.2	○	●	●	●	●	
Blade	Body no.3	○	●	●	●	●	
Blade	Body no.4	○	●	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Blade	Body no.5	○	○	○	●	●	
Blade	Clearance sonar	○	●	●	●	●	0046
Blade	Combination switch	○	○	○	●	●	
Blade	D-seat sw	○	○	○	●	●	
Blade	Driver door	○	●	●	●	●	
Blade	Driver seat	○	○	○	●	●	
Blade	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Blade	Electric power steering (can brush / brushless)	○	●	●	●	●	
Blade	Electric power steering (can rack type)	○	●	●	●	●	
Blade	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Blade	Electric power steering (sil rack type)	○	●	●	●	●	
Blade	Immobilizer	○	●	●	●	●	
Blade	Lane keeping assist	○	●	●	●	●	0153
Blade	Meter(sil)	○	○	○	●	●	
Blade	Mirror	○	○	○	●	●	
Blade	Mirror l	○	○	○	●	●	
Blade	Mirror(left and right)	○	○	○	●	●	
Blade	Night view	○	●	●	●	●	
Blade	Passenger door	○	●	●	●	●	
Blade	Passenger seat	○	○	○	●	●	
Blade	Power source control	○	●	●	●	●	0041
Blade	Rain sensor	○	○	○	●	●	
Blade	Rear left door	○	●	●	●	●	
Blade	Rear left seat	○	○	○	●	●	
Blade	Rear right door	○	●	●	●	●	
Blade	Rear right seat	○	○	○	●	●	
Blade	Remote security	○	●	●	●	●	
Blade	Security (sil)	○	●	●	●	●	
Blade	Sliding roof	○	●	●	●	●	
Blade	Srs airbag(sil)	○	●	●	●	●	0006
Blade	Stabilizer	○	●	●	●	●	
Blade	Steering pad switch	○	○	○	●	●	
Blade	Tilt&telescopic	○	●	●	●	●	0026
Blade	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Blade	VGRS	○	●	●	●	●	0005 0006
Blade	Wiper	○	○	○	●	●	
Blade	Pre-crash 1 (can)	○	●	●	●	●	
Blade	Radar cruise	○	●	●	●	●	0003 0035 0036
Caldina	4WD(SIL)	○	●	●	●	●	
Caldina	A/C(SIL)	○	●	●	●	●	
Caldina	ABS-VSC	○	●	●	●	●	
Caldina	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Caldina	Air suspension-ahc-tems	○	●	●	●	●	
Caldina	Back door	○	●	●	●	●	
Caldina	Body	○	●	●	●	●	
Caldina	Body no.2	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Caldina	Clearance sonar	○	●	●	●	●	0046
Caldina	D-seat sw	○	○	○	●	●	
Caldina	Driver door	○	●	●	●	●	
Caldina	Driver seat	○	○	○	●	●	
Caldina	Electric power steering	○	●	●	●	●	
Caldina	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Caldina	Gateway	○	●	●	●	●	0002 0019 0007 0020
Caldina	Immobilizer	○	●	●	●	●	
Caldina	Immobilizer (built-in engine)	○	●	●	●	●	
Caldina	Master switch	○	○	○	●	●	0016
Caldina	Meter	○	○	○	●	●	0172 0006 0174 0072
Caldina	Mirror	○	○	○	●	●	
Caldina	Mirror l	○	○	○	●	●	
Caldina	Mirror(left and right)	○	○	○	●	●	
Caldina	Passenger door	○	●	●	●	●	
Caldina	Passenger seat	○	○	○	●	●	
Caldina	Rear left door	○	●	●	●	●	
Caldina	Rear left seat	○	○	○	●	●	
Caldina	Rear right door	○	●	●	●	●	
Caldina	Rear right seat	○	○	○	●	●	
Caldina	Security (sil)	○	●	●	●	●	
Caldina	Sliding roof	○	○	○	●	●	
Caldina	Srs airbag(sil)	○	●	●	●	●	0006
Caldina	Steering pad switch	○	○	○	●	●	
Caldina	Tilt&telescopic	○	●	●	●	●	0026
Caldina	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Caldina	AFS(SIL)	○	●	●	●	●	0043
Caldina	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Caldina	Electric power steering (sil rack type)	○	●	●	●	●	
Caldina	Power source control	○	●	●	●	●	0041
Caldina	Srs airbag(sil2)	○	●	●	●	●	0006
Cami	A/B	○	●	●	●	●	0023 0006 0174
Cami	A/T	○	●	●	●	●	0016
Cami	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Cami	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Cami	EPS	○	●	●	●	●	0023 0006 0174 0025
Camry	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Camry	Air conditioner	○	●	●	●	●	0065
Camry	Clearance sonar	○	●	●	●	●	0046
Camry	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Camry	Cruise control	○	●	●	●	●	0003 0036

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Camry	D-door motor	○	●	●	●	●	0016
Camry	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Camry	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Camry	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Camry	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Camry	Master switch	○	●	●	●	●	0016
Camry	Sliding roof	○	●	●	●	●	
Camry	Srs airbag	○	●	●	●	●	0006
Camry	Navigation system	○	●	●	●	●	
Camry	P-door motor	○	●	●	●	●	0016
Camry	Rl-door motor	○	●	●	●	●	0016
Camry	Rr-door motor	○	●	●	●	●	0016
Camry	AFS	○	●	●	●	●	
Camry	Driver seat	○	●	●	●	●	
Camry	Gateway	○	●	●	●	●	0002 0019 0007 0020
Camry	Mirror	○	●	●	●	●	
Camry	EMPS	○	●	●	●	●	0006 0025
Camry	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Camry	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Camry	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Camry	Power source control	○	●	●	●	●	0041
Camry	Starting control	○	●	●	●	●	
Camry	Occupant detection	○	●	●	●	●	0032
Camry	Telematics	○	●	●	●	●	0048 0124
Camry	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Camry	Tilt&telescopic	○	●	●	●	●	0026
Camry	E-ACM	○	●	●	●	●	
Camry	Mirror l	○	●	●	●	●	
Camry	Mirror r	○	●	●	●	●	
Camry	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Camry	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Camry	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Camry	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Camry	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Camry	Radar cruise	○	●	●	●	●	0003 0035 0036
Camry	A/C(CAN)	○	●	●	●	●	
Camry	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Camry	Accessory gateway	○	●	●	●	●	0002
Camry	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Camry	Meter (can)	○	●	●	●	●	
Camry	Srs airbag(sil2)	○	●	●	●	●	0006
Camry	4WD(SIL)	○	●	●	●	●	
Camry	A/C(SIL)	○	●	●	●	●	
Camry	ABS-VSC	○	●	●	●	●	
Camry	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Camry	AFS(SIL)	○	●	●	●	●	0043
Camry	ARS	○	●	●	●	●	0006
Camry	Air suspension-ahc-tems	○	●	●	●	●	
Camry	Back door	○	●	●	●	●	
Camry	Body	○	●	●	●	●	
Camry	Body no.2	○	●	●	●	●	
Camry	Body no.3	○	●	●	●	●	
Camry	Body no.4	○	●	○	●	●	
Camry	Body no.5	○	○	○	●	●	
Camry	Combination switch	○	○	○	●	●	
Camry	D-seat sw	○	○	○	●	●	
Camry	Driver door	○	●	●	●	●	
Camry	Driver seat	○	○	○	●	●	
Camry	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Camry	Electric power steering (sil rack type)	○	●	●	●	●	
Camry	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Camry	Immobilizer	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Camry	Immobilizer (built-in engine)	○	●	●	●	●	
Camry	Master switch	○	○	○	●	●	0016
Camry	Meter	○	○	○	●	●	0172 0006 0174 0072
Camry	Mirror	○	○	○	●	●	
Camry	Mirror l	○	○	○	●	●	
Camry	Mirror(left and right)	○	○	○	●	●	
Camry	Night view	○	●	●	●	●	
Camry	Passenger door	○	●	●	●	●	
Camry	Passenger seat	○	○	○	●	●	
Camry	Rain sensor	○	○	○	●	●	
Camry	Rear left door	○	●	●	●	●	
Camry	Rear left seat	○	○	○	●	●	
Camry	Rear right door	○	●	●	●	●	
Camry	Rear right seat	○	○	○	●	●	
Camry	Security (sil)	○	●	●	●	●	
Camry	Sliding roof	○	○	○	●	●	
Camry	Srs airbag(sil)	○	●	●	●	●	0006
Camry	Stabilizer	○	●	●	●	●	
Camry	Steering pad switch	○	○	○	●	●	
Camry	VGRS	○	●	●	●	●	0005 0006
Camry	Wiper	○	○	○	●	●	
Camry	Electric power steering	○	●	●	●	●	
Camry	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Camry hv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Camry hv	AFS	○	●	●	●	●	
Camry hv	Air conditioner	○	●	●	●	●	0065
Camry hv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Camry hv	Cruise control	○	●	●	●	●	0003 0036
Camry hv	D-door motor	○	●	●	●	●	0016
Camry hv	Driver seat	○	●	●	●	●	
Camry hv	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Camry hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Camry hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Camry hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Camry hv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Camry hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Camry hv	Mirror	○	●	●	●	●	
Camry hv	Navigation system	○	●	●	●	●	
Camry hv	Sliding roof	○	●	●	●	●	
Camry hv	Srs airbag	○	●	●	●	●	0006
Camry hv	Clearance sonar	○	●	●	●	●	0046
Camry hv	HI autoleveling	○	●	●	●	●	0042 0083 0056
Camry hv	Master switch	○	●	●	●	●	0016
Camry hv	P-door motor	○	●	●	●	●	0016
Camry hv	Pm1 gateway	○	●	●	●	●	0002
Camry hv	Power source control	○	●	●	●	●	0041
Camry hv	Rl-door motor	○	●	●	●	●	0016
Camry hv	Rr-door motor	○	●	●	●	●	0016
Camry hv	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Camry hv	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Camry hv	Mirror l	○	●	●	●	●	
Camry hv	Mirror r	○	●	●	●	●	
Camry hv	Tilt&telescopic	○	●	●	●	●	0026
Camry hv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Camry hv	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Camry hv	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Camry hv	Radar cruise	○	●	●	●	●	0003 0035 0036
Camry hv	Occupant detection	○	●	●	●	●	0032
Camry hv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Camry hv	Vehicle proximity notification system	○	●	●	●	●	
Camry hv	A/C(CAN)	○	●	●	●	●	
Camry hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Camry hv	Electric power steering	○	●	●	●	●	
Camry hv	HV	○	●	●	●	●	0002 0006
Camry hv	Meter (can)	○	●	●	●	●	
Camry hv	Accessory gateway	○	●	●	●	●	0002
Camry hv	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Camry hv	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Camry hv	Telematics	○	●	●	●	●	0048 0124
Camry/aurion	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Camry/aurion	AFS	○	●	●	●	●	
Camry/aurion	Air conditioner	○	●	●	●	●	0065
Camry/aurion	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Camry/aurion	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Camry/aurion	Clearance sonar	○	●	●	●	●	0046
Camry/aurion	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Camry/aurion	Cruise control	○	●	●	●	●	0003 0036
Camry/aurion	D-door motor	○	●	●	●	●	0016
Camry/aurion	Driver seat	○	●	●	●	●	
Camry/aurion	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Camry/aurion	EMPS	○	●	●	●	●	0006 0025
Camry/aurion	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Camry/aurion	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Camry/aurion	Gateway	○	●	●	●	●	0002 0019 0007 0020
Camry/aurion	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Camry/aurion	Mirror l	○	●	●	●	●	
Camry/aurion	Mirror r	○	●	●	●	●	
Camry/aurion	Navigation system	○	●	●	●	●	
Camry/aurion	Power source control	○	●	●	●	●	0041
Camry/aurion	Sliding roof	○	●	●	●	●	
Camry/aurion	Srs airbag	○	●	●	●	●	0006
Camry/aurion	Starting control	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Camry/aurion	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Camry/aurion	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Camry/aurion	Mirror	○	●	●	●	●	
Camry/aurion	E-ACM	○	●	●	●	●	
Camry/aurion	Master switch	○	●	●	●	●	0016
Camry/aurion	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Camry/aurion	Radar cruise	○	●	●	●	●	0003 0035 0036
Camry/aurion	Tilt&telescopic	○	●	●	●	●	0026
Carina	4WD(SIL)	○	●	●	●	●	
Carina	A/C(SIL)	○	●	●	●	●	
Carina	ABS-VSC	○	●	●	●	●	
Carina	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Carina	Air suspension-ahc-tems	○	●	●	●	●	
Carina	Back door	○	●	●	●	●	
Carina	Body	○	●	●	●	●	
Carina	Body no.2	○	●	●	●	●	
Carina	Clearance sonar	○	●	●	●	●	0046
Carina	D-seat sw	○	○	○	●	●	
Carina	Driver door	○	●	●	●	●	
Carina	Driver seat	○	○	○	●	●	
Carina	Electric power steering	○	●	●	●	●	
Carina	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Carina	Gateway	○	●	●	●	●	0002 0019 0007 0020
Carina	Immobilizer	○	●	●	●	●	
Carina	Immobilizer (built-in engine)	○	●	●	●	●	
Carina	Master switch	○	○	○	●	●	0016
Carina	Meter	○	○	○	●	●	0172 0006 0174 0072
Carina	Mirror	○	○	○	●	●	
Carina	Mirror l	○	○	○	●	●	
Carina	Mirror(left and right)	○	○	○	●	●	
Carina	Passenger door	○	●	●	●	●	
Carina	Passenger seat	○	○	○	●	●	
Carina	Rear left door	○	●	●	●	●	
Carina	Rear left seat	○	○	○	●	●	
Carina	Rear right door	○	●	●	●	●	
Carina	Rear right seat	○	○	○	●	●	
Carina	Security (sil)	○	●	●	●	●	
Carina	Sliding roof	○	○	○	●	●	
Carina	Srs airbag(sil)	○	●	●	●	●	0006
Carina	Steering pad switch	○	○	○	●	●	
Carina	Tilt&telescopic	○	●	●	●	●	0026

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Celica	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Celica	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Celica	Srs airbag	○	●	●	●	●	0006
Celica	Cruise control	○	●	●	●	●	0003 0036
Celica	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Celica/curren	4WD(SIL)	○	●	●	●	●	
Celica/curren	A/C(SIL)	○	●	●	●	●	
Celica/curren	ABS-VSC	○	●	●	●	●	
Celica/curren	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Celica/curren	Air suspension-ahc-tems	○	●	●	●	●	
Celica/curren	Back door	○	●	●	●	●	
Celica/curren	Body	○	●	●	●	●	
Celica/curren	Body no.2	○	●	●	●	●	
Celica/curren	Clearance sonar	○	●	●	●	●	0046
Celica/curren	D-seat sw	○	○	○	●	●	
Celica/curren	Driver door	○	●	●	●	●	
Celica/curren	Driver seat	○	○	○	●	●	
Celica/curren	Electric power steering	○	●	●	●	●	
Celica/curren	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Celica/curren	Gateway	○	●	●	●	●	0002 0019 0007 0020
Celica/curren	Immobilizer	○	●	●	●	●	
Celica/curren	Immobilizer (built-in engine)	○	●	●	●	●	
Celica/curren	Master switch	○	○	○	●	●	0016
Celica/curren	Meter	○	○	○	●	●	0172 0006 0174 0072
Celica/curren	Mirror	○	○	○	●	●	
Celica/curren	Mirror l	○	○	○	●	●	
Celica/curren	Mirror(letf and right)	○	○	○	●	●	
Celica/curren	Passenger door	○	●	●	●	●	
Celica/curren	Passenger seat	○	○	○	●	●	
Celica/curren	Rear left door	○	●	●	●	●	
Celica/curren	Rear left seat	○	○	○	●	●	
Celica/curren	Rear right door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Celica/curren	Rear right seat	○	○	○	●	●	
Celica/curren	Security (sil)	○	●	●	●	●	
Celica/curren	Sliding roof	○	○	○	●	●	
Celica/curren	Srs airbag(sil)	○	●	●	●	●	0006
Celica/curren	Steering pad switch	○	○	○	●	●	
Celica/curren	Tilt&telescopic	○	●	●	●	●	0026
Celica/curren	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Celica/curren	AFS(SIL)	○	●	●	●	●	0043
Celica/curren	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Celica/curren	Electric power steering (sil rack type)	○	●	●	●	●	
Celica/curren	Power source control	○	●	●	●	●	0041
Celica/curren	Srs airbag(sil2)	○	●	●	●	●	0006
Celica/curren	ECT(SIL)	○	●	●	●	●	0001 0006
Celica/curren	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Celica/curren	Master switch	○	●	●	●	●	0016
Celica/curren	Remote security	○	●	●	●	●	
Celsior	4WD(SIL)	○	●	●	●	●	
Celsior	A/C(SIL)	○	●	●	●	●	
Celsior	ABS-VSC	○	●	●	●	●	
Celsior	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Celsior	ARS	○	●	●	●	●	0006
Celsior	Air suspension-ahc-tems	○	●	●	●	●	
Celsior	Body	○	●	●	●	●	
Celsior	Body no.2	○	●	●	●	●	
Celsior	D-seat sw	○	○	○	●	●	
Celsior	Driver door	○	●	●	●	●	
Celsior	Driver seat	○	○	○	●	●	
Celsior	ECT(SIL)	○	●	●	●	●	0001 0006
Celsior	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Celsior	Gateway	○	●	●	●	●	0002 0019 0007 0020
Celsior	Immobilizer (built-in engine)	○	●	●	●	●	
Celsior	Master switch	○	○	○	●	●	0016
Celsior	Mirror	○	○	○	●	●	
Celsior	Mirror l	○	○	○	●	●	
Celsior	Mirror(lef and right)	○	○	○	●	●	
Celsior	Passenger door	○	●	●	●	●	
Celsior	Passenger seat	○	○	○	●	●	
Celsior	Rear left door	○	●	●	●	●	
Celsior	Rear left seat	○	○	○	●	●	
Celsior	Rear right door	○	●	●	●	●	
Celsior	Rear right seat	○	○	○	●	●	
Celsior	Rear seat switch	○	○	○	●	●	
Celsior	Security (sil)	○	●	●	●	●	
Celsior	Sliding roof	○	○	○	●	●	
Celsior	Srs airbag(sil)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Celsior	Steering pad switch	○	○	○	●	●	
Celsior	Tilt&telescopic	○	●	●	●	●	0026
Celsior	A/C(CAN)	○	●	●	●	●	
Celsior	AFS(SIL)	○	●	●	●	●	0043
Celsior	Back door	○	●	●	●	●	
Celsior	Back guide monitor ipa	○	●	●	●	●	
Celsior	Body no.3	○	●	●	●	●	
Celsior	Body no.4	○	●	○	●	●	
Celsior	Body no.5	○	○	○	●	●	
Celsior	Clearance sonar	○	●	●	●	●	0046
Celsior	Combination switch	○	○	○	●	●	
Celsior	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Celsior	Electric power steering (sil rack type)	○	●	●	●	●	
Celsior	Immobilizer	○	●	●	●	●	
Celsior	Lane keeping assist	○	●	●	●	●	0153
Celsior	Meter	○	○	○	●	●	0172 0006 0174 0072
Celsior	Power source control	○	●	●	●	●	0041
Celsior	Radar cruise	○	●	●	●	●	0003 0035 0036
Celsior	Rain sensor	○	○	○	●	●	
Celsior	Srs airbag(sil2)	○	●	●	●	●	0006
Celsior	VGRS	○	●	●	●	●	0005 0006
Celsior	Wiper	○	○	○	●	●	
Celsior	Cruise control	○	●	●	●	●	0003 0036
Celsior	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Celsior	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Celsior	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Century	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Century	Air suspension-ahc-tems	○	●	●	●	●	
Century	Body	○	●	●	●	●	
Century	Cruise control	○	●	●	●	●	0003 0036
Century	Driver door	○	○	○	●	●	
Century	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Century	Engine 2	○	●	●	●	●	
Century	Passenger door	○	○	○	●	●	
Century	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Century	Rear left door	○	○	○	●	●	
Century	Rear right door	○	○	○	●	●	
Century	Srs airbag(sil2)	○	●	●	●	●	0006
Century	Engine (rh bank)	○	●	●	●	●	0006 0016
Century	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Century	4WD(SIL)	○	●	●	●	●	
Century	A/C(SIL)	○	●	●	●	●	
Century	ABS-VSC	○	●	●	●	●	
Century	ARS	○	●	●	●	●	0006
Century	Body no.2	○	●	●	●	●	
Century	Body no.3	○	●	●	●	●	
Century	Body no.4	○	●	○	●	●	
Century	Body no.5	○	○	○	●	●	
Century	Clearance sonar	○	●	●	●	●	0046
Century	Combination switch	○	○	○	●	●	
Century	Cruise control 2	○	○	○	●	●	
Century	D-seat sw	○	○	○	●	●	
Century	Driver seat	○	○	○	●	●	
Century	ECT(SIL)	○	●	●	●	●	0001 0006
Century	Electric power steering	○	●	●	●	●	
Century	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Century	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Century	Gateway	○	●	●	●	●	0002 0019 0007 0020
Century	Immobilizer	○	●	●	●	●	
Century	Master switch	○	○	○	●	●	0016
Century	Meter	○	○	○	●	●	0172 0006 0174 0072
Century	Mirror	○	○	○	●	●	
Century	Mirror l	○	○	○	●	●	
Century	Mirror(letf and right)	○	○	○	●	●	
Century	Passenger seat	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Century	Rear left seat	○	○	○	●	●	
Century	Rear right seat	○	○	○	●	●	
Century	Rear seat switch	○	○	○	●	●	
Century	Security (sil)	○	●	●	●	●	
Century	Sliding roof	○	○	○	●	●	
Century	Srs airbag(sil)	○	●	●	●	●	0006
Century	Steering pad switch	○	○	○	●	●	
Century	Tilt&telescopic	○	●	●	●	●	0026
Century	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Century	Engine(lh bank)	○	●	●	●	●	0006 0016 0053 0030 0057
Century	Engine(rh bank)	○	●	●	●	●	0006 0016
Century	Srs airbag	○	●	●	●	●	0006
Coaster	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Coaster	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Coaster	4WD(SIL)	○	●	●	●	●	
Coaster	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Coaster	ECT(SIL)	○	●	●	●	●	0001 0006
Coaster	Electric power steering	○	●	●	●	●	
Coaster	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Coaster	Immobilizer	○	●	●	●	●	
Coaster	Immobilizer (built-in engine)	○	●	●	●	●	
Coaster	Meter	○	○	○	●	●	0172 0006 0174 0072
Coaster	Srs airbag(sil)	○	●	●	●	●	0006
Coaster	Srs airbag(sil2)	○	●	●	●	●	0006
Coaster	VGRS	○	●	●	●	●	0005 0006
Coaster	ABS-VSC	○	●	●	●	●	
Coaster	ARS	○	●	●	●	●	0006
Coaster	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Coaster	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Coaster	Electric power steering (sil rack type)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Coaster	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Condor	Srs airbag	○	●	●	●	●	0006
Corolla	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Corolla	Air conditioner	○	●	●	●	●	0065
Corolla	Cruise control	○	●	●	●	●	0003 0036
Corolla	D-door motor	○	●	●	●	●	0016
Corolla	EMPS	○	●	●	●	●	0006 0025
Corolla	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Corolla	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Corolla	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Corolla	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Corolla	Sliding roof	○	●	●	●	●	
Corolla	Srs airbag	○	●	●	●	●	0006
Corolla	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Corolla	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Corolla	Accessory gateway	○	●	●	●	●	0002
Corolla	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Corolla	Charging control	○	●	●	●	●	
Corolla	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Corolla	Power source control	○	●	●	●	●	0041
Corolla	Starting control	○	●	●	●	●	
Corolla	Clearance sonar	○	●	●	●	●	0046

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla	Navigation system	○	●	●	●	●	
Corolla	Stop and go	○	●	●	●	●	0032 0028 0033
Corolla	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Corolla	Master switch	○	●	●	●	●	0016
Corolla	P-door motor	○	●	●	●	●	0016
Corolla	Rl-door motor	○	●	●	●	●	0016
Corolla	Rr-door motor	○	●	●	●	●	0016
Corolla	Occupant detection	○	●	●	●	●	0032
Corolla	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Corolla	Parking assist monitor system	○	●	●	●	●	
Corolla	Telematics	○	●	●	●	●	0048 0124
Corolla	Gateway	○	●	●	●	●	0002 0019 0007 0020
Corolla	4WD(SIL)	○	●	●	●	●	
Corolla	A/C(SIL)	○	●	●	●	●	
Corolla	ABS-VSC	○	●	●	●	●	
Corolla	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Corolla	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Corolla	AFS(SIL)	○	●	●	●	●	0043
Corolla	Air suspension-ahc-tems	○	●	●	●	●	
Corolla	Back door	○	●	●	●	●	
Corolla	Body	○	●	●	●	●	
Corolla	Body no.2	○	●	●	●	●	
Corolla	D-seat sw	○	○	○	●	●	
Corolla	Driver door	○	●	●	●	●	
Corolla	Driver seat	○	○	○	●	●	
Corolla	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Corolla	Electric power steering (sil rack type)	○	●	●	●	●	
Corolla	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Corolla	Immobilizer	○	●	●	●	●	
Corolla	Immobilizer (built-in engine)	○	●	●	●	●	
Corolla	Master switch	○	○	○	●	●	0016
Corolla	Meter	○	○	○	●	●	0172 0006 0174 0072
Corolla	Mirror	○	○	○	●	●	
Corolla	Mirror l	○	○	○	●	●	
Corolla	Mirror(letf and right)	○	○	○	●	●	
Corolla	Passenger door	○	●	●	●	●	
Corolla	Passenger seat	○	○	○	●	●	
Corolla	Rear left door	○	●	●	●	●	
Corolla	Rear left seat	○	○	○	●	●	
Corolla	Rear right door	○	●	●	●	●	
Corolla	Rear right seat	○	○	○	●	●	
Corolla	Security (sil)	○	●	●	●	●	
Corolla	Sliding roof	○	○	○	●	●	
Corolla	Srs airbag(sil)	○	●	●	●	●	0006
Corolla	Srs airbag(sil2)	○	●	●	●	●	0006
Corolla	Steering pad switch	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla	Tilt&telescopic	○	●	●	●	●	0026
Corolla	Electric power steering	○	●	●	●	●	
Corolla	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Corolla axio	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Corolla axio	AFS	○	●	●	●	●	
Corolla axio	Air conditioner	○	●	●	●	●	0065
Corolla axio	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Corolla axio	D-door motor	○	●	●	●	●	0016
Corolla axio	EMPS	○	●	●	●	●	0006 0025
Corolla axio	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Corolla axio	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Corolla axio	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Corolla axio	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Corolla axio	Master switch	○	●	●	●	●	0016
Corolla axio	P-door motor	○	●	●	●	●	0016
Corolla axio	Power source control	○	●	●	●	●	0041
Corolla axio	Rl-door motor	○	●	●	●	●	0016
Corolla axio	Rr-door motor	○	●	●	●	●	0016
Corolla axio	Srs airbag	○	●	●	●	●	0006
Corolla axio	Starting control	○	●	●	●	●	
Corolla axio	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Corolla axio hv/fielder hv	A/C(CAN)	○	●	●	●	●	
Corolla axio hv/fielder hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Corolla axio hv/fielder hv	AFS	○	●	●	●	●	
Corolla axio hv/fielder hv	D-door motor	○	●	●	●	●	0016
Corolla axio hv/fielder hv	Electric power steering	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla axio hv/fielder hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Corolla axio hv/fielder hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Corolla axio hv/fielder hv	HV	○	●	●	●	●	0002 0006
Corolla axio hv/fielder hv	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Corolla axio hv/fielder hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Corolla axio hv/fielder hv	Master switch	○	●	●	●	●	0016
Corolla axio hv/fielder hv	Meter (can)	○	●	●	●	●	
Corolla axio hv/fielder hv	P-door motor	○	●	●	●	●	0016
Corolla axio hv/fielder hv	Power source control	○	●	●	●	●	0041
Corolla axio hv/fielder hv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Corolla axio hv/fielder hv	Rl-door motor	○	●	●	●	●	0016
Corolla axio hv/fielder hv	Rr-door motor	○	●	●	●	●	0016
Corolla axio hv/fielder hv	Srs airbag	○	●	●	●	●	0006
Corolla axio hv/fielder hv	Vehicle proximity notification system	○	●	●	●	●	
Corolla axio hv/fielder hv	Security (can)	○	●	●	●	●	
Corolla axio/fielder	4WD(SIL)	○	●	●	●	●	
Corolla axio/fielder	A/C(SIL)	○	●	●	●	●	
Corolla axio/fielder	ABS-VSC	○	●	●	●	●	
Corolla axio/fielder	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Corolla axio/fielder	Air suspension-ahc-tems	○	●	●	●	●	
Corolla axio/fielder	Back door	○	●	●	●	●	
Corolla axio/fielder	Body	○	●	●	●	●	
Corolla axio/fielder	Body no.2	○	●	●	●	●	
Corolla axio/fielder	Clearance sonar	○	●	●	●	●	0046
Corolla axio/fielder	D-seat sw	○	○	○	●	●	
Corolla axio/fielder	Driver door	○	●	●	●	●	
Corolla axio/fielder	Driver seat	○	○	○	●	●	
Corolla axio/fielder	Electric power steering	○	●	●	●	●	
Corolla axio/fielder	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Corolla axio/fielder	Gateway	○	●	●	●	●	0002 0019 0007 0020
Corolla axio/fielder	Immobilizer	○	●	●	●	●	
Corolla axio/fielder	Immobilizer (built-in engine)	○	●	●	●	●	
Corolla axio/fielder	Master switch	○	○	○	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla axio/fielder	Meter	○	○	○	●	●	0172 0006 0174 0072
Corolla axio/fielder	Mirror	○	○	○	●	●	
Corolla axio/fielder	Mirror l	○	○	○	●	●	
Corolla axio/fielder	Mirror(left and right)	○	○	○	●	●	
Corolla axio/fielder	Passenger door	○	●	●	●	●	
Corolla axio/fielder	Passenger seat	○	○	○	●	●	
Corolla axio/fielder	Rear left door	○	●	●	●	●	
Corolla axio/fielder	Rear left seat	○	○	○	●	●	
Corolla axio/fielder	Rear right door	○	●	●	●	●	
Corolla axio/fielder	Rear right seat	○	○	○	●	●	
Corolla axio/fielder	Security (sil)	○	●	●	●	●	
Corolla axio/fielder	Sliding roof	○	○	○	●	●	
Corolla axio/fielder	Srs airbag(sil)	○	●	●	●	●	0006
Corolla axio/fielder	Steering pad switch	○	○	○	●	●	
Corolla axio/fielder	Tilt&telescopic	○	●	●	●	●	0026
Corolla axio/fielder	AFS(SIL)	○	●	●	●	●	0043
Corolla axio/fielder	Power source control	○	●	●	●	●	0041
Corolla axio/fielder	Srs airbag(sil2)	○	●	●	●	●	0006
Corolla axio/fielder	A/C(CAN)	○	●	●	●	●	
Corolla axio/fielder	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Corolla axio/fielder	AFS	○	●	●	●	●	
Corolla axio/fielder	D-door motor	○	●	●	●	●	0016
Corolla axio/fielder	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Corolla axio/fielder	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Corolla axio/fielder	HI autoleveling	○	●	●	●	●	0042 0083 0056
Corolla axio/fielder	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Corolla axio/fielder	Master switch	○	●	●	●	●	0016
Corolla axio/fielder	Meter (can)	○	●	●	●	●	
Corolla axio/fielder	P-door motor	○	●	●	●	●	0016
Corolla axio/fielder	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Corolla axio/fielder	RI-door motor	○	●	●	●	●	0016
Corolla axio/fielder	Rr-door motor	○	●	●	●	●	0016
Corolla axio/fielder	Srs airbag	○	●	●	●	●	0006
Corolla axio/fielder	Starting control	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla axio/fielder	Security (can)	○	●	●	●	●	
Corolla axio/fielder	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Corolla axio/fielder	Electric power steering (sil rack type)	○	●	●	●	●	
Corolla axio/fielder	4WD(CAN)	○	●	●	●	●	
Corolla axio/fielder	Stop & start	○	●	●	●	●	
Corolla axio/fielder	Accessory gateway	○	●	●	●	●	0002
Corolla axio/fielder	Back guide monitor ipa	○	●	●	●	●	
Corolla axio/fielder	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Corolla axio/fielder	Navigation system	○	●	●	●	●	
Corolla axio/fielder	Sliding roof	○	●	●	●	●	
Corolla axio/fielder	Electric power steering (can brush / brushless)	○	●	●	●	●	
Corolla axio/fielder	Electric power steering (can rack type)	○	●	●	●	●	
Corolla axio/fielder	Meter(sil)	○	○	○	●	●	
Corolla axio/fielder	Charging control	○	●	●	●	●	
Corolla axio/fielder	Pre-crash 1 (can)	○	●	●	●	●	
Corolla axio/fielder	Radar cruise	○	●	●	●	●	0003 0035 0036
Corolla axio/fielder	Cruise control	○	●	●	●	●	0003 0036
Corolla axio/fielder	Pre-crash(sil)	○	●	●	●	●	
Corolla rumion	A/C(CAN)	○	●	●	●	●	
Corolla rumion	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Corolla rumion	Accessory gateway	○	●	●	●	●	0002
Corolla rumion	D-door motor	○	●	●	●	●	0016
Corolla rumion	Electric power steering	○	●	●	●	●	
Corolla rumion	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Corolla rumion	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Corolla rumion	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Corolla rumion	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Corolla rumion	Master switch	○	●	●	●	●	0016
Corolla rumion	Meter (can)	○	●	●	●	●	
Corolla rumion	P-door motor	○	●	●	●	●	0016
Corolla rumion	RI-door motor	○	●	●	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla rumion	Rr-door motor	○	●	●	●	●	0016
Corolla rumion	Sliding roof	○	●	●	●	●	
Corolla rumion	Srs airbag	○	●	●	●	●	0006
Corolla rumion	Security (can)	○	●	●	●	●	
Corolla rumion	Srs airbag(sil2)	○	●	●	●	●	0006
Corolla rumion	4WD(CAN)	○	●	●	●	●	
Corolla rumion	Gateway	○	●	●	●	●	0002 0019 0007 0020
Corolla runx/allex	4WD(SIL)	○	●	●	●	●	
Corolla runx/allex	A/C(SIL)	○	●	●	●	●	
Corolla runx/allex	ABS-VSC	○	●	●	●	●	
Corolla runx/allex	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Corolla runx/allex	AFS(SIL)	○	●	●	●	●	0043
Corolla runx/allex	Air suspension-ahc-tems	○	●	●	●	●	
Corolla runx/allex	Back door	○	●	●	●	●	
Corolla runx/allex	Body	○	●	●	●	●	
Corolla runx/allex	Body no.2	○	●	●	●	●	
Corolla runx/allex	Clearance sonar	○	●	●	●	●	0046
Corolla runx/allex	D-seat sw	○	○	○	●	●	
Corolla runx/allex	Driver door	○	●	●	●	●	
Corolla runx/allex	Driver seat	○	○	○	●	●	
Corolla runx/allex	Electric power steering	○	●	●	●	●	
Corolla runx/allex	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Corolla runx/allex	Gateway	○	●	●	●	●	0002 0019 0007 0020
Corolla runx/allex	Immobilizer	○	●	●	●	●	
Corolla runx/allex	Immobilizer (built-in engine)	○	●	●	●	●	
Corolla runx/allex	Master switch	○	○	○	●	●	0016
Corolla runx/allex	Meter	○	○	○	●	●	0172 0006 0174 0072
Corolla runx/allex	Mirror	○	○	○	●	●	
Corolla runx/allex	Mirror l	○	○	○	●	●	
Corolla runx/allex	Mirror(left and right)	○	○	○	●	●	
Corolla runx/allex	Passenger door	○	●	●	●	●	
Corolla runx/allex	Passenger seat	○	○	○	●	●	
Corolla runx/allex	Power source control	○	●	●	●	●	0041
Corolla runx/allex	Rear left door	○	●	●	●	●	
Corolla runx/allex	Rear left seat	○	○	○	●	●	
Corolla runx/allex	Rear right door	○	●	●	●	●	
Corolla runx/allex	Rear right seat	○	○	○	●	●	
Corolla runx/allex	Security (sil)	○	●	●	●	●	
Corolla runx/allex	Sliding roof	○	○	○	●	●	
Corolla runx/allex	Srs airbag(sil)	○	●	●	●	●	0006
Corolla runx/allex	Srs airbag(sil2)	○	●	●	●	●	0006
Corolla runx/allex	Steering pad switch	○	○	○	●	●	
Corolla runx/allex	Tilt&telescopic	○	●	●	●	●	0026
Corolla runx/allex	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Corolla runx/allex	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Corolla runx/allex	Electric power steering (sil rack type)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla spacio	4WD(SIL)	○	●	●	●	●	
Corolla spacio	A/C(SIL)	○	●	●	●	●	
Corolla spacio	ABS-VSC	○	●	●	●	●	
Corolla spacio	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Corolla spacio	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Corolla spacio	AFS(SIL)	○	●	●	●	●	0043
Corolla spacio	Air suspension-ahc-tems	○	●	●	●	●	
Corolla spacio	Back door	○	●	●	●	●	
Corolla spacio	Body	○	●	●	●	●	
Corolla spacio	Body no.2	○	●	●	●	●	
Corolla spacio	Clearance sonar	○	●	●	●	●	0046
Corolla spacio	D-seat sw	○	○	○	●	●	
Corolla spacio	Driver door	○	●	●	●	●	
Corolla spacio	Driver seat	○	○	○	●	●	
Corolla spacio	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Corolla spacio	Electric power steering (sil rack type)	○	●	●	●	●	
Corolla spacio	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Corolla spacio	Gateway	○	●	●	●	●	0002 0019 0007 0020
Corolla spacio	Immobilizer	○	●	●	●	●	
Corolla spacio	Immobilizer (built-in engine)	○	●	●	●	●	
Corolla spacio	Master switch	○	○	○	●	●	0016
Corolla spacio	Meter	○	○	○	●	●	0172 0006 0174 0072
Corolla spacio	Mirror	○	○	○	●	●	
Corolla spacio	Mirror l	○	○	○	●	●	
Corolla spacio	Mirror(left and right)	○	○	○	●	●	
Corolla spacio	Passenger door	○	●	●	●	●	
Corolla spacio	Passenger seat	○	○	○	●	●	
Corolla spacio	Power source control	○	●	●	●	●	0041
Corolla spacio	Rear left door	○	●	●	●	●	
Corolla spacio	Rear left seat	○	○	○	●	●	
Corolla spacio	Rear right door	○	●	●	●	●	
Corolla spacio	Rear right seat	○	○	○	●	●	
Corolla spacio	Security (sil)	○	●	●	●	●	
Corolla spacio	Sliding roof	○	○	○	●	●	
Corolla spacio	Srs airbag(sil)	○	●	●	●	●	0006
Corolla spacio	Srs airbag(sil2)	○	●	●	●	●	0006
Corolla spacio	Steering pad switch	○	○	○	●	●	
Corolla spacio	Tilt&telescopic	○	●	●	●	●	0026
Corolla spacio	Electric power steering	○	●	●	●	●	
Corolla verso	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Corolla verso	Air conditioner	○	●	●	●	●	0065
Corolla verso	Charging control	○	●	●	●	●	
Corolla verso	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla verso	Cruise control	○	●	●	●	●	0003 0036
Corolla verso	D-door motor	○	●	●	●	●	0016
Corolla verso	EMPS	○	●	●	●	●	0006 0025
Corolla verso	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Corolla verso	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Corolla verso	HI autoleveling	○	●	●	●	●	0042 0083 0056
Corolla verso	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Corolla verso	Master switch	○	●	●	●	●	0016
Corolla verso	P-door motor	○	●	●	●	●	0016
Corolla verso	Pm1 gateway	○	●	●	●	●	0002
Corolla verso	Pm2 gateway	○	●	●	●	●	0002
Corolla verso	Power source control	○	●	●	●	●	0041
Corolla verso	Rl-door motor	○	●	●	●	●	0016
Corolla verso	Rr-door motor	○	●	●	●	●	0016
Corolla verso	Sliding roof	○	●	●	●	●	
Corolla verso	Srs airbag	○	●	●	●	●	0006
Corolla verso	Starting control	○	●	●	●	●	
Corolla verso	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Corolla verso	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Corolla verso	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Corolla verso	Navigation system	○	●	●	●	●	
Corolla verso	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Corolla verso	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Corolla verso	Body	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla verso	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Corolla/auris	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Corolla/auris	Air conditioner	○	●	●	●	●	0065
Corolla/auris	Cruise control	○	●	●	●	●	0003 0036
Corolla/auris	D-door motor	○	●	●	●	●	0016
Corolla/auris	EMPS	○	●	●	●	●	0006 0025
Corolla/auris	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Corolla/auris	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Corolla/auris	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Corolla/auris	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Corolla/auris	Master switch	○	●	●	●	●	0016
Corolla/auris	P-door motor	○	●	●	●	●	0016
Corolla/auris	Rl-door motor	○	●	●	●	●	0016
Corolla/auris	Rr-door motor	○	●	●	●	●	0016
Corolla/auris	Sliding roof	○	●	●	●	●	
Corolla/auris	Srs airbag	○	●	●	●	●	0006
Corolla/auris	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Corolla/auris	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Corolla/auris	Accessory gateway	○	●	●	●	●	0002
Corolla/auris	Charging control	○	●	●	●	●	
Corolla/auris	Navigation system	○	●	●	●	●	
Corolla/auris	AFS	○	●	●	●	●	
Corolla/auris	Clearance sonar	○	●	●	●	●	0046
Corolla/auris	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Corolla/auris	Power source control	○	●	●	●	●	0041
Corolla/auris	Starting control	○	●	●	●	●	
Corolla/auris	Stop and go	○	●	●	●	●	0032 0028 0033
Corolla/auris	Tire pressure monitor	○	●	●	●	●	0055 0006 0084

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Corolla/auris	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Corolla/auris	Occupant detection	○	●	●	●	●	0032
Corona	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Corona	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Corona	Srs airbag	○	●	●	●	●	0006
Crown	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Crown	Air conditioner	○	●	●	●	●	0065
Crown	Body	○	●	●	●	●	
Crown	Body no.3	○	●	●	●	●	
Crown	Body no.4	○	●	○	●	●	
Crown	Body no.5	○	○	○	●	●	
Crown	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Crown	Combination switch	○	○	○	●	●	
Crown	Cruise control	○	●	●	●	●	0003 0036
Crown	Driver door	○	●	●	●	●	
Crown	Driver seat	○	○	○	●	●	
Crown	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Crown	EMPS	○	●	●	●	●	0006 0025
Crown	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Crown	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Crown	Gateway	○	●	●	●	●	0002 0019 0007 0020
Crown	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown	Master switch	○	○	○	●	●	0016
Crown	Passenger door	○	●	●	●	●	
Crown	Power source control	○	●	●	●	●	0041
Crown	Rear left door	○	●	●	●	●	
Crown	Rear right door	○	●	●	●	●	
Crown	Sliding roof	○	○	○	●	●	
Crown	Srs airbag	○	●	●	●	●	0006
Crown	Tilt&telescopic	○	●	●	●	●	0026
Crown	AFS	○	●	●	●	●	
Crown	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Crown	Clearance sonar	○	●	●	●	●	0046
Crown	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Crown	D-door motor	○	●	●	●	●	0016
Crown	Driver seat	○	●	●	●	●	
Crown	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Crown	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Crown	Master switch	○	●	●	●	●	0016
Crown	Navigation system	○	●	●	●	●	
Crown	P-door motor	○	●	●	●	●	0016
Crown	Parking assist monitor system	○	●	●	●	●	
Crown	Pm1 gateway	○	●	●	●	●	0002
Crown	Pm2 gateway	○	●	●	●	●	0002
Crown	Rl-door motor	○	●	●	●	●	0016
Crown	Rr-door motor	○	●	●	●	●	0016
Crown	Sliding roof	○	●	●	●	●	
Crown	Starting control	○	●	●	●	●	
Crown	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Crown	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Crown	Radar cruise	○	●	●	●	●	0003 0035 0036
Crown	Rear left seat a/c	○	●	●	●	●	
Crown	Rear right seat a/c	○	●	●	●	●	
Crown	VGRS	○	●	●	●	●	0005 0006
Crown	4WD(CAN)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown	A/C(CAN)	○	●	●	●	●	
Crown	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Crown	Back door	○	●	●	●	●	
Crown	Back guide monitor ipa	○	●	●	●	●	
Crown	Charging control	○	●	●	●	●	
Crown	Electric power steering	○	●	●	●	●	
Crown	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Crown	Front left door	○	●	●	●	●	
Crown	Front right door	○	●	●	●	●	
Crown	Lane keeping assist	○	●	●	●	●	0153
Crown	Meter (can)	○	●	●	●	●	
Crown	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Crown	Active headrest l	○	●	●	●	●	
Crown	Active headrest r	○	●	●	●	●	
Crown	Pre-crash 1 (can)	○	●	●	●	●	
Crown	Radar cruise (built-dss1)	○	●	●	●	●	
Crown	Two pre-crash	○	●	●	●	●	
Crown	4WD(SIL)	○	●	●	●	●	
Crown	A/C(SIL)	○	●	●	●	●	
Crown	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Crown	AFS(SIL)	○	●	●	●	●	0043
Crown	Air suspension-ahc-tems	○	●	●	●	●	
Crown	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Crown	Immobilizer	○	●	●	●	●	
Crown	Meter	○	○	○	●	●	0172 0006 0174 0072
Crown	Night view	○	●	●	●	●	
Crown	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Crown	Srs airbag(sil2)	○	●	●	●	●	0006
Crown	Accessory gateway	○	●	●	●	●	0002
Crown	D-seat sw	○	●	●	●	●	
Crown	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Crown	Intelligent clearance sonar	○	●	●	●	●	
Crown	Panoramic view monitor	○	●	●	●	●	
Crown	Body no.2	○	●	●	●	●	
Crown	D-seat sw	○	○	○	●	●	
Crown	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Crown	Electric power steering (sil rack type)	○	●	●	●	●	
Crown	Meter(sil)	○	○	○	●	●	
Crown	Mirror	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown	Mirror l	○	○	○	●	●	
Crown	Mirror(left and right)	○	○	○	●	●	
Crown	Passenger seat	○	○	○	●	●	
Crown	Rain sensor	○	○	○	●	●	
Crown	Rear left seat	○	○	○	●	●	
Crown	Rear right seat	○	○	○	●	●	
Crown	Security (can)	○	●	●	●	●	
Crown	Security (sil)	○	●	●	●	●	
Crown	Srs airbag(sil)	○	●	●	●	●	0006
Crown	Stabilizer	○	●	●	●	●	
Crown	Steering pad switch	○	○	○	●	●	
Crown	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Crown	Wiper	○	○	○	●	●	
Crown	ABS-VSC	○	●	●	●	●	
Crown	ARS	○	●	●	●	●	0006
Crown	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Crown	Immobilizer (built-in engine)	○	●	●	●	●	
Crown	Body no.2	○	○	○	●	●	
Crown	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Crown comfort	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Crown comfort	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Crown comfort	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Crown comfort	Srs airbag	○	●	●	●	●	0006
Crown estate	4WD(SIL)	○	●	●	●	●	
Crown estate	A/C(SIL)	○	●	●	●	●	
Crown estate	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Crown estate	Body	○	●	●	●	●	
Crown estate	Body no.2	○	●	●	●	●	
Crown estate	Body no.3	○	●	●	●	●	
Crown estate	Combination switch	○	○	○	●	●	
Crown estate	Cruise control	○	●	●	●	●	0003 0036
Crown estate	Driver door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown estate	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Crown estate	Immobilizer (built-in engine)	○	●	●	●	●	
Crown estate	Meter	○	○	○	●	●	0172 0006 0174 0072
Crown estate	Passenger door	○	●	●	●	●	
Crown estate	Sliding roof	○	○	○	●	●	
Crown estate	Srs airbag(sil2)	○	●	●	●	●	0006
Crown estate	Tilt&telescopic	○	●	●	●	●	0026
Crown estate	ABS-VSC	○	●	●	●	●	
Crown estate	AFS(SIL)	○	●	●	●	●	0043
Crown estate	ARS	○	●	●	●	●	0006
Crown estate	Air suspension-ahc-tems	○	●	●	●	●	
Crown estate	Back door	○	●	●	●	●	
Crown estate	Clearance sonar	○	●	●	●	●	0046
Crown estate	D-seat sw	○	○	○	●	●	
Crown estate	Driver seat	○	○	○	●	●	
Crown estate	Electric power steering	○	●	●	●	●	
Crown estate	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Crown estate	Gateway	○	●	●	●	●	0002 0019 0007 0020
Crown estate	Master switch	○	○	○	●	●	0016
Crown estate	Mirror	○	○	○	●	●	
Crown estate	Mirror l	○	○	○	●	●	
Crown estate	Mirror(left and right)	○	○	○	●	●	
Crown estate	Night view	○	●	●	●	●	
Crown estate	Passenger seat	○	○	○	●	●	
Crown estate	Power source control	○	●	●	●	●	0041
Crown estate	Rain sensor	○	○	○	●	●	
Crown estate	Rear left door	○	●	●	●	●	
Crown estate	Rear left seat	○	○	○	●	●	
Crown estate	Rear right door	○	●	●	●	●	
Crown estate	Rear right seat	○	○	○	●	●	
Crown estate	Security (sil)	○	●	●	●	●	
Crown estate	Srs airbag(sil)	○	●	●	●	●	0006
Crown estate	Steering pad switch	○	○	○	●	●	
Crown estate	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Crown estate	VGRS	○	●	●	●	●	0005 0006
Crown estate	Wiper	○	○	○	●	●	
Crown hv	A/C(CAN)	○	●	●	●	●	
Crown hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Crown hv	AFS	○	●	●	●	●	
Crown hv	Accessory gateway	○	●	●	●	●	0002
Crown hv	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Crown hv	Back door	○	●	●	●	●	
Crown hv	Clearance sonar	○	●	●	●	●	0046
Crown hv	Cruise control	○	●	●	●	●	0003 0036

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown hv	D-door motor	○	●	●	●	●	0016
Crown hv	D-seat sw	○	●	●	●	●	
Crown hv	Driver seat	○	●	●	●	●	
Crown hv	Electric power steering	○	●	●	●	●	
Crown hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Crown hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Crown hv	Front left door	○	●	●	●	●	
Crown hv	Front right door	○	●	●	●	●	
Crown hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Crown hv	HV	○	●	●	●	●	0002 0006
Crown hv	HI autoleveling	○	●	●	●	●	0042 0083 0056
Crown hv	Intelligent clearance sonar	○	●	●	●	●	
Crown hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Crown hv	Master switch	○	●	●	●	●	0016
Crown hv	Meter (can)	○	●	●	●	●	
Crown hv	Navigation system	○	●	●	●	●	
Crown hv	P-door motor	○	●	●	●	●	0016
Crown hv	Panoramic view monitor	○	●	●	●	●	
Crown hv	Power source control	○	●	●	●	●	0041
Crown hv	Rear left door	○	●	●	●	●	
Crown hv	Rear right door	○	●	●	●	●	
Crown hv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Crown hv	Rl-door motor	○	●	●	●	●	0016
Crown hv	Rr-door motor	○	●	●	●	●	0016
Crown hv	Sliding roof	○	●	●	●	●	
Crown hv	Srs airbag	○	●	●	●	●	0006
Crown hv	Tilt&telescopic	○	●	●	●	●	0026
Crown hv	Vehicle proximity notification system	○	●	●	●	●	
Crown hv	Radar cruise (built-dss1)	○	●	●	●	●	
Crown hv	Two pre-crash	○	●	●	●	●	
Crown hv	Active headrest l	○	●	●	●	●	
Crown hv	Active headrest r	○	●	●	●	●	
Crown hv	Back guide monitor ipa	○	●	●	●	●	
Crown hv	Can bus gateway v	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown hv	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Crown hv	HV(CAN)	○	●	●	●	●	
Crown hv	Night view	○	●	●	●	●	
Crown hv	Pm1 gateway	○	●	●	●	●	0002
Crown hv	Pm2 gateway	○	●	●	●	●	0002
Crown hv	VGRS	○	●	●	●	●	0005 0006
Crown hv	Lane keeping assist	○	●	●	●	●	0153
Crown hv	Pre-crash 1 (can)	○	●	●	●	●	
Crown hv	Radar cruise	○	●	●	●	●	0003 0035 0036
Crown majesta	A/C(CAN)	○	●	●	●	●	
Crown majesta	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Crown majesta	AFS	○	●	●	●	●	
Crown majesta	Accessory gateway	○	●	●	●	●	0002
Crown majesta	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Crown majesta	Back door	○	●	●	●	●	
Crown majesta	Clearance sonar	○	●	●	●	●	0046
Crown majesta	Cruise control	○	●	●	●	●	0003 0036
Crown majesta	D-door motor	○	●	●	●	●	0016
Crown majesta	D-seat sw	○	●	●	●	●	
Crown majesta	Driver seat	○	●	●	●	●	
Crown majesta	Electric power steering	○	●	●	●	●	
Crown majesta	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Crown majesta	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Crown majesta	Front left door	○	●	●	●	●	
Crown majesta	Front right door	○	●	●	●	●	
Crown majesta	Gateway	○	●	●	●	●	0002 0019 0007 0020
Crown majesta	Grille shutter	○	●	●	●	●	
Crown majesta	HV	○	●	●	●	●	0002 0006
Crown majesta	HI autoleveling	○	●	●	●	●	0042 0083 0056

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown majesta	Intelligent clearance sonar	○	●	●	●	●	
Crown majesta	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Crown majesta	Master switch	○	●	●	●	●	0016
Crown majesta	Meter (can)	○	●	●	●	●	
Crown majesta	Navigation system	○	●	●	●	●	
Crown majesta	P-door motor	○	●	●	●	●	0016
Crown majesta	Panoramic view monitor	○	●	●	●	●	
Crown majesta	Power source control	○	●	●	●	●	0041
Crown majesta	Rear left door	○	●	●	●	●	
Crown majesta	Rear right door	○	●	●	●	●	
Crown majesta	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Crown majesta	RI-door motor	○	●	●	●	●	0016
Crown majesta	Rr-door motor	○	●	●	●	●	0016
Crown majesta	Sliding roof	○	●	●	●	●	
Crown majesta	Srs airbag	○	●	●	●	●	0006
Crown majesta	Tilt&telescopic	○	●	●	●	●	0026
Crown majesta	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Crown majesta	Vehicle proximity notification system	○	●	●	●	●	
Crown majesta	Radar cruise (built-dss1)	○	●	●	●	●	
Crown majesta	Two pre-crash	○	●	●	●	●	
Crown majesta	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Crown majesta	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Crown majesta	VGRS	○	●	●	●	●	0005 0006
Crown majesta	4WD(SIL)	○	●	●	●	●	
Crown majesta	A/C(SIL)	○	●	●	●	●	
Crown majesta	ABS-VSC	○	●	●	●	●	
Crown majesta	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Crown majesta	AFS(SIL)	○	●	●	●	●	0043
Crown majesta	ARS	○	●	●	●	●	0006
Crown majesta	Air suspension-ahc-tems	○	●	●	●	●	
Crown majesta	Body	○	●	●	●	●	
Crown majesta	Body no.2	○	●	●	●	●	
Crown majesta	Body no.3	○	●	●	●	●	
Crown majesta	Combination switch	○	○	○	●	●	
Crown majesta	D-seat sw	○	○	○	●	●	
Crown majesta	Driver door	○	●	●	●	●	
Crown majesta	Driver seat	○	○	○	●	●	
Crown majesta	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Crown majesta	Immobilizer	○	●	●	●	●	
Crown majesta	Immobilizer (built-in engine)	○	●	●	●	●	
Crown majesta	Master switch	○	○	○	●	●	0016
Crown majesta	Meter	○	○	○	●	●	0172 0006 0174 0072
Crown majesta	Mirror	○	○	○	●	●	
Crown majesta	Mirror l	○	○	○	●	●	
Crown majesta	Mirror(letf and right)	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown majesta	Night view	○	●	●	●	●	
Crown majesta	Passenger door	○	●	●	●	●	
Crown majesta	Passenger seat	○	○	○	●	●	
Crown majesta	Rain sensor	○	○	○	●	●	
Crown majesta	Rear left seat	○	○	○	●	●	
Crown majesta	Rear right seat	○	○	○	●	●	
Crown majesta	Security (sil)	○	●	●	●	●	
Crown majesta	Sliding roof	○	○	○	●	●	
Crown majesta	Srs airbag(sil)	○	●	●	●	●	0006
Crown majesta	Srs airbag(sil2)	○	●	●	●	●	0006
Crown majesta	Steering pad switch	○	○	○	●	●	
Crown majesta	Wiper	○	○	○	●	●	
Crown majesta	Radar cruise	○	●	●	●	●	0003 0035 0036
Crown majesta	Act rr seat headrest	○	●	●	●	●	
Crown majesta	Back guide monitor ipa	○	●	●	●	●	
Crown majesta	Charging control	○	●	●	●	●	
Crown majesta	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Crown majesta	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Crown majesta	Pm1 gateway	○	●	●	●	●	0002
Crown majesta	Pm2 gateway	○	●	●	●	●	0002
Crown majesta	Pre-crash 1 (can)	○	●	●	●	●	
Crown majesta	Pre-crash seat back seat rl	○	●	●	●	●	
Crown majesta	Pre-crash seat back seat rr	○	●	●	●	●	
Crown majesta	Rear left seat a/c	○	●	●	●	●	
Crown majesta	Rear right seat a/c	○	●	●	●	●	
Crown majesta	RI seat headrest act	○	●	●	●	●	
Crown majesta	Starting control	○	●	●	●	●	
Crown majesta	Active headrest l	○	●	●	●	●	
Crown majesta	Active headrest r	○	●	●	●	●	
Crown majesta	Lane keeping assist	○	●	●	●	●	0153
Crown majesta	Cruise control (with built-in gasoline engine sil)	○	●	●	●	●	
Crown majesta	Body no.4	○	●	○	●	●	
Crown majesta	Body no.5	○	○	○	●	●	
Crown majesta	ECT(SIL)	○	●	●	●	●	0001 0006
Crown majesta	Rear seat switch	○	○	○	●	●	
Crown majesta	4WD(CAN)	○	●	●	●	●	
Crown majesta	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Crown majesta	Electric power steering (non-system type brush sil nhw1 l)	○	●	●	●	●	
Crown majesta	Electric power steering (sil rack type)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown majesta	Meter(sil)	○	○	○	●	●	
Crown majesta	Security (can)	○	●	●	●	●	
Crown majesta	Stabilizer	○	●	●	●	●	
Crown mild hybrid	4WD(SIL)	○	●	●	●	●	
Crown mild hybrid	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Crown mild hybrid	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Crown mild hybrid	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Crown mild hybrid	Electric power steering (sil rack type)	○	●	●	●	●	
Crown mild hybrid	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Crown mild hybrid	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
Crown mild hybrid	Immobilizer	○	●	●	●	●	
Crown mild hybrid	Immobilizer (built-in engine)	○	●	●	●	●	
Crown mild hybrid	Meter	○	○	○	●	●	0172 0006 0174 0072
Crown mild hybrid	Mild hv	○	●	●	●	●	
Crown mild hybrid	Srs airbag(sil)	○	●	●	●	●	0006
Crown mild hybrid	Srs airbag(sil2)	○	●	●	●	●	0006
Crown mild hybrid	VGRS	○	●	●	●	●	0005 0006
Crown mild hybrid	Electric power steering	○	●	●	●	●	
Crown mild hybrid	A/C(SIL)	○	●	●	●	●	
Crown mild hybrid	ABS-VSC	○	●	●	●	●	
Crown mild hybrid	AFS(SIL)	○	●	●	●	●	0043
Crown mild hybrid	ARS	○	●	●	●	●	0006
Crown mild hybrid	Air suspension-ahc-tems	○	●	●	●	●	
Crown mild hybrid	Back door	○	●	●	●	●	
Crown mild hybrid	Body	○	●	●	●	●	
Crown mild hybrid	Body no.2	○	●	●	●	●	
Crown mild hybrid	Body no.3	○	●	●	●	●	
Crown mild hybrid	Body no.4	○	●	○	●	●	
Crown mild hybrid	Body no.5	○	○	○	●	●	
Crown mild hybrid	Clearance sonar	○	●	●	●	●	0046
Crown mild hybrid	Combination switch	○	○	○	●	●	
Crown mild hybrid	Cruise control	○	●	●	●	●	0003 0036
Crown mild hybrid	D-seat sw	○	○	○	●	●	
Crown mild hybrid	Driver door	○	●	●	●	●	
Crown mild hybrid	Driver seat	○	○	○	●	●	
Crown mild hybrid	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Crown mild hybrid	Gateway	○	●	●	●	●	0002 0019 0007 0020
Crown mild hybrid	Master switch	○	○	○	●	●	0016
Crown mild hybrid	Mirror	○	○	○	●	●	
Crown mild hybrid	Mirror l	○	○	○	●	●	
Crown mild hybrid	Mirror(letf and right)	○	○	○	●	●	
Crown mild hybrid	Night view	○	●	●	●	●	
Crown mild hybrid	Passenger door	○	●	●	●	●	
Crown mild hybrid	Passenger seat	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown mild hybrid	Power source control	○	●	●	●	●	0041
Crown mild hybrid	Rain sensor	○	○	○	●	●	
Crown mild hybrid	Rear left door	○	●	●	●	●	
Crown mild hybrid	Rear left seat	○	○	○	●	●	
Crown mild hybrid	Rear right door	○	●	●	●	●	
Crown mild hybrid	Rear right seat	○	○	○	●	●	
Crown mild hybrid	Security (sil)	○	●	●	●	●	
Crown mild hybrid	Sliding roof	○	○	○	●	●	
Crown mild hybrid	Steering pad switch	○	○	○	●	●	
Crown mild hybrid	Tilt&telescopic	○	●	●	●	●	0026
Crown mild hybrid	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Crown mild hybrid	Wiper	○	○	○	●	●	
Crown patrol car	A/C(CAN)	○	●	●	●	●	
Crown patrol car	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Crown patrol car	AFS	○	●	●	●	●	
Crown patrol car	Back door	○	●	●	●	●	
Crown patrol car	Charging control	○	●	●	●	●	
Crown patrol car	Cruise control	○	●	●	●	●	0003 0036
Crown patrol car	D-door motor	○	●	●	●	●	0016
Crown patrol car	Driver seat	○	●	●	●	●	
Crown patrol car	Electric power steering	○	●	●	●	●	
Crown patrol car	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Crown patrol car	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Crown patrol car	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Crown patrol car	Master switch	○	●	●	●	●	0016
Crown patrol car	Meter (can)	○	●	●	●	●	
Crown patrol car	P-door motor	○	●	●	●	●	0016
Crown patrol car	Pm1 gateway	○	●	●	●	●	0002
Crown patrol car	Pm2 gateway	○	●	●	●	●	0002
Crown patrol car	Power source control	○	●	●	●	●	0041
Crown patrol car	Rl-door motor	○	●	●	●	●	0016
Crown patrol car	Rr-door motor	○	●	●	●	●	0016
Crown patrol car	Srs airbag	○	●	●	●	●	0006
Crown patrol car	Starting control	○	●	●	●	●	
Crown patrol car	A/C(SIL)	○	●	●	●	●	
Crown patrol car	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Crown patrol car	Body	○	●	●	●	●	
Crown patrol car	Body no.3	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown patrol car	Body no.4	○	●	○	●	●	
Crown patrol car	Body no.5	○	○	○	●	●	
Crown patrol car	Combination switch	○	○	○	●	●	
Crown patrol car	Driver door	○	●	●	●	●	
Crown patrol car	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Crown patrol car	Gateway	○	●	●	●	●	0002 0019 0007 0020
Crown patrol car	Immobilizer	○	●	●	●	●	
Crown patrol car	Master switch	○	○	○	●	●	0016
Crown patrol car	Meter	○	○	○	●	●	0172 0006 0174 0072
Crown patrol car	Passenger door	○	●	●	●	●	
Crown patrol car	Rear left door	○	●	●	●	●	
Crown patrol car	Rear right door	○	●	●	●	●	
Crown patrol car	Security (sil)	○	●	●	●	●	
Crown patrol car	Srs airbag(sil2)	○	●	●	●	●	0006
Crown patrol car	4WD(CAN)	○	●	●	●	●	
Crown patrol car	4WD(SIL)	○	●	●	●	●	
Crown patrol car	Air suspension-ahc-tems	○	●	●	●	●	
Crown patrol car	Body no.2	○	●	●	●	●	
Crown patrol car	Body no.2(system jzs. system gs17 #)	○	●	●	●	●	
Crown patrol car	Driver seat	○	○	○	●	●	
Crown patrol car	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Crown patrol car	Electric power steering (sil rack type)	○	●	●	●	●	
Crown patrol car	Meter(sil)	○	○	○	●	●	
Crown patrol car	Night view	○	●	●	●	●	
Crown patrol car	Srs airbag(sil)	○	●	●	●	●	0006
Crown patrol car	Tilt&telescopic	○	●	●	●	●	0026
Crown patrol car	VGRS	○	●	●	●	●	0005 0006
Crown patrol car	ECT(SIL)	○	●	●	●	●	0001 0006
Crown patrol car	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Crown patrol car	Immobilizer (built-in engine)	○	●	●	●	●	
Crown sedan/comfort	4WD(SIL)	○	●	●	●	●	
Crown sedan/comfort	ABS-VSC	○	●	●	●	●	
Crown sedan/comfort	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Crown sedan/comfort	ARS	○	●	●	●	●	0006
Crown sedan/comfort	Electric power steering	○	●	●	●	●	
Crown sedan/comfort	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Crown sedan/comfort	Immobilizer	○	●	●	●	●	
Crown sedan/comfort	Immobilizer (built-in engine)	○	●	●	●	●	
Crown sedan/comfort	Meter	○	○	○	●	●	0172 0006 0174 0072
Crown sedan/comfort	Srs airbag(sil)	○	●	●	●	●	0006
Crown sedan/comfort	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Crown sedan/comfort	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Crown sedan/comfort	Electric power steering (sil rack type)	○	●	●	●	●	
Crown sedan/comfort	Srs airbag(sil2)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Crown sedan/comfort	Stop & go	○	●	●	●	●	
Crown sedan/comfort	VGRS	○	●	●	●	●	0005 0006
Crown sedan/comfort	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Crown sedan/comfort	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Crown sedan/comfort	Meter (can)	○	●	●	●	●	
Crown sedan/comfort	Srs airbag	○	●	●	●	●	0006
Crown sedan/comfort	Stop & start	○	●	●	●	●	
Duet	A/B	○	●	●	●	●	0023 0006 0174
Duet	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Duet	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Duet	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
Duet	A/T	○	●	●	●	●	0016
Duet	VSC	○	●	●	●	●	0049 0107 0006 0174 0183
Dyna	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Dyna	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Dyna	Srs airbag	○	●	●	●	●	0006
Dyna	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Dyna	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Dyna	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Dyna	HI autoleveling	○	●	●	●	●	0042 0083 0056
Dyna	Vehicle control	○	●	●	●	●	0030
Echo	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Echo	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Echo	Srs airbag	○	●	●	●	●	0006
Echo	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Eq	A/C(CAN)	○	●	●	●	●	
Eq	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Eq	D-door motor	○	●	●	●	●	0016
Eq	Diagnostics recorder	○	●	●	●	●	
Eq	EMPS	○	●	●	●	●	0006 0025
Eq	EV	○	●	●	●	●	0006 0093 0069 0070
Eq	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Eq	HI autoleveling	○	●	●	●	●	0042 0083 0056
Eq	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Eq	Master switch	○	●	●	●	●	0016
Eq	Meter (can)	○	●	●	●	●	
Eq	Navigation system	○	●	●	●	●	
Eq	P-door motor	○	●	●	●	●	0016
Eq	Plug-in control	○	●	●	●	●	0006 0026
Eq	Pml gateway	○	●	●	●	●	0002
Eq	Power source control	○	●	●	●	●	0041
Eq	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Estima	4WD(SIL)	○	●	●	●	●	
Estima	A/C(SIL)	○	●	●	●	●	
Estima	ABS-VSC	○	●	●	●	●	
Estima	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Estima	ARS	○	●	●	●	●	0006
Estima	Air suspension-ahc-tems	○	●	●	●	●	
Estima	Back door	○	●	●	●	●	
Estima	Body no.2	○	●	●	●	●	
Estima	Body no.3	○	●	●	●	●	
Estima	Body no.4	○	●	○	●	●	
Estima	Body no.5	○	○	○	●	●	
Estima	Clearance sonar	○	●	●	●	●	0046
Estima	Combination switch	○	○	○	●	●	
Estima	D-seat sw	○	○	○	●	●	
Estima	Driver door	○	●	●	●	●	
Estima	Driver seat	○	○	○	●	●	
Estima	Electric power steering	○	●	●	●	●	
Estima	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Estima	Gateway	○	●	●	●	●	0002 0019 0007 0020
Estima	Immobilizer	○	●	●	●	●	
Estima	Immobilizer (built-in engine)	○	●	●	●	●	
Estima	Master switch	○	○	○	●	●	0016
Estima	Meter	○	○	○	●	●	0172 0006 0174 0072
Estima	Mirror	○	○	○	●	●	
Estima	Mirror l	○	○	○	●	●	
Estima	Mirror(letf and right)	○	○	○	●	●	
Estima	Night view	○	●	●	●	●	
Estima	Passenger door	○	●	●	●	●	
Estima	Passenger seat	○	○	○	●	●	
Estima	Rain sensor	○	○	○	●	●	
Estima	Rear left door	○	●	●	●	●	
Estima	Rear left seat	○	○	○	●	●	
Estima	Rear right door	○	●	●	●	●	
Estima	Rear right seat	○	○	○	●	●	
Estima	Security (sil)	○	●	●	●	●	
Estima	Sliding roof	○	○	○	●	●	
Estima	Srs airbag(sil)	○	●	●	●	●	0006
Estima	Steering pad switch	○	○	○	●	●	
Estima	Tilt&telescopic	○	●	●	●	●	0026
Estima	4WD(CAN)	○	●	●	●	●	
Estima	A/C(CAN)	○	●	●	●	●	
Estima	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Estima	AFS	○	●	●	●	●	
Estima	Accessory gateway	○	●	●	●	●	0002
Estima	Back guide monitor ipa	○	●	●	●	●	
Estima	Cruise control	○	●	●	●	●	0003 0036

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Estima	D-door motor	○	●	●	●	●	0016
Estima	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Estima	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Estima	Lane keeping assist	○	●	●	●	●	0153
Estima	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Estima	Master switch	○	●	●	●	●	0016
Estima	Meter (can)	○	●	●	●	●	
Estima	Navigation system	○	●	●	●	●	
Estima	P-door motor	○	●	●	●	●	0016
Estima	RI-door motor	○	●	●	●	●	0016
Estima	Rr-door motor	○	●	●	●	●	0016
Estima	Sliding roof	○	●	●	●	●	
Estima	Srs airbag(sil2)	○	●	●	●	●	0006
Estima	AFS(SIL)	○	●	●	●	●	0043
Estima	Power source control	○	●	●	●	●	0041
Estima	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Estima	VGRS	○	●	●	●	●	0005 0006
Estima	Wiper	○	○	○	●	●	
Estima	Panoramic view monitor	○	●	●	●	●	
Estima	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Estima	ECT(SIL)	○	●	●	●	●	0001 0006
Estima	Rear seat switch	○	○	○	●	●	
Estima	Security (can)	○	●	●	●	●	
Estima	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Estima	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Estima	Radar cruise	○	●	●	●	●	0003 0035 0036
Estima	Pre-crash 1 (can)	○	●	●	●	●	
Estima hv	A/C(CAN)	○	●	●	●	●	
Estima hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Estima hv	AFS	○	●	●	●	●	
Estima hv	Accessory gateway	○	●	●	●	●	0002
Estima hv	Back door	○	●	●	●	●	
Estima hv	Cruise control	○	●	●	●	●	0003 0036
Estima hv	D-door motor	○	●	●	●	●	0016
Estima hv	Electric power steering	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Estima hv	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Estima hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Estima hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Estima hv	HV(CAN)	○	●	●	●	●	
Estima hv	Lane keeping assist	○	●	●	●	●	0153
Estima hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Estima hv	Master switch	○	●	●	●	●	0016
Estima hv	Meter (can)	○	●	●	●	●	
Estima hv	Navigation system	○	●	●	●	●	
Estima hv	P-door motor	○	●	●	●	●	0016
Estima hv	Panoramic view monitor	○	●	●	●	●	
Estima hv	Rear left door	○	●	●	●	●	
Estima hv	Rear right door	○	●	●	●	●	
Estima hv	Rl-door motor	○	●	●	●	●	0016
Estima hv	Rr-door motor	○	●	●	●	●	0016
Estima hv	Sliding roof	○	●	●	●	●	
Estima hv	Srs airbag(sil2)	○	●	●	●	●	0006
Estima hv	Vehicle proximity notification system	○	●	●	●	●	
Estima hv	Pre-crash 1 (can)	○	●	●	●	●	
Estima hv	Radar cruise	○	●	●	●	●	0003 0035 0036
Estima hv	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Estima hv	Back guide monitor ipa	○	●	●	●	●	
Estima hv	4WD(SIL)	○	●	●	●	●	
Estima hv	A/C(SIL)	○	●	●	●	●	
Estima hv	ABS-VSC	○	●	●	●	●	
Estima hv	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Estima hv	AFS(SIL)	○	●	●	●	●	0043
Estima hv	Body no.2	○	●	●	●	●	
Estima hv	Body no.3	○	●	●	●	●	
Estima hv	Body no.4	○	●	○	●	●	
Estima hv	Body no.5	○	○	○	●	●	
Estima hv	Clearance sonar	○	●	●	●	●	0046
Estima hv	Cruise control (internal sil hv)	○	●	●	●	●	
Estima hv	Cruise control (with built-in can hv)	○	●	●	●	●	
Estima hv	Driver door	○	●	●	●	●	
Estima hv	Driver seat	○	○	○	●	●	
Estima hv	ECT(SIL)	○	●	●	●	●	0001 0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Estima hv	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Estima hv	HV(SIL)	○	●	●	●	●	
Estima hv	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
Estima hv	Immobilizer	○	●	●	●	●	
Estima hv	Master switch	○	○	○	●	●	0016
Estima hv	Meter	○	○	○	●	●	0172 0006 0174 0072
Estima hv	Mirror	○	○	○	●	●	
Estima hv	Mirror l	○	○	○	●	●	
Estima hv	Mirror(left and right)	○	○	○	●	●	
Estima hv	Passenger door	○	●	●	●	●	
Estima hv	Passenger seat	○	○	○	●	●	
Estima hv	Power source control	○	●	●	●	●	0041
Estima hv	Rain sensor	○	○	○	●	●	
Estima hv	Rear left seat	○	○	○	●	●	
Estima hv	Rear right seat	○	○	○	●	●	
Estima hv	Rear seat switch	○	○	○	●	●	
Estima hv	Security (can)	○	●	●	●	●	
Estima hv	Security (sil)	○	●	●	●	●	
Estima hv	Sliding roof	○	○	○	●	●	
Estima hv	Srs airbag(sil)	○	●	●	●	●	0006
Estima hv	Steering pad switch	○	○	○	●	●	
Estima hv	Tilt&telescopic	○	●	●	●	●	0026
Estima hv	Wiper	○	○	○	●	●	
Estima hv	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Etios	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Etios	EMPS	○	●	●	●	●	0006 0025
Etios	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Etios	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Etios	Srs airbag	○	●	●	●	●	0006
Etios	Telematics	○	●	●	●	●	0048 0124

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
E'z	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
E'z	Air conditioner	○	●	●	●	●	0065
E'z	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
E'z	Cruise control	○	●	●	●	●	0003 0036
E'z	D-door motor	○	●	●	●	●	0016
E'z	EMPS	○	●	●	●	●	0006 0025
E'z	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
E'z	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
E'z	Hl autoleveling	○	●	●	●	●	0042 0083 0056
E'z	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
E'z	Master switch	○	●	●	●	●	0016
E'z	P-door motor	○	●	●	●	●	0016
E'z	Power source control	○	●	●	●	●	0041
E'z	Rl-door motor	○	●	●	●	●	0016
E'z	Rr-door motor	○	●	●	●	●	0016
E'z	Sliding roof	○	●	●	●	●	
E'z	Srs airbag	○	●	●	●	●	0006
E'z	Starting control	○	●	●	●	●	
E'z	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
E'z	Navigation system	○	●	●	●	●	
Fchv-adv	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Fchv-adv	Body	○	●	●	●	●	
Fchv-adv	Driver door	○	●	●	●	●	
Fchv-adv	Electric power steering	○	●	●	●	●	
Fchv-adv	FC	○	○	○	●	●	0006 0134 0022
Fchv-adv	FCHV	○	○	○	●	●	0022
Fchv-adv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Fchv-adv	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
Fchv-adv	Srs airbag(sil)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Fchv-adv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Fchv-adv	EMPS	○	●	●	●	●	0006 0025
Fchv-adv	Hv battery	○	●	●	●	●	0002 0006
Fchv-adv	Srs airbag	○	●	●	●	●	0006
Fchv-adv	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Fj cruiser	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Fj cruiser	Back door	○	●	●	●	●	
Fj cruiser	Body	○	●	●	●	●	
Fj cruiser	Cruise control	○	●	●	●	●	0003 0036
Fj cruiser	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Fj cruiser	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Fj cruiser	Srs airbag	○	●	●	●	●	0006
Fj cruiser	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Fj cruiser	D-seat sw	○	●	●	●	●	
Fj cruiser	Occupant detection	○	●	●	●	●	0032
Fj cruiser	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Fj cruiser	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Fj cruiser	Immobilizer	○	●	●	●	●	
Fj cruiser	Meter (can)	○	●	●	●	●	
Fj cruiser	Srs airbag(sil2)	○	●	●	●	●	0006
Fj cruiser	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Fortuner/hilux sw4	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Fortuner/hilux sw4	Cruise control	○	●	●	●	●	0003 0036

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Fortuner/hilux sw4	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Fortuner/hilux sw4	HI autoleveling	○	●	●	●	●	0042 0083 0056
Fortuner/hilux sw4	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Fortuner/hilux sw4	Srs airbag	○	●	●	●	●	0006
Fortuner/hilux sw4	Telematics	○	●	●	●	●	0048 0124
Fortuner/hilux sw4	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Fortuner/hilux sw4	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Fun cargo	4WD(SIL)	○	●	●	●	●	
Fun cargo	A/C(SIL)	○	●	●	●	●	
Fun cargo	ABS-VSC	○	●	●	●	●	
Fun cargo	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Fun cargo	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Fun cargo	AFS(SIL)	○	●	●	●	●	0043
Fun cargo	Air suspension-ahc-tems	○	●	●	●	●	
Fun cargo	Body	○	●	●	●	●	
Fun cargo	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Fun cargo	Electric power steering (sil rack type)	○	●	●	●	●	
Fun cargo	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Fun cargo	Gateway	○	●	●	●	●	0002 0019 0007 0020
Fun cargo	Immobilizer	○	●	●	●	●	
Fun cargo	Immobilizer (built-in engine)	○	●	●	●	●	
Fun cargo	Master switch	○	○	○	●	●	0016
Fun cargo	Meter	○	○	○	●	●	0172 0006 0174 0072
Fun cargo	Security (sil)	○	●	●	●	●	
Fun cargo	Sliding roof	○	○	○	●	●	
Fun cargo	Srs airbag(sil)	○	●	●	●	●	0006
Fun cargo	Srs airbag(sil2)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Fun cargo	Steering pad switch	○	○	○	●	●	
Fun cargo	Electric power steering	○	●	●	●	●	
Gaia	4WD(SIL)	○	●	●	●	●	
Gaia	A/C(SIL)	○	●	●	●	●	
Gaia	ABS-VSC	○	●	●	●	●	
Gaia	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Gaia	AFS(SIL)	○	●	●	●	●	0043
Gaia	Air suspension-ahc-tems	○	●	●	●	●	
Gaia	Back door	○	●	●	●	●	
Gaia	Body	○	●	●	●	●	
Gaia	Body no.2	○	●	●	●	●	
Gaia	Clearance sonar	○	●	●	●	●	0046
Gaia	D-seat sw	○	○	○	●	●	
Gaia	Driver door	○	●	●	●	●	
Gaia	Driver seat	○	○	○	●	●	
Gaia	Electric power steering	○	●	●	●	●	
Gaia	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Gaia	Gateway	○	●	●	●	●	0002 0019 0007 0020
Gaia	Immobilizer	○	●	●	●	●	
Gaia	Immobilizer (built-in engine)	○	●	●	●	●	
Gaia	Master switch	○	○	○	●	●	0016
Gaia	Meter	○	○	○	●	●	0172 0006 0174 0072
Gaia	Mirror	○	○	○	●	●	
Gaia	Mirror l	○	○	○	●	●	
Gaia	Mirror(left and right)	○	○	○	●	●	
Gaia	Passenger door	○	●	●	●	●	
Gaia	Passenger seat	○	○	○	●	●	
Gaia	Power source control	○	●	●	●	●	0041
Gaia	Rear left door	○	●	●	●	●	
Gaia	Rear left seat	○	○	○	●	●	
Gaia	Rear right door	○	●	●	●	●	
Gaia	Rear right seat	○	○	○	●	●	
Gaia	Security (sil)	○	●	●	●	●	
Gaia	Sliding roof	○	○	○	●	●	
Gaia	Srs airbag(sil)	○	●	●	●	●	0006
Gaia	Srs airbag(sil2)	○	●	●	●	●	0006
Gaia	Steering pad switch	○	○	○	●	●	
Gaia	Tilt&telescopic	○	●	●	●	●	0026
Granvia/grand hiace	4WD(SIL)	○	●	●	●	●	
Granvia/grand hiace	A/C(SIL)	○	●	●	●	●	
Granvia/grand hiace	ABS-VSC	○	●	●	●	●	
Granvia/grand hiace	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Granvia/grand hiace	Air suspension-ahc-tems	○	●	●	●	●	
Granvia/grand hiace	Back door	○	●	●	●	●	
Granvia/grand hiace	Body	○	●	●	●	●	
Granvia/grand hiace	Body no.2	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Granvia/grand hiace	Clearance sonar	○	●	●	●	●	0046
Granvia/grand hiace	D-seat sw	○	○	○	●	●	
Granvia/grand hiace	Driver door	○	●	●	●	●	
Granvia/grand hiace	Driver seat	○	○	○	●	●	
Granvia/grand hiace	Electric power steering	○	●	●	●	●	
Granvia/grand hiace	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Granvia/grand hiace	Gateway	○	●	●	●	●	0002 0019 0007 0020
Granvia/grand hiace	Immobilizer	○	●	●	●	●	
Granvia/grand hiace	Immobilizer (built-in engine)	○	●	●	●	●	
Granvia/grand hiace	Master switch	○	○	○	●	●	0016
Granvia/grand hiace	Meter	○	○	○	●	●	0172 0006 0174 0072
Granvia/grand hiace	Mirror	○	○	○	●	●	
Granvia/grand hiace	Mirror l	○	○	○	●	●	
Granvia/grand hiace	Mirror(left and right)	○	○	○	●	●	
Granvia/grand hiace	Passenger door	○	●	●	●	●	
Granvia/grand hiace	Passenger seat	○	○	○	●	●	
Granvia/grand hiace	Rear left door	○	●	●	●	●	
Granvia/grand hiace	Rear left seat	○	○	○	●	●	
Granvia/grand hiace	Rear right door	○	●	●	●	●	
Granvia/grand hiace	Rear right seat	○	○	○	●	●	
Granvia/grand hiace	Security (sil)	○	●	●	●	●	
Granvia/grand hiace	Sliding roof	○	○	○	●	●	
Granvia/grand hiace	Srs airbag(sil)	○	●	●	●	●	0006
Granvia/grand hiace	Steering pad switch	○	○	○	●	●	
Granvia/grand hiace	Tilt&telescopic	○	●	●	●	●	0026
Harrier	4WD(SIL)	○	●	●	●	●	
Harrier	A/C(SIL)	○	●	●	●	●	
Harrier	ABS-VSC	○	●	●	●	●	
Harrier	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Harrier	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Harrier	AFS(SIL)	○	●	●	●	●	0043
Harrier	ARS	○	●	●	●	●	0006
Harrier	Air suspension-ahc-tems	○	●	●	●	●	
Harrier	Back door	○	●	●	●	●	
Harrier	Body	○	●	●	●	●	
Harrier	Body no.2	○	●	●	●	●	
Harrier	Body no.3	○	●	●	●	●	
Harrier	Body no.4	○	●	○	●	●	
Harrier	Body no.5	○	○	○	●	●	
Harrier	Clearance sonar	○	●	●	●	●	0046
Harrier	Combination switch	○	○	○	●	●	
Harrier	D-seat sw	○	○	○	●	●	
Harrier	Driver door	○	●	●	●	●	
Harrier	Driver seat	○	○	○	●	●	
Harrier	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Harrier	Electric power steering (sil rack type)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Harrier	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Harrier	Gateway	○	●	●	●	●	0002 0019 0007 0020
Harrier	Immobilizer	○	●	●	●	●	
Harrier	Immobilizer (built-in engine)	○	●	●	●	●	
Harrier	Master switch	○	○	○	●	●	0016
Harrier	Meter	○	○	○	●	●	0172 0006 0174 0072
Harrier	Mirror	○	○	○	●	●	
Harrier	Mirror l	○	○	○	●	●	
Harrier	Mirror(left and right)	○	○	○	●	●	
Harrier	Night view	○	●	●	●	●	
Harrier	Passenger door	○	●	●	●	●	
Harrier	Passenger seat	○	○	○	●	●	
Harrier	Power source control	○	●	●	●	●	0041
Harrier	Rain sensor	○	○	○	●	●	
Harrier	Rear left door	○	●	●	●	●	
Harrier	Rear left seat	○	○	○	●	●	
Harrier	Rear right door	○	●	●	●	●	
Harrier	Rear right seat	○	○	○	●	●	
Harrier	Security (sil)	○	●	●	●	●	
Harrier	Sliding roof	○	○	○	●	●	
Harrier	Srs airbag(sil)	○	●	●	●	●	0006
Harrier	Srs airbag(sil2)	○	●	●	●	●	0006
Harrier	Stabilizer	○	●	●	●	●	
Harrier	Steering pad switch	○	○	○	●	●	
Harrier	Tilt&telescopic	○	●	●	●	●	0026
Harrier	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Harrier	VGRS	○	●	●	●	●	0005 0006
Harrier	Wiper	○	○	○	●	●	
Harrier	Electric power steering	○	●	●	●	●	
Harrier	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Harrier	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Harrier	Radar cruise	○	●	●	●	●	0003 0035 0036
Harrier	Pre-collision	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Harrier	Cruise control	○	●	●	●	●	0003 0036
Harrier	4WD(CAN)	○	●	●	●	●	
Harrier	A/C(CAN)	○	●	●	●	●	
Harrier	Accessory gateway	○	●	●	●	●	0002

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Harrier	D-door motor	○	●	●	●	●	0016
Harrier	Driver seat	○	●	●	●	●	
Harrier	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Harrier	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Harrier	HI autoleveling	○	●	●	●	●	0042 0083 0056
Harrier	Intelligent clearance sonar	○	●	●	●	●	
Harrier	Lane departure alert	○	●	●	●	●	
Harrier	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Harrier	Master switch	○	●	●	●	●	0016
Harrier	Meter (can)	○	●	●	●	●	
Harrier	Navigation system	○	●	●	●	●	
Harrier	P-door motor	○	●	●	●	●	0016
Harrier	Panoramic view monitor	○	●	●	●	●	
Harrier	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Harrier	Rl-door motor	○	●	●	●	●	0016
Harrier	Rr-door motor	○	●	●	●	●	0016
Harrier	Sliding roof	○	●	●	●	●	
Harrier	Sliding sunshade	○	●	●	●	●	
Harrier	Srs airbag	○	●	●	●	●	0006
Harrier	Starting control	○	●	●	●	●	
Harrier	Stop & start	○	●	●	●	●	
Harrier	Two pre-crash	○	●	●	●	●	
Harrier hv	A/C(CAN)	○	●	●	●	●	
Harrier hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Harrier hv	Accessory gateway	○	●	●	●	●	0002
Harrier hv	Back door	○	●	●	●	●	
Harrier hv	Clearance sonar	○	●	●	●	●	0046
Harrier hv	Cruise control	○	●	●	●	●	0003 0036
Harrier hv	D-door motor	○	●	●	●	●	0016
Harrier hv	Driver seat	○	●	●	●	●	
Harrier hv	Electric power steering	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Harrier hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Harrier hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Harrier hv	HV	○	●	●	●	●	0002 0006
Harrier hv	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Harrier hv	Intelligent clearance sonar	○	●	●	●	●	
Harrier hv	Lane departure alert	○	●	●	●	●	
Harrier hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Harrier hv	Master switch	○	●	●	●	●	0016
Harrier hv	Meter (can)	○	●	●	●	●	
Harrier hv	Navigation system	○	●	●	●	●	
Harrier hv	P-door motor	○	●	●	●	●	0016
Harrier hv	Panoramic view monitor	○	●	●	●	●	
Harrier hv	Pml gateway	○	●	●	●	●	0002
Harrier hv	Power source control	○	●	●	●	●	0041
Harrier hv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Harrier hv	Rl-door motor	○	●	●	●	●	0016
Harrier hv	Rr-door motor	○	●	●	●	●	0016
Harrier hv	Sliding roof	○	●	●	●	●	
Harrier hv	Sliding sunshade	○	●	●	●	●	
Harrier hv	Srs airbag	○	●	●	●	●	0006
Harrier hv	Tilt&telescopic	○	●	●	●	●	0026
Harrier hv	Vehicle proximity notification system	○	●	●	●	●	
Harrier hv	Radar cruise (built-dss1)	○	●	●	●	●	
Harrier hv	Two pre-crash	○	●	●	●	●	
Harrier hv	A/C(SIL)	○	●	●	●	●	
Harrier hv	AFS(SIL)	○	●	●	●	●	0043
Harrier hv	Body	○	●	●	●	●	
Harrier hv	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Harrier hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Harrier hv	HV(CAN)	○	●	●	●	●	
Harrier hv	Immobilizer	○	●	●	●	●	
Harrier hv	Master switch	○	○	○	●	●	0016
Harrier hv	Meter	○	○	○	●	●	0172 0006 0174 0072
Harrier hv	Rain sensor	○	○	○	●	●	
Harrier hv	Sliding roof	○	○	○	●	●	
Harrier hv	Srs airbag(sil)	○	●	●	●	●	0006
Harrier hv	Wiper	○	○	○	●	●	
Hiace	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Hiace	Air conditioner	○	●	●	●	●	0065
Hiace	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Hiace	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Hiace	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Hiace	Srs airbag	○	●	●	●	●	0006
Hiace	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Hiace	Cruise control	○	●	●	●	●	0003 0036
Hiace	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Hiace	HI autoleveling	○	●	●	●	●	0042 0083 0056
Hiace	Power source control	○	●	●	●	●	0041
Hiace	Starting control	○	●	●	●	●	
Hiace	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Hiace/regiusace/himedic	A/C(CAN)	○	●	●	●	●	
Hiace/regiusace/himedic	ABS-VSC-TRC(SIL)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Hiace/regiusace/himedic	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Hiace/regiusace/himedic	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Hiace/regiusace/himedic	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Hiace/regiusace/himedic	Immobilizer	○	●	●	●	●	
Hiace/regiusace/himedic	Srs airbag(sil2)	○	●	●	●	●	0006
Hiace/regiusace/himedic	Accessory gateway	○	●	●	●	●	0002
Hiace/regiusace/himedic	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Hiace/regiusace/himedic	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Hiace/regiusace/himedic	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Hiace/regiusace/himedic	Meter (can)	○	●	●	●	●	
Hiace/regiusace/himedic	Power source control	○	●	●	●	●	0041
Hiace/regiusace/himedic	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Hiace/regiusace/himedic	Security (can)	○	●	●	●	●	
Hiace/regiusace/himedic	Starting control	○	●	●	●	●	
Hiace/regiusace/himedic	4WD(SIL)	○	●	●	●	●	
Hiace/regiusace/himedic	ABS-VSC	○	●	●	●	●	
Hiace/regiusace/himedic	ARS	○	●	●	●	●	0006
Hiace/regiusace/himedic	Electric power steering	○	●	●	●	●	
Hiace/regiusace/himedic	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Hiace/regiusace/himedic	Immobilizer (built-in engine)	○	●	●	●	●	
Hiace/regiusace/himedic	Meter	○	○	○	●	●	0172 0006 0174 0072
Hiace/regiusace/himedic	Srs airbag(sil)	○	●	●	●	●	0006
Hiace/regiusace/himedic	VGRS	○	●	●	●	●	0005 0006
Hiace/regiusace/himedic	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Hiace/regiusace/himedic	4WD(CAN)	○	●	●	●	●	
Hiace/regiusace/himedic	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Hiace/regiusace/himedic	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Hiace/regiusace/himedic	Electric power steering (sil rack type)	○	●	●	●	●	
Hiace/regiusace/himedic	Meter(sil)	○	○	○	●	●	
Hiace/regiusace/himedic	Electric power steering (can brush / brushless)	○	●	●	●	●	
Hiace/regiusace/himedic	Electric power steering (can rack type)	○	●	●	●	●	
Hiace/regiusace/himedic	Srs airbag	○	●	●	●	●	0006
Highlander	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Highlander	Accessory gateway	○	●	●	●	●	0002
Highlander	Air conditioner	○	●	●	●	●	0065
Highlander	Back door	○	●	●	●	●	
Highlander	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Highlander	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Highlander	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Highlander	Cruise control	○	●	●	●	●	0003 0036
Highlander	D-door motor	○	●	●	●	●	0016
Highlander	Driver seat	○	●	●	●	●	
Highlander	EMPS	○	●	●	●	●	0006 0025
Highlander	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Highlander	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Highlander	Gateway	○	●	●	●	●	0002 0019 0007 0020
Highlander	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Highlander	Lane departure alert	○	●	●	●	●	
Highlander	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Highlander	Master switch	○	●	●	●	●	0016
Highlander	Mirror l	○	●	●	●	●	
Highlander	Mirror r	○	●	●	●	●	
Highlander	Navigation system	○	●	●	●	●	
Highlander	Occupant detection	○	●	●	●	●	0032
Highlander	P-door motor	○	●	●	●	●	0016
Highlander	Parking assist monitor system	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Highlander	Power source control	○	●	●	●	●	0041
Highlander	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Highlander	Rl-door motor	○	●	●	●	●	0016
Highlander	Rr-door motor	○	●	●	●	●	0016
Highlander	Sliding roof	○	●	●	●	●	
Highlander	Sliding sunshade	○	●	●	●	●	
Highlander	Srs airbag	○	●	●	●	●	0006
Highlander	Starting control	○	●	●	●	●	
Highlander	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Highlander	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Highlander	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Highlander	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Highlander	Body	○	●	●	●	●	
Highlander	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Highlander	Driver door	○	●	●	●	●	
Highlander	Sliding roof	○	○	○	●	●	
Highlander	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Highlander	Four wheel drive	○	●	●	●	●	0016 0081
Highlander	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Highlander	Advanced parking guidance system	○	●	●	●	●	
Highlander	Clearance sonar	○	●	●	●	●	0046
Highlander	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Highlander	Radar cruise	○	●	●	●	●	0003 0035 0036
Highlander	Telematics	○	●	●	●	●	0048 0124
Highlander hv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Highlander hv	Air conditioner	○	●	●	●	●	0065
Highlander hv	Back door	○	●	●	●	●	
Highlander hv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Highlander hv	Cruise control	○	●	●	●	●	0003 0036

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Highlander hv	D-door motor	○	●	●	●	●	0016
Highlander hv	EMPS	○	●	●	●	●	0006 0025
Highlander hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Highlander hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Highlander hv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Highlander hv	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Highlander hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Highlander hv	Occupant detection	○	●	●	●	●	0032
Highlander hv	Sliding roof	○	●	●	●	●	
Highlander hv	Srs airbag	○	●	●	●	●	0006
Highlander hv	Accessory gateway	○	●	●	●	●	0002
Highlander hv	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Highlander hv	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Highlander hv	Clearance sonar	○	●	●	●	●	0046
Highlander hv	Driver seat	○	●	●	●	●	
Highlander hv	Lane departure alert	○	●	●	●	●	
Highlander hv	Master switch	○	●	●	●	●	0016
Highlander hv	Mirror l	○	●	●	●	●	
Highlander hv	Mirror r	○	●	●	●	●	
Highlander hv	Navigation system	○	●	●	●	●	
Highlander hv	P-door motor	○	●	●	●	●	0016
Highlander hv	Parking assist monitor system	○	●	●	●	●	
Highlander hv	Pml gateway	○	●	●	●	●	0002
Highlander hv	Power source control	○	●	●	●	●	0041
Highlander hv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Highlander hv	Rl-door motor	○	●	●	●	●	0016
Highlander hv	Rr-door motor	○	●	●	●	●	0016
Highlander hv	Sliding sunshade	○	●	●	●	●	
Highlander hv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Highlander hv	Vehicle proximity notification system	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Highlander hv	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Highlander hv	Radar cruise	○	●	●	●	●	0003 0035 0036
Highlander hv	Body	○	●	●	●	●	
Highlander hv	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Highlander hv	Driver door	○	●	●	●	●	
Highlander hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Highlander hv	Sliding roof	○	○	○	●	●	
Highlander hv	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Highlander hv	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Highlander hv	Advanced parking guidance system	○	●	●	●	●	
Highlander hv	Telematics	○	●	●	●	●	0048 0124
Highlander/kluger	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Highlander/kluger	Air conditioner	○	●	●	●	●	0065
Highlander/kluger	Back door	○	●	●	●	●	
Highlander/kluger	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Highlander/kluger	Cruise control	○	●	●	●	●	0003 0036
Highlander/kluger	D-door motor	○	●	●	●	●	0016
Highlander/kluger	EMPS	○	●	●	●	●	0006 0025
Highlander/kluger	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Highlander/kluger	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Highlander/kluger	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Highlander/kluger	Parking assist monitor system	○	●	●	●	●	
Highlander/kluger	Sliding roof	○	●	●	●	●	
Highlander/kluger	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Highlander/kluger	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Highlander/kluger	P-door motor	○	●	●	●	●	0016
Highlander/kluger	Rl-door motor	○	●	●	●	●	0016
Highlander/kluger	Rr-door motor	○	●	●	●	●	0016
Highlander/kluger	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Highlander/kluger	Accessory gateway	○	●	●	●	●	0002
Highlander/kluger	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Highlander/kluger	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Highlander/kluger	Clearance sonar	○	●	●	●	●	0046
Highlander/kluger	Driver seat	○	●	●	●	●	
Highlander/kluger	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Highlander/kluger	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Highlander/kluger	Four wheel drive	○	●	●	●	●	0016 0081
Highlander/kluger	Gateway	○	●	●	●	●	0002 0019 0007 0020
Highlander/kluger	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Highlander/kluger	Lane departure alert	○	●	●	●	●	
Highlander/kluger	Master switch	○	●	●	●	●	0016
Highlander/kluger	Mirror l	○	●	●	●	●	
Highlander/kluger	Mirror r	○	●	●	●	●	
Highlander/kluger	Navigation system	○	●	●	●	●	
Highlander/kluger	Occupant detection	○	●	●	●	●	0032
Highlander/kluger	Power source control	○	●	●	●	●	0041
Highlander/kluger	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Highlander/kluger	Radar cruise	○	●	●	●	●	0003 0035 0036
Highlander/kluger	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Highlander/kluger	Sliding sunshade	○	●	●	●	●	
Highlander/kluger	Starting control	○	●	●	●	●	
Highlander/kluger	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Highlander/kluger	Body	○	●	●	●	●	
Highlander/kluger	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Highlander/kluger	Driver door	○	●	●	●	●	
Highlander/kluger	Sliding roof	○	○	○	●	●	
Hilux	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Hilux	Cruise control	○	●	●	●	●	0003 0036
Hilux	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Hilux	HI autoleveling	○	●	●	●	●	0042 0083 0056
Hilux	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Hilux	Srs airbag	○	●	●	●	●	0006
Hilux	Telematics	○	●	●	●	●	0048 0124
Hilux	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Hilux	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Hilux surf	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Hilux surf	Back door	○	●	●	●	●	
Hilux surf	Body	○	●	●	●	●	
Hilux surf	Driver door	○	●	●	●	●	
Hilux surf	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Hilux surf	Immobilizer	○	●	●	●	●	
Hilux surf	Srs airbag(sil)	○	●	●	●	●	0006
Hilux surf	4WD(CAN)	○	●	●	●	●	
Hilux surf	4WD(SIL)	○	●	●	●	●	
Hilux surf	A/C(CAN)	○	●	●	●	●	
Hilux surf	A/C(SIL)	○	●	●	●	●	
Hilux surf	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Hilux surf	AFS(SIL)	○	●	●	●	●	0043
Hilux surf	Accessory gateway	○	●	●	●	●	0002

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Hilux surf	Air suspension-ahc-tems	○	●	●	●	●	
Hilux surf	Back guide monitor ipa	○	●	●	●	●	
Hilux surf	Body no.2	○	●	●	●	●	
Hilux surf	Clearance sonar	○	●	●	●	●	0046
Hilux surf	D-door motor	○	●	●	●	●	0016
Hilux surf	D-seat sw	○	○	○	●	●	
Hilux surf	Driver seat	○	○	○	●	●	
Hilux surf	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Hilux surf	Electric power steering (sil rack type)	○	●	●	●	●	
Hilux surf	Gateway	○	●	●	●	●	0002 0019 0007 0020
Hilux surf	Immobilizer (built-in engine)	○	●	●	●	●	
Hilux surf	Master switch	○	●	●	●	●	0016
Hilux surf	Meter (can)	○	●	●	●	●	
Hilux surf	Meter(sil)	○	○	○	●	●	
Hilux surf	Mirror	○	○	○	●	●	
Hilux surf	Mirror l	○	○	○	●	●	
Hilux surf	Mirror(left and right)	○	○	○	●	●	
Hilux surf	P-door motor	○	●	●	●	●	0016
Hilux surf	Passenger door	○	●	●	●	●	
Hilux surf	Passenger seat	○	○	○	●	●	
Hilux surf	Power source control	○	●	●	●	●	0041
Hilux surf	Rear left door	○	●	●	●	●	
Hilux surf	Rear left seat	○	○	○	●	●	
Hilux surf	Rear right door	○	●	●	●	●	
Hilux surf	Rear right seat	○	○	○	●	●	
Hilux surf	Rl-door motor	○	●	●	●	●	0016
Hilux surf	Rr-door motor	○	●	●	●	●	0016
Hilux surf	Security (can)	○	●	●	●	●	
Hilux surf	Security (sil)	○	●	●	●	●	
Hilux surf	Sliding roof	○	●	●	●	●	
Hilux surf	Srs airbag(sil2)	○	●	●	●	●	0006
Hilux surf	Steering pad switch	○	○	○	●	●	
Hilux surf	Tilt&telescopic	○	●	●	●	●	0026
Hilux surf	AFS	○	●	●	●	●	
Hilux surf	Electric power steering (can brush / brushless)	○	●	●	●	●	
Hilux surf	Electric power steering (can rack type)	○	●	●	●	●	
Hilux surf	Srs airbag	○	●	●	●	●	0006
Hilux surf	ABS-VSC	○	●	●	●	●	
Hilux surf	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Hilux surf	Master switch	○	○	○	●	●	0016
Hilux surf	Meter	○	○	○	●	●	0172 0006 0174 0072
Hilux surf	Sliding roof	○	○	○	●	●	
Hilux surf	Electric power steering	○	●	●	●	●	
Hilux surf	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Hongqi	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Hongqi	AFS	○	●	●	●	●	
Hongqi	Air conditioner	○	●	●	●	●	0065
Hongqi	Back door	○	●	●	●	●	
Hongqi	Body	○	●	●	●	●	
Hongqi	Body no.3	○	●	●	●	●	
Hongqi	Body no.4	○	●	○	●	●	
Hongqi	Body no.5	○	○	○	●	●	
Hongqi	Clearance sonar	○	●	●	●	●	0046
Hongqi	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Hongqi	Combination switch	○	○	○	●	●	
Hongqi	Cruise control	○	●	●	●	●	0003 0036
Hongqi	Driver door	○	●	●	●	●	
Hongqi	Driver seat	○	○	○	●	●	
Hongqi	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Hongqi	EMPS	○	●	●	●	●	0006 0025
Hongqi	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Hongqi	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Hongqi	Gateway	○	●	●	●	●	0002 0019 0007 0020
Hongqi	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Hongqi	Master switch	○	○	○	●	●	0016
Hongqi	Night view	○	●	●	●	●	
Hongqi	Passenger door	○	●	●	●	●	
Hongqi	Power source control	○	●	●	●	●	0041
Hongqi	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Hongqi	Rear left door	○	●	●	●	●	
Hongqi	Rear right door	○	●	●	●	●	
Hongqi	Sliding roof	○	○	○	●	●	
Hongqi	Srs airbag	○	●	●	●	●	0006
Hongqi	Tilt&telescopic	○	●	●	●	●	0026
Innova/kijang innova	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Innova/kijang innova	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Innova/kijang innova	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Innova/kijang innova	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Innova/kijang innova	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Innova/kijang innova	Srs airbag	○	●	●	●	●	0006
Innova/kijang innova	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Ipsum	4WD(SIL)	○	●	●	●	●	
Ipsum	A/C(SIL)	○	●	●	●	●	
Ipsum	ABS-VSC	○	●	●	●	●	
Ipsum	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Ipsum	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Ipsum	AFS(SIL)	○	●	●	●	●	0043
Ipsum	Air suspension-ahc-tems	○	●	●	●	●	
Ipsum	Back door	○	●	●	●	●	
Ipsum	Body	○	●	●	●	●	
Ipsum	Body no.2	○	●	●	●	●	
Ipsum	Clearance sonar	○	●	●	●	●	0046
Ipsum	Cruise control	○	●	●	●	●	0003 0036
Ipsum	D-seat sw	○	○	○	●	●	
Ipsum	Driver door	○	●	●	●	●	
Ipsum	Driver seat	○	○	○	●	●	
Ipsum	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Ipsum	Electric power steering (sil rack type)	○	●	●	●	●	
Ipsum	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Ipsum	Gateway	○	●	●	●	●	0002 0019 0007 0020
Ipsum	Immobilizer	○	●	●	●	●	
Ipsum	Immobilizer (built-in engine)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ipsum	Master switch	○	○	○	●	●	0016
Ipsum	Meter	○	○	○	●	●	0172 0006 0174 0072
Ipsum	Mirror	○	○	○	●	●	
Ipsum	Mirror l	○	○	○	●	●	
Ipsum	Mirror(left and right)	○	○	○	●	●	
Ipsum	Passenger door	○	●	●	●	●	
Ipsum	Passenger seat	○	○	○	●	●	
Ipsum	Power source control	○	●	●	●	●	0041
Ipsum	Rear left door	○	●	●	●	●	
Ipsum	Rear left seat	○	○	○	●	●	
Ipsum	Rear right door	○	●	●	●	●	
Ipsum	Rear right seat	○	○	○	●	●	
Ipsum	Security (sil)	○	●	●	●	●	
Ipsum	Sliding roof	○	○	○	●	●	
Ipsum	Srs airbag(sil)	○	●	●	●	●	0006
Ipsum	Srs airbag(sil2)	○	●	●	●	●	0006
Ipsum	Steering pad switch	○	○	○	●	●	
Ipsum	Tilt&telescopic	○	●	●	●	●	0026
Iq	A/C(CAN)	○	●	●	●	●	
Iq	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Iq	Charging control	○	●	●	●	●	
Iq	D-door motor	○	●	●	●	●	0016
Iq	Electric power steering	○	●	●	●	●	
Iq	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Iq	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Iq	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Iq	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Iq	Master switch	○	●	●	●	●	0016
Iq	Meter (can)	○	●	●	●	●	
Iq	P-door motor	○	●	●	●	●	0016
Iq	Pm2 gateway	○	●	●	●	●	0002
Iq	Power source control	○	●	●	●	●	0041
Iq	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Iq	Srs airbag	○	●	●	●	●	0006
Iq	Starting control	○	●	●	●	●	
Iq	Security (can)	○	●	●	●	●	
Iq	Immobilizer	○	●	●	●	●	
Iq	Srs airbag(sil2)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Iq	Stop & start	○	●	●	●	●	
Isis	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Isis	Electric power steering	○	●	●	●	●	
Isis	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Isis	Immobilizer	○	●	●	●	●	
Isis	Srs airbag(sil)	○	●	●	●	●	0006
Isis	4WD(SIL)	○	●	●	●	●	
Isis	A/C(SIL)	○	●	●	●	●	
Isis	ABS-VSC	○	●	●	●	●	
Isis	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Isis	AFS(SIL)	○	●	●	●	●	0043
Isis	Air suspension-ahc-tems	○	●	●	●	●	
Isis	Back door	○	●	●	●	●	
Isis	Body	○	●	●	●	●	
Isis	Body no.2	○	●	●	●	●	
Isis	Clearance sonar	○	●	●	●	●	0046
Isis	D-seat sw	○	○	○	●	●	
Isis	Driver door	○	●	●	●	●	
Isis	Driver seat	○	○	○	●	●	
Isis	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Isis	Electric power steering (sil rack type)	○	●	●	●	●	
Isis	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Isis	Gateway	○	●	●	●	●	0002 0019 0007 0020
Isis	Immobilizer (built-in engine)	○	●	●	●	●	
Isis	Master switch	○	○	○	●	●	0016
Isis	Meter	○	○	○	●	●	0172 0006 0174 0072
Isis	Mirror	○	○	○	●	●	
Isis	Mirror l	○	○	○	●	●	
Isis	Mirror(letf and right)	○	○	○	●	●	
Isis	Passenger door	○	●	●	●	●	
Isis	Passenger seat	○	○	○	●	●	
Isis	Power source control	○	●	●	●	●	0041
Isis	Rear left door	○	●	●	●	●	
Isis	Rear left seat	○	○	○	●	●	
Isis	Rear right door	○	●	●	●	●	
Isis	Rear right seat	○	○	○	●	●	
Isis	Security (sil)	○	●	●	●	●	
Isis	Sliding roof	○	○	○	●	●	
Isis	Srs airbag(sil2)	○	●	●	●	●	0006
Isis	Steering pad switch	○	○	○	●	●	
Isis	Tilt&telescopic	○	●	●	●	●	0026
Isis	4WD(CAN)	○	●	●	●	●	
Isis	Accessory gateway	○	●	●	●	●	0002

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Isis	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Isis	Meter (can)	○	●	●	●	●	
Ist	4WD(SIL)	○	●	●	●	●	
Ist	A/C(SIL)	○	●	●	●	●	
Ist	ABS-VSC	○	●	●	●	●	
Ist	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Ist	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Ist	AFS(SIL)	○	●	●	●	●	0043
Ist	Air suspension-ahc-tems	○	●	●	●	●	
Ist	Body	○	●	●	●	●	
Ist	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Ist	Electric power steering (sil rack type)	○	●	●	●	●	
Ist	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Ist	Gateway	○	●	●	●	●	0002 0019 0007 0020
Ist	Immobilizer	○	●	●	●	●	
Ist	Immobilizer (built-in engine)	○	●	●	●	●	
Ist	Master switch	○	○	○	●	●	0016
Ist	Meter	○	○	○	●	●	0172 0006 0174 0072
Ist	Security (sil)	○	●	●	●	●	
Ist	Sliding roof	○	○	○	●	●	
Ist	Srs airbag(sil)	○	●	●	●	●	0006
Ist	Srs airbag(sil2)	○	●	●	●	●	0006
Ist	Steering pad switch	○	○	○	●	●	
Ist	Electric power steering	○	●	●	●	●	
Ist	Electric power steering (can brush / brushless)	○	●	●	●	●	
Ist	Electric power steering (can rack type)	○	●	●	●	●	
Ist	Srs airbag	○	●	●	●	●	0006
Ist	4WD(CAN)	○	●	●	●	●	
Ist	A/C(CAN)	○	●	●	●	●	
Ist	Accessory gateway	○	●	●	●	●	0002
Ist	D-door motor	○	●	●	●	●	0016
Ist	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ist	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Ist	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Ist	Meter (can)	○	●	●	●	●	
Ist	Security (can)	○	●	●	●	●	
Key regist	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Key regist	Entry&start(can)	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138
Kluger	4WD(SIL)	○	●	●	●	●	
Kluger	A/C(SIL)	○	●	●	●	●	
Kluger	ABS-VSC	○	●	●	●	●	
Kluger	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Kluger	AFS(SIL)	○	●	●	●	●	0043
Kluger	ARS	○	●	●	●	●	0006
Kluger	Air suspension-ahc-tems	○	●	●	●	●	
Kluger	Back door	○	●	●	●	●	
Kluger	Body	○	●	●	●	●	
Kluger	Body no.2	○	●	●	●	●	
Kluger	Body no.3	○	●	●	●	●	
Kluger	Body no.4	○	●	○	●	●	
Kluger	Body no.5	○	○	○	●	●	
Kluger	Clearance sonar	○	●	●	●	●	0046
Kluger	Combination switch	○	○	○	●	●	
Kluger	D-seat sw	○	○	○	●	●	
Kluger	Driver door	○	●	●	●	●	
Kluger	Driver seat	○	○	○	●	●	
Kluger	Electric power steering	○	●	●	●	●	
Kluger	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Kluger	Gateway	○	●	●	●	●	0002 0019 0007 0020
Kluger	Immobilizer	○	●	●	●	●	
Kluger	Immobilizer (built-in engine)	○	●	●	●	●	
Kluger	Master switch	○	○	○	●	●	0016
Kluger	Meter	○	○	○	●	●	0172 0006 0174 0072
Kluger	Mirror	○	○	○	●	●	
Kluger	Mirror l	○	○	○	●	●	
Kluger	Mirror(left and right)	○	○	○	●	●	
Kluger	Night view	○	●	●	●	●	
Kluger	Passenger door	○	●	●	●	●	
Kluger	Passenger seat	○	○	○	●	●	
Kluger	Power source control	○	●	●	●	●	0041
Kluger	Rain sensor	○	○	○	●	●	
Kluger	Rear left door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Kluger	Rear left seat	○	○	○	●	●	
Kluger	Rear right door	○	●	●	●	●	
Kluger	Rear right seat	○	○	○	●	●	
Kluger	Security (sil)	○	●	●	●	●	
Kluger	Sliding roof	○	○	○	●	●	
Kluger	Srs airbag(sil)	○	●	●	●	●	0006
Kluger	Srs airbag(sil2)	○	●	●	●	●	0006
Kluger	Steering pad switch	○	○	○	●	●	
Kluger	Tilt&telescopic	○	●	●	●	●	0026
Kluger	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Kluger	VGRS	○	●	●	●	●	0005 0006
Kluger	Wiper	○	○	○	●	●	
Kluger	ECT(SIL)	○	●	●	●	●	0001 0006
Kluger	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Kluger	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Kluger	Electric power steering (sil rack type)	○	●	●	●	●	
Kluger	Stabilizer	○	●	●	●	●	
Kluger	Cruise control	○	●	●	●	●	0003 0036
Kluger hv	4WD(CAN)	○	●	●	●	●	
Kluger hv	4WD(SIL)	○	●	●	●	●	
Kluger hv	A/C(CAN)	○	●	●	●	●	
Kluger hv	A/C(SIL)	○	●	●	●	●	
Kluger hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Kluger hv	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Kluger hv	AFS(SIL)	○	●	●	●	●	0043
Kluger hv	Accessory gateway	○	●	●	●	●	0002
Kluger hv	Air suspension-ahc-tems	○	●	●	●	●	
Kluger hv	Back door	○	●	●	●	●	
Kluger hv	Back guide monitor ipa	○	●	●	●	●	
Kluger hv	Body	○	●	●	●	●	
Kluger hv	Body no.2	○	●	●	●	●	
Kluger hv	Body no.3	○	●	●	●	●	
Kluger hv	Body no.4	○	●	○	●	●	
Kluger hv	Body no.5	○	○	○	●	●	
Kluger hv	Clearance sonar	○	●	●	●	●	0046
Kluger hv	Combination switch	○	○	○	●	●	
Kluger hv	D-door motor	○	●	●	●	●	0016
Kluger hv	D-seat sw	○	○	○	●	●	
Kluger hv	Driver door	○	●	●	●	●	
Kluger hv	Driver seat	○	○	○	●	●	
Kluger hv	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Kluger hv	Electric power steering (sil rack type)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Kluger hv	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Kluger hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Kluger hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Kluger hv	HV(CAN)	○	●	●	●	●	
Kluger hv	Immobilizer	○	●	●	●	●	
Kluger hv	Immobilizer (built-in engine)	○	●	●	●	●	
Kluger hv	Lane keeping assist	○	●	●	●	●	0153
Kluger hv	Master switch	○	●	●	●	●	0016
Kluger hv	Meter (can)	○	●	●	●	●	
Kluger hv	Meter(sil)	○	○	○	●	●	
Kluger hv	Mirror	○	○	○	●	●	
Kluger hv	Mirror l	○	○	○	●	●	
Kluger hv	Mirror(letf and right)	○	○	○	●	●	
Kluger hv	Night view	○	●	●	●	●	
Kluger hv	P-door motor	○	●	●	●	●	0016
Kluger hv	Passenger door	○	●	●	●	●	
Kluger hv	Passenger seat	○	○	○	●	●	
Kluger hv	Power source control	○	●	●	●	●	0041
Kluger hv	Rain sensor	○	○	○	●	●	
Kluger hv	Rear left door	○	●	●	●	●	
Kluger hv	Rear left seat	○	○	○	●	●	
Kluger hv	Rear right door	○	●	●	●	●	
Kluger hv	Rear right seat	○	○	○	●	●	
Kluger hv	Remote security	○	●	●	●	●	
Kluger hv	Rl-door motor	○	●	●	●	●	0016
Kluger hv	Rr-door motor	○	●	●	●	●	0016
Kluger hv	Security (can)	○	●	●	●	●	
Kluger hv	Security (sil)	○	●	●	●	●	
Kluger hv	Sliding roof	○	●	●	●	●	
Kluger hv	Srs airbag(sil)	○	●	●	●	●	0006
Kluger hv	Srs airbag(sil2)	○	●	●	●	●	0006
Kluger hv	Stabilizer	○	●	●	●	●	
Kluger hv	Steering pad switch	○	○	○	●	●	
Kluger hv	Tilt&telescopic	○	●	●	●	●	0026
Kluger hv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Kluger hv	Transmission control	○	●	●	●	●	
Kluger hv	VGRS	○	●	●	●	●	0005 0006
Kluger hv	Wiper	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Kluger hv	ABS-VSC	○	●	●	●	●	
Kluger hv	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Kluger hv	Electric power steering	○	●	●	●	●	
Kluger hv	Master switch	○	○	○	●	●	0016
Kluger hv	Meter	○	○	○	●	●	0172 0006 0174 0072
Kluger hv	Sliding roof	○	○	○	●	●	
Land cr prado	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Land cr prado	AFS	○	●	●	●	●	
Land cr prado	Air conditioner	○	●	●	●	●	0065
Land cr prado	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Land cr prado	Clearance sonar	○	●	●	●	●	0046
Land cr prado	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Land cr prado	D-door motor	○	●	●	●	●	0016
Land cr prado	D-seat sw	○	●	●	●	●	
Land cr prado	Driver seat	○	●	●	●	●	
Land cr prado	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Land cr prado	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Land cr prado	KDSS	○	●	●	●	●	0006 0103
Land cr prado	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Land cr prado	Master switch	○	●	●	●	●	0016
Land cr prado	Navigation system	○	●	●	●	●	
Land cr prado	P-door motor	○	●	●	●	●	0016
Land cr prado	PPS	○	●	●	●	●	0025 0006
Land cr prado	Parking assist monitor system	○	●	●	●	●	
Land cr prado	Pm1 gateway	○	●	●	●	●	0002
Land cr prado	Pm2 gateway	○	●	●	●	●	0002
Land cr prado	Power source control	○	●	●	●	●	0041
Land cr prado	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Land cr prado	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cr prado	Radar cruise	○	●	●	●	●	0003 0035 0036
Land cr prado	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Land cr prado	Rl-door motor	○	●	●	●	●	0016
Land cr prado	Rr-door motor	○	●	●	●	●	0016
Land cr prado	Sliding roof	○	●	●	●	●	
Land cr prado	Srs airbag	○	●	●	●	●	0006
Land cr prado	Starting control	○	●	●	●	●	
Land cr prado	Tilt&telescopic	○	●	●	●	●	0026
Land cr prado	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Land cr prado	Cruise control	○	●	●	●	●	0003 0036
Land cr prado	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Land cr prado	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Land cr prado	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Land cr prado	Gateway	○	●	●	●	●	0002 0019 0007 0020
Land cr prado	Telematics	○	●	●	●	●	0048 0124
Land cr prado	Charging control	○	●	●	●	●	
Land cr prado	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Land cr prado	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Land cr.	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Land cr.	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Land cr.	Body	○	●	●	●	●	
Land cr.	Cruise control	○	●	●	●	●	0003 0036
Land cr.	Driver door	○	●	●	●	●	
Land cr.	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cr.	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Land cr.	Srs airbag	○	●	●	●	●	0006
Land cr.	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Land cr.	AHC	○	●	●	●	●	0054 0006 0158 0152
Land cr.	Accessory gateway	○	●	●	●	●	0002
Land cr.	Air conditioner	○	●	●	●	●	0065
Land cr.	Body no.4	○	●	●	●	●	
Land cr.	Body no.5	○	●	●	●	●	
Land cr.	Clearance sonar	○	●	●	●	●	0046
Land cr.	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Land cr.	D-door motor	○	●	●	●	●	0016
Land cr.	Driver seat	○	●	●	●	●	
Land cr.	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Land cr.	Gateway	○	●	●	●	●	0002 0019 0007 0020
Land cr.	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Land cr.	Master switch	○	●	●	●	●	0016
Land cr.	Mirror	○	●	●	●	●	
Land cr.	P-door motor	○	●	●	●	●	0016
Land cr.	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Land cr.	Rain sensor	○	●	●	●	●	
Land cr.	Rl-door motor	○	●	●	●	●	0016
Land cr.	Rr-door motor	○	●	●	●	●	0016
Land cr.	Sliding roof	○	●	●	●	●	
Land cr.	Tilt&telescopic	○	●	●	●	●	0026
Land cr.	VGRS	○	●	●	●	●	0005 0006
Land cr.	AFS	○	●	●	●	●	
Land cr.	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Land cr.	Navigation system	○	●	●	●	●	
Land cr.	PPS	○	●	●	●	●	0025 0006
Land cr.	Parking assist monitor system	○	●	●	●	●	
Land cr.	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Land cr.	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cr.	Back door	○	●	●	●	●	
Land cr.	Radar cruise	○	●	●	●	●	0003 0035 0036
Land cr.	Occupant detection	○	●	●	●	●	0032
Land cr.	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Land cr.	Telematics	○	●	●	●	●	0048 0124
Land cr.	Driver seat	○	○	○	●	●	
Land cr.	Mirror	○	○	○	●	●	
Land cr.	Rain sensor	○	○	○	●	●	
Land cr.	Wiper	○	○	○	●	●	
Land cruiser	4WD(SIL)	○	●	●	●	●	
Land cruiser	A/C(SIL)	○	●	●	●	●	
Land cruiser	ABS-VSC	○	●	●	●	●	
Land cruiser	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Land cruiser	ARS	○	●	●	●	●	0006
Land cruiser	Air suspension-ahc-tems	○	●	●	●	●	
Land cruiser	Back door	○	●	●	●	●	
Land cruiser	Body	○	●	●	●	●	
Land cruiser	Body no.2	○	●	●	●	●	
Land cruiser	Body no.3	○	●	●	●	●	
Land cruiser	Body no.4	○	●	○	●	●	
Land cruiser	Body no.5	○	○	○	●	●	
Land cruiser	Clearance sonar	○	●	●	●	●	0046
Land cruiser	Combination switch	○	○	○	●	●	
Land cruiser	Cruise control	○	●	●	●	●	0003 0036
Land cruiser	D-seat sw	○	○	○	●	●	
Land cruiser	Driver door	○	●	●	●	●	
Land cruiser	Driver seat	○	○	○	●	●	
Land cruiser	Electric power steering	○	●	●	●	●	
Land cruiser	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Land cruiser	Gateway	○	●	●	●	●	0002 0019 0007 0020
Land cruiser	Immobilizer	○	●	●	●	●	
Land cruiser	Immobilizer (built-in engine)	○	●	●	●	●	
Land cruiser	Master switch	○	○	○	●	●	0016
Land cruiser	Meter	○	○	○	●	●	0172 0006 0174 0072
Land cruiser	Mirror	○	○	○	●	●	
Land cruiser	Mirror l	○	○	○	●	●	
Land cruiser	Mirror(left and right)	○	○	○	●	●	
Land cruiser	Night view	○	●	●	●	●	
Land cruiser	Passenger door	○	●	●	●	●	
Land cruiser	Passenger seat	○	○	○	●	●	
Land cruiser	Rain sensor	○	○	○	●	●	
Land cruiser	Rear left door	○	●	●	●	●	
Land cruiser	Rear left seat	○	○	○	●	●	
Land cruiser	Rear right door	○	●	●	●	●	
Land cruiser	Rear right seat	○	○	○	●	●	
Land cruiser	Security (sil)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cruiser	Sliding roof	○	○	○	●	●	
Land cruiser	Srs airbag(sil)	○	●	●	●	●	0006
Land cruiser	Steering pad switch	○	○	○	●	●	
Land cruiser	Tilt&telescopic	○	●	●	●	●	0026
Land cruiser	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Land cruiser	AFS(SIL)	○	●	●	●	●	0043
Land cruiser	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Land cruiser	Electric power steering (sil rack type)	○	●	●	●	●	
Land cruiser	Power source control	○	●	●	●	●	0041
Land cruiser	Srs airbag(sil2)	○	●	●	●	●	0006
Land cruiser	Stabilizer	○	●	●	●	●	
Land cruiser	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Land cruiser	VGRS	○	●	●	●	●	0005 0006
Land cruiser	Wiper	○	○	○	●	●	
Land cruiser	A/C(CAN)	○	●	●	●	●	
Land cruiser	AFS	○	●	●	●	●	
Land cruiser	Accessory gateway	○	●	●	●	●	0002
Land cruiser	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Land cruiser	Back guide monitor ipa	○	●	●	●	●	
Land cruiser	Body no.4	○	●	●	●	●	
Land cruiser	Body no.5	○	●	●	●	●	
Land cruiser	D-door motor	○	●	●	●	●	0016
Land cruiser	Driver seat	○	●	●	●	●	
Land cruiser	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Land cruiser	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Land cruiser	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Land cruiser	Master switch	○	●	●	●	●	0016
Land cruiser	Meter (can)	○	●	●	●	●	
Land cruiser	Mirror	○	●	●	●	●	
Land cruiser	Navigation system	○	●	●	●	●	
Land cruiser	P-door motor	○	●	●	●	●	0016
Land cruiser	Pre-crash 1 (can)	○	●	●	●	●	
Land cruiser	Rain sensor	○	●	●	●	●	
Land cruiser	Remote security	○	●	●	●	●	
Land cruiser	Rl-door motor	○	●	●	●	●	0016
Land cruiser	Rr-door motor	○	●	●	●	●	0016
Land cruiser	Sliding roof	○	●	●	●	●	
Land cruiser	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cruiser	Radar cruise	○	●	●	●	●	0003 0035 0036
Land cruiser	ECT(SIL)	○	●	●	●	●	0001 0006
Land cruiser	Meter(sil)	○	○	○	●	●	
Land cruiser	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Land cruiser	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Land cruiser	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Land cruiser	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Land cruiser	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Land cruiser	AHC	○	●	●	●	●	0054 0006 0158 0152
Land cruiser	Occupant detection	○	●	●	●	●	0032
Land cruiser	Air conditioner	○	●	●	●	●	0065
Land cruiser	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Land cruiser	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Land cruiser	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Land cruiser	Advanced parking guidance system	○	●	●	●	●	
Land cruiser	Telematics	○	●	●	●	●	0048 0124
Land cruiser prado	4WD(CAN)	○	●	●	●	●	
Land cruiser prado	4WD(SIL)	○	●	●	●	●	
Land cruiser prado	A/C(CAN)	○	●	●	●	●	
Land cruiser prado	A/C(SIL)	○	●	●	●	●	
Land cruiser prado	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Land cruiser prado	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Land cruiser prado	AFS(SIL)	○	●	●	●	●	0043
Land cruiser prado	Accessory gateway	○	●	●	●	●	0002
Land cruiser prado	Air suspension-ahc-tems	○	●	●	●	●	
Land cruiser prado	Back door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cruiser prado	Back guide monitor ipa	○	●	●	●	●	
Land cruiser prado	Body	○	●	●	●	●	
Land cruiser prado	Body no.2	○	●	●	●	●	
Land cruiser prado	Body no.3	○	●	●	●	●	
Land cruiser prado	Body no.4	○	●	○	●	●	
Land cruiser prado	Body no.5	○	○	○	●	●	
Land cruiser prado	Clearance sonar	○	●	●	●	●	0046
Land cruiser prado	Combination switch	○	○	○	●	●	
Land cruiser prado	Cruise control	○	●	●	●	●	0003 0036
Land cruiser prado	D-door motor	○	●	●	●	●	0016
Land cruiser prado	D-seat sw	○	○	○	●	●	
Land cruiser prado	Driver door	○	●	●	●	●	
Land cruiser prado	Driver seat	○	○	○	●	●	
Land cruiser prado	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Land cruiser prado	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Land cruiser prado	Electric power steering (sil rack type)	○	●	●	●	●	
Land cruiser prado	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Land cruiser prado	Gateway	○	●	●	●	●	0002 0019 0007 0020
Land cruiser prado	Immobilizer	○	●	●	●	●	
Land cruiser prado	Immobilizer (built-in engine)	○	●	●	●	●	
Land cruiser prado	Lane keeping assist	○	●	●	●	●	0153
Land cruiser prado	Master switch	○	●	●	●	●	0016
Land cruiser prado	Meter (can)	○	●	●	●	●	
Land cruiser prado	Meter(sil)	○	○	○	●	●	
Land cruiser prado	Mirror	○	○	○	●	●	
Land cruiser prado	Mirror l	○	○	○	●	●	
Land cruiser prado	Mirror(letf and right)	○	○	○	●	●	
Land cruiser prado	Night view	○	●	●	●	●	
Land cruiser prado	P-door motor	○	●	●	●	●	0016
Land cruiser prado	Passenger door	○	●	●	●	●	
Land cruiser prado	Passenger seat	○	○	○	●	●	
Land cruiser prado	Power source control	○	●	●	●	●	0041
Land cruiser prado	Rain sensor	○	○	○	●	●	
Land cruiser prado	Rear left door	○	●	●	●	●	
Land cruiser prado	Rear left seat	○	○	○	●	●	
Land cruiser prado	Rear right door	○	●	●	●	●	
Land cruiser prado	Rear right seat	○	○	○	●	●	
Land cruiser prado	Remote security	○	●	●	●	●	
Land cruiser prado	Rl-door motor	○	●	●	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cruiser prado	Rr-door motor	○	●	●	●	●	0016
Land cruiser prado	Security (can)	○	●	●	●	●	
Land cruiser prado	Security (sil)	○	●	●	●	●	
Land cruiser prado	Sliding roof	○	●	●	●	●	
Land cruiser prado	Srs airbag(sil)	○	●	●	●	●	0006
Land cruiser prado	Srs airbag(sil2)	○	●	●	●	●	0006
Land cruiser prado	Stabilizer	○	●	●	●	●	
Land cruiser prado	Steering pad switch	○	○	○	●	●	
Land cruiser prado	Tilt&telescopic	○	●	●	●	●	0026
Land cruiser prado	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Land cruiser prado	VGRS	○	●	●	●	●	0005 0006
Land cruiser prado	Wiper	○	○	○	●	●	
Land cruiser prado	AFS	○	●	●	●	●	
Land cruiser prado	Electric power steering (can brush / brushless)	○	●	●	●	●	
Land cruiser prado	Electric power steering (can rack type)	○	●	●	●	●	
Land cruiser prado	Srs airbag	○	●	●	●	●	0006
Land cruiser prado	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Land cruiser prado	D-seat sw	○	●	●	●	●	
Land cruiser prado	Driver seat	○	●	●	●	●	
Land cruiser prado	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Land cruiser prado	KDSS	○	●	●	●	●	0006 0103
Land cruiser prado	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Land cruiser prado	Navigation system	○	●	●	●	●	
Land cruiser prado	PPS	○	●	●	●	●	0025 0006
Land cruiser prado	Pm1 gateway	○	●	●	●	●	0002
Land cruiser prado	Pm2 gateway	○	●	●	●	●	0002
Land cruiser prado	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Land cruiser prado	Starting control	○	●	●	●	●	
Land cruiser prado	Pre-crash 1 (can)	○	●	●	●	●	
Land cruiser prado	Radar cruise	○	●	●	●	●	0003 0035 0036
Land cruiser prado	Two pre-crash	○	●	●	●	●	
Land cruiser prado	ABS-VSC	○	●	●	●	●	
Land cruiser prado	ARS	○	●	●	●	●	0006
Land cruiser prado	ECT(SIL)	○	●	●	●	●	0001 0006
Land cruiser prado	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Land cruiser prado	Master switch	○	○	○	●	●	0016
Land cruiser prado	Meter	○	○	○	●	●	0172 0006 0174 0072
Land cruiser prado	Sliding roof	○	○	○	●	●	
Land cruiser prado	Rear seat switch	○	○	○	●	●	
Land cruiser prado	Electric power steering	○	●	●	●	●	
Land cruiser prado	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Land cruiser prado	Charging control	○	●	●	●	●	
Liteace	4WD(SIL)	○	●	●	●	●	
Liteace	ABS-VSC	○	●	●	●	●	
Liteace	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Liteace	ARS	○	●	●	●	●	0006
Liteace	Electric power steering	○	●	●	●	●	
Liteace	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Liteace	Immobilizer	○	●	●	●	●	
Liteace	Immobilizer (built-in engine)	○	●	●	●	●	
Liteace	Meter	○	○	○	●	●	0172 0006 0174 0072
Liteace	Srs airbag(sil)	○	●	●	●	●	0006
Liteace	Srs airbag(sil2)	○	●	●	●	●	0006
Liteace	VGRS	○	●	●	●	●	0005 0006
Liteace	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Liteace	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Liteace	Electric power steering (sil rack type)	○	●	●	●	●	
Liteace	A/B	○	●	●	●	●	0023 0006 0174
Liteace	A/T	○	●	●	●	●	0016
Liteace	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Liteace	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Liteace	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Liteace	Srs airbag	○	●	●	●	●	0006
Mark x	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Mark x	Air conditioner	○	●	●	●	●	0065
Mark x	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Mark x	Charging control	○	●	●	●	●	
Mark x	Clearance sonar	○	●	●	●	●	0046
Mark x	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Mark x	Cruise control	○	●	●	●	●	0003 0036
Mark x	D-door motor	○	●	●	●	●	0016
Mark x	Driver seat	○	●	●	●	●	
Mark x	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Mark x	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Mark x	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Mark x	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Mark x	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Mark x	Master switch	○	●	●	●	●	0016
Mark x	P-door motor	○	●	●	●	●	0016
Mark x	Pm1 gateway	○	●	●	●	●	0002
Mark x	Pm2 gateway	○	●	●	●	●	0002
Mark x	Power source control	○	●	●	●	●	0041
Mark x	Rl-door motor	○	●	●	●	●	0016
Mark x	Rr-door motor	○	●	●	●	●	0016
Mark x	Sliding roof	○	●	●	●	●	
Mark x	Srs airbag	○	●	●	●	●	0006
Mark x	Starting control	○	●	●	●	●	
Mark x	4WD(CAN)	○	●	●	●	●	
Mark x	A/C(CAN)	○	●	●	●	●	
Mark x	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Mark x	AFS	○	●	●	●	●	
Mark x	Back guide monitor ipa	○	●	●	●	●	
Mark x	Electric power steering	○	●	●	●	●	
Mark x	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Mark x	Meter (can)	○	●	●	●	●	
Mark x	Navigation system	○	●	●	●	●	
Mark x	Pre-crash 1 (can)	○	●	●	●	●	
Mark x	Radar cruise (built-dss1)	○	●	●	●	●	
Mark x	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Mark x	Tilt&telescopic	○	●	●	●	●	0026
Mark x	Two pre-crash	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Mark x	VGRS	○	●	●	●	●	0005 0006
Mark x	Immobilizer	○	●	●	●	●	
Mark x	Security (can)	○	●	●	●	●	
Mark x	4WD(SIL)	○	●	●	●	●	
Mark x	A/C(SIL)	○	●	●	●	●	
Mark x	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Mark x	AFS(SIL)	○	●	●	●	●	0043
Mark x	Air suspension-ahc-tems	○	●	●	●	●	
Mark x	Body	○	●	●	●	●	
Mark x	Body no.5	○	○	○	●	●	
Mark x	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Mark x	Gateway	○	●	●	●	●	0002 0019 0007 0020
Mark x	Master switch	○	○	○	●	●	0016
Mark x	Meter	○	○	○	●	●	0172 0006 0174 0072
Mark x	Radar cruise	○	●	●	●	●	0003 0035 0036
Mark x	Sliding roof	○	○	○	●	●	
Mark x	Srs airbag(sil2)	○	●	●	●	●	0006
Mark x	Accessory gateway	○	●	●	●	●	0002
Mark x	Back door	○	●	●	●	●	
Mark x	Body no.2	○	●	●	●	●	
Mark x	Body no.3	○	●	●	●	●	
Mark x	Body no.4	○	●	○	●	●	
Mark x	Combination switch	○	○	○	●	●	
Mark x	D-seat sw	○	○	○	●	●	
Mark x	Driver door	○	●	●	●	●	
Mark x	Driver seat	○	○	○	●	●	
Mark x	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Mark x	Electric power steering (sil rack type)	○	●	●	●	●	
Mark x	Lane keeping assist	○	●	●	●	●	0153
Mark x	Meter(sil)	○	○	○	●	●	
Mark x	Mirror	○	○	○	●	●	
Mark x	Mirror l	○	○	○	●	●	
Mark x	Mirror(left and right)	○	○	○	●	●	
Mark x	Night view	○	●	●	●	●	
Mark x	Passenger door	○	●	●	●	●	
Mark x	Passenger seat	○	○	○	●	●	
Mark x	Rain sensor	○	○	○	●	●	
Mark x	Rear left door	○	●	●	●	●	
Mark x	Rear left seat	○	○	○	●	●	
Mark x	Rear right door	○	●	●	●	●	
Mark x	Rear right seat	○	○	○	●	●	
Mark x	Remote security	○	●	●	●	●	
Mark x	Security (sil)	○	●	●	●	●	
Mark x	Srs airbag(sil)	○	●	●	●	●	0006
Mark x	Stabilizer	○	●	●	●	●	
Mark x	Steering pad switch	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Mark x	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Mark x	Wiper	○	○	○	●	●	
Mark x	Immobilizer (built-in engine)	○	●	●	●	●	
Mark x zio	4WD(CAN)	○	●	●	●	●	
Mark x zio	A/C(CAN)	○	●	●	●	●	
Mark x zio	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Mark x zio	AFS	○	●	●	●	●	
Mark x zio	Accessory gateway	○	●	●	●	●	0002
Mark x zio	Back guide monitor ipa	○	●	●	●	●	
Mark x zio	Clearance sonar	○	●	●	●	●	0046
Mark x zio	D-door motor	○	●	●	●	●	0016
Mark x zio	Electric power steering	○	●	●	●	●	
Mark x zio	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Mark x zio	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Mark x zio	Gateway	○	●	●	●	●	0002 0019 0007 0020
Mark x zio	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Mark x zio	Master switch	○	●	●	●	●	0016
Mark x zio	Meter (can)	○	●	●	●	●	
Mark x zio	Navigation system	○	●	●	●	●	
Mark x zio	P-door motor	○	●	●	●	●	0016
Mark x zio	Rl-door motor	○	●	●	●	●	0016
Mark x zio	Rr-door motor	○	●	●	●	●	0016
Mark x zio	Srs airbag	○	●	●	●	●	0006
Mark x zio	Security (can)	○	●	●	●	●	
Mark x zio	Srs airbag(sil2)	○	●	●	●	●	0006
Mark x zio	Cruise control	○	●	●	●	●	0003 0036
Mark x zio	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030
Mark x zio	Pre-crash 1 (can)	○	●	●	●	●	
Mark x zio	Radar cruise	○	●	●	●	●	0003 0035 0036
Mark2 qualis/camry gracia	4WD(SIL)	○	●	●	●	●	
Mark2 qualis/camry gracia	A/C(SIL)	○	●	●	●	●	
Mark2 qualis/camry gracia	ABS-VSC	○	●	●	●	●	
Mark2 qualis/camry gracia	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Mark2 qualis/camry gracia	ARS	○	●	●	●	●	0006
Mark2 qualis/camry gracia	Air suspension-ahc-tems	○	●	●	●	●	
Mark2 qualis/camry gracia	Back door	○	●	●	●	●	
Mark2 qualis/camry gracia	Body	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Mark2 qualis/camry gracia	Body no.2	○	●	●	●	●	
Mark2 qualis/camry gracia	Body no.3	○	●	●	●	●	
Mark2 qualis/camry gracia	Body no.4	○	●	○	●	●	
Mark2 qualis/camry gracia	Body no.5	○	○	○	●	●	
Mark2 qualis/camry gracia	Clearance sonar	○	●	●	●	●	0046
Mark2 qualis/camry gracia	Combination switch	○	○	○	●	●	
Mark2 qualis/camry gracia	Cruise control	○	●	●	●	●	0003 0036
Mark2 qualis/camry gracia	D-seat sw	○	○	○	●	●	
Mark2 qualis/camry gracia	Driver door	○	●	●	●	●	
Mark2 qualis/camry gracia	Driver seat	○	○	○	●	●	
Mark2 qualis/camry gracia	Electric power steering	○	●	●	●	●	
Mark2 qualis/camry gracia	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Mark2 qualis/camry gracia	Gateway	○	●	●	●	●	0002 0019 0007 0020
Mark2 qualis/camry gracia	Immobilizer	○	●	●	●	●	
Mark2 qualis/camry gracia	Immobilizer (built-in engine)	○	●	●	●	●	
Mark2 qualis/camry gracia	Master switch	○	○	○	●	●	0016
Mark2 qualis/camry gracia	Meter	○	○	○	●	●	0172 0006 0174 0072
Mark2 qualis/camry gracia	Mirror	○	○	○	●	●	
Mark2 qualis/camry gracia	Mirror l	○	○	○	●	●	
Mark2 qualis/camry gracia	Mirror(left and right)	○	○	○	●	●	
Mark2 qualis/camry gracia	Night view	○	●	●	●	●	
Mark2 qualis/camry gracia	Passenger door	○	●	●	●	●	
Mark2 qualis/camry gracia	Passenger seat	○	○	○	●	●	
Mark2 qualis/camry gracia	Rain sensor	○	○	○	●	●	
Mark2 qualis/camry gracia	Rear left door	○	●	●	●	●	
Mark2 qualis/camry gracia	Rear left seat	○	○	○	●	●	
Mark2 qualis/camry gracia	Rear right door	○	●	●	●	●	
Mark2 qualis/camry gracia	Rear right seat	○	○	○	●	●	
Mark2 qualis/camry gracia	Security (sil)	○	●	●	●	●	
Mark2 qualis/camry gracia	Sliding roof	○	○	○	●	●	
Mark2 qualis/camry gracia	Srs airbag(sil)	○	●	●	●	●	0006
Mark2 qualis/camry gracia	Steering pad switch	○	○	○	●	●	
Mark2 qualis/camry gracia	Tilt&telescopic	○	●	●	●	●	0026
Mark2/mark2 blit	4WD(SIL)	○	●	●	●	●	
Mark2/mark2 blit	A/C(SIL)	○	●	●	●	●	
Mark2/mark2 blit	ABS-VSC	○	●	●	●	●	
Mark2/mark2 blit	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Mark2/mark2 blit	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Mark2/mark2 blit	AFS(SIL)	○	●	●	●	●	0043
Mark2/mark2 blit	ARS	○	●	●	●	●	0006
Mark2/mark2 blit	Air suspension-ahc-tems	○	●	●	●	●	
Mark2/mark2 blit	Back door	○	●	●	●	●	
Mark2/mark2 blit	Body	○	●	●	●	●	
Mark2/mark2 blit	Body no.2	○	●	●	●	●	
Mark2/mark2 blit	Body no.3	○	●	●	●	●	
Mark2/mark2 blit	Body no.4	○	●	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Mark2/mark2 blit	Body no.5	○	○	○	●	●	
Mark2/mark2 blit	Clearance sonar	○	●	●	●	●	0046
Mark2/mark2 blit	Combination switch	○	○	○	●	●	
Mark2/mark2 blit	D-seat sw	○	○	○	●	●	
Mark2/mark2 blit	Driver door	○	●	●	●	●	
Mark2/mark2 blit	Driver seat	○	○	○	●	●	
Mark2/mark2 blit	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Mark2/mark2 blit	Electric power steering (sil rack type)	○	●	●	●	●	
Mark2/mark2 blit	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Mark2/mark2 blit	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Mark2/mark2 blit	Gateway	○	●	●	●	●	0002 0019 0007 0020
Mark2/mark2 blit	Immobilizer	○	●	●	●	●	
Mark2/mark2 blit	Immobilizer (built-in engine)	○	●	●	●	●	
Mark2/mark2 blit	Master switch	○	○	○	●	●	0016
Mark2/mark2 blit	Meter	○	○	○	●	●	0172 0006 0174 0072
Mark2/mark2 blit	Mirror	○	○	○	●	●	
Mark2/mark2 blit	Mirror l	○	○	○	●	●	
Mark2/mark2 blit	Mirror(letf and right)	○	○	○	●	●	
Mark2/mark2 blit	Night view	○	●	●	●	●	
Mark2/mark2 blit	Passenger door	○	●	●	●	●	
Mark2/mark2 blit	Passenger seat	○	○	○	●	●	
Mark2/mark2 blit	Power source control	○	●	●	●	●	0041
Mark2/mark2 blit	Rain sensor	○	○	○	●	●	
Mark2/mark2 blit	Rear left door	○	●	●	●	●	
Mark2/mark2 blit	Rear left seat	○	○	○	●	●	
Mark2/mark2 blit	Rear right door	○	●	●	●	●	
Mark2/mark2 blit	Rear right seat	○	○	○	●	●	
Mark2/mark2 blit	Security (sil)	○	●	●	●	●	
Mark2/mark2 blit	Sliding roof	○	○	○	●	●	
Mark2/mark2 blit	Srs airbag	○	●	●	●	●	0006
Mark2/mark2 blit	Srs airbag(sil)	○	●	●	●	●	0006
Mark2/mark2 blit	Stabilizer	○	●	●	●	●	
Mark2/mark2 blit	Steering pad switch	○	○	○	●	●	
Mark2/mark2 blit	Tilt&telescopic	○	●	●	●	●	0026
Mark2/mark2 blit	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Mark2/mark2 blit	VGRS	○	●	●	●	●	0005 0006
Mark2/mark2 blit	Wiper	○	○	○	●	●	
Mark2/mark2 blit	Cruise control	○	●	●	●	●	0003 0036
Mark2/mark2 blit	Electric power steering	○	●	●	●	●	
Mark2/mark2 blit	Srs airbag(sil2)	○	●	●	●	●	0006
Matrix	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Matrix	Accessory gateway	○	●	●	●	●	0002

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Matrix	Air conditioner	○	●	●	●	●	0065
Matrix	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Matrix	Cruise control	○	●	●	●	●	0003 0036
Matrix	EMPS	○	●	●	●	●	0006 0025
Matrix	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Matrix	Four wheel drive	○	●	●	●	●	0016 0081
Matrix	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Matrix	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Matrix	Occupant detection	○	●	●	●	●	0032
Matrix	Srs airbag	○	●	●	●	●	0006
Matrix	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Matrix	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Matrix	Gateway	○	●	●	●	●	0002 0019 0007 0020
Mr2	4WD(SIL)	○	●	●	●	●	
Mr2	A/C(SIL)	○	●	●	●	●	
Mr2	ABS-VSC	○	●	●	●	●	
Mr2	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Mr2	Air suspension-ahc-tems	○	●	●	●	●	
Mr2	Back door	○	●	●	●	●	
Mr2	Body	○	●	●	●	●	
Mr2	Body no.2	○	●	●	●	●	
Mr2	D-seat sw	○	○	○	●	●	
Mr2	Driver door	○	●	●	●	●	
Mr2	Driver seat	○	○	○	●	●	
Mr2	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Mr2	Gateway	○	●	●	●	●	0002 0019 0007 0020
Mr2	Immobilizer	○	●	●	●	●	
Mr2	Immobilizer (built-in engine)	○	●	●	●	●	
Mr2	Master switch	○	○	○	●	●	0016
Mr2	Mirror	○	○	○	●	●	
Mr2	Mirror l	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Mr2	Mirror(left and right)	○	○	○	●	●	
Mr2	Passenger door	○	●	●	●	●	
Mr2	Passenger seat	○	○	○	●	●	
Mr2	Rear left door	○	●	●	●	●	
Mr2	Rear left seat	○	○	○	●	●	
Mr2	Rear right door	○	●	●	●	●	
Mr2	Rear right seat	○	○	○	●	●	
Mr2	Security (sil)	○	●	●	●	●	
Mr2	Sliding roof	○	○	○	●	●	
Mr2	Srs airbag(sil)	○	●	●	●	●	0006
Mr2	Steering pad switch	○	○	○	●	●	
Mr2	Tilt&telescopic	○	●	●	●	●	0026
Mr2	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Mr2	EHPS	○	●	●	●	●	0025 0006
Mr2	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Mr2	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Mr2	Srs airbag	○	●	●	●	●	0006
Mr2	Sequential m/t	○	●	●	●	●	0001 0006
Mr2 spyder	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Mr2 spyder	EHPS	○	●	●	●	●	0025 0006
Mr2 spyder	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Mr2 spyder	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Mr2 spyder	Srs airbag	○	●	●	●	●	0006
Mr2 spyder	Cruise control	○	●	●	●	●	0003 0036
Mr2 spyder	Sequential m/t	○	●	●	●	●	0001 0006
Mr-s	ABS-VSC-ARS	○	●	●	●	●	
Mr-s	Electric power steering	○	●	●	●	●	
Mr-s	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Mr-s	Immobilizer (built-in engine)	○	●	●	●	●	
Mr-s	SMT	○	●	●	●	●	
Mr-s	Srs airbag(sil)	○	●	●	●	●	0006
Nadia	4WD(SIL)	○	●	●	●	●	
Nadia	A/C(SIL)	○	●	●	●	●	
Nadia	ABS-VSC	○	●	●	●	●	
Nadia	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Nadia	AFS(SIL)	○	●	●	●	●	0043
Nadia	Air suspension-ahc-tems	○	●	●	●	●	
Nadia	Back door	○	●	●	●	●	
Nadia	Body	○	●	●	●	●	
Nadia	Body no.2	○	●	●	●	●	
Nadia	Clearance sonar	○	●	●	●	●	0046
Nadia	D-seat sw	○	○	○	●	●	
Nadia	Driver door	○	●	●	●	●	
Nadia	Driver seat	○	○	○	●	●	
Nadia	Electric power steering	○	●	●	●	●	
Nadia	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Nadia	Gateway	○	●	●	●	●	0002 0019 0007 0020
Nadia	Immobilizer	○	●	●	●	●	
Nadia	Immobilizer (built-in engine)	○	●	●	●	●	
Nadia	Master switch	○	○	○	●	●	0016
Nadia	Meter	○	○	○	●	●	0172 0006 0174 0072
Nadia	Mirror	○	○	○	●	●	
Nadia	Mirror l	○	○	○	●	●	
Nadia	Mirror(left and right)	○	○	○	●	●	
Nadia	Passenger door	○	●	●	●	●	
Nadia	Passenger seat	○	○	○	●	●	
Nadia	Power source control	○	●	●	●	●	0041
Nadia	Rear left door	○	●	●	●	●	
Nadia	Rear left seat	○	○	○	●	●	
Nadia	Rear right door	○	●	●	●	●	
Nadia	Rear right seat	○	○	○	●	●	
Nadia	Security (sil)	○	●	●	●	●	
Nadia	Sliding roof	○	○	○	●	●	
Nadia	Srs airbag(sil)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Nadia	Srs airbag(sil2)	○	●	●	●	●	0006
Nadia	Steering pad switch	○	○	○	●	●	
Nadia	Tilt&telescopic	○	●	●	●	●	0026
NAV1	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
NAV1	Air conditioner	○	●	●	●	●	0065
NAV1	Back door	○	●	●	●	●	
NAV1	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
NAV1	D-door motor	○	●	●	●	●	0016
NAV1	EMPS	○	●	●	●	●	0006 0025
NAV1	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
NAV1	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
NAV1	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
NAV1	Master switch	○	●	●	●	●	0016
NAV1	P-door motor	○	●	●	●	●	0016
NAV1	Rear left door	○	●	●	●	●	
NAV1	Rear right door	○	●	●	●	●	
NAV1	RI-door motor	○	●	●	●	●	0016
NAV1	Rr-door motor	○	●	●	●	●	0016
NAV1	Sliding roof	○	●	●	●	●	
NAV1	Srs airbag	○	●	●	●	●	0006
Noah	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Noah	Air conditioner	○	●	●	●	●	0065
Noah	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Noah	D-door motor	○	●	●	●	●	0016
Noah	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Noah	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Noah	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Noah	HI autoleveling	○	●	●	●	●	0042 0083 0056
Noah	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Noah	Master switch	○	●	●	●	●	0016
Noah	P-door motor	○	●	●	●	●	0016
Noah	Power source control	○	●	●	●	●	0041
Noah	Rear left door	○	●	●	●	●	
Noah	Rear right door	○	●	●	●	●	
Noah	Rl-door motor	○	●	●	●	●	0016
Noah	Rr-door motor	○	●	●	●	●	0016
Noah	Sliding roof	○	●	●	●	●	
Noah	Srs airbag	○	●	●	●	●	0006
Noah	Starting control	○	●	●	●	●	
Noah	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Noah	Back door	○	●	●	●	●	
Noah	Four wheel drive	○	●	●	●	●	0016 0081
Noah	Navigation system	○	●	●	●	●	
Noah hv/voxy hv	A/C(CAN)	○	●	●	●	●	
Noah hv/voxy hv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Noah hv/voxy hv	Accessory gateway	○	●	●	●	●	0002
Noah hv/voxy hv	Cruise control	○	●	●	●	●	0003 0036
Noah hv/voxy hv	D-door motor	○	●	●	●	●	0016
Noah hv/voxy hv	Electric power steering	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Noah hv/voxy hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Noah hv/voxy hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Noah hv/voxy hv	HV	○	●	●	●	●	0002 0006
Noah hv/voxy hv	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Noah hv/voxy hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Noah hv/voxy hv	Master switch	○	●	●	●	●	0016
Noah hv/voxy hv	Meter (can)	○	●	●	●	●	
Noah hv/voxy hv	Navigation system	○	●	●	●	●	
Noah hv/voxy hv	P-door motor	○	●	●	●	●	0016
Noah hv/voxy hv	Power source control	○	●	●	●	●	0041
Noah hv/voxy hv	Rear left door	○	●	●	●	●	
Noah hv/voxy hv	Rear right door	○	●	●	●	●	
Noah hv/voxy hv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Noah hv/voxy hv	RI-door motor	○	●	●	●	●	0016
Noah hv/voxy hv	Rr-door motor	○	●	●	●	●	0016
Noah hv/voxy hv	Security (can)	○	●	●	●	●	
Noah hv/voxy hv	Srs airbag	○	●	●	●	●	0006
Noah hv/voxy hv	Transmission control	○	●	●	●	●	
Noah hv/voxy hv	Vehicle proximity notification system	○	●	●	●	●	
Noah/voxy	ABS-VSC	○	●	●	●	●	
Noah/voxy	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Noah/voxy	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Noah/voxy	Air suspension-ahc-tems	○	●	●	●	●	
Noah/voxy	Body	○	●	●	●	●	
Noah/voxy	Body no.2	○	●	●	●	●	
Noah/voxy	ECT(SIL)	○	●	●	●	●	0001 0006
Noah/voxy	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Noah/voxy	Gateway	○	●	●	●	●	0002 0019 0007 0020
Noah/voxy	Immobilizer	○	●	●	●	●	
Noah/voxy	Master switch	○	○	○	●	●	0016
Noah/voxy	Mirror	○	○	○	●	●	
Noah/voxy	Mirror l	○	○	○	●	●	
Noah/voxy	Mirror(left and right)	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Noah/voxy	Remote security	○	●	●	●	●	
Noah/voxy	Srs airbag(sil)	○	●	●	●	●	0006
Noah/voxy	4WD(CAN)	○	●	●	●	●	
Noah/voxy	A/C(CAN)	○	●	●	●	●	
Noah/voxy	Accessory gateway	○	●	●	●	●	0002
Noah/voxy	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Noah/voxy	Automatic high beam	○	●	●	●	●	
Noah/voxy	Back guide monitor ipa	○	●	●	●	●	
Noah/voxy	Cruise control	○	●	●	●	●	0003 0036
Noah/voxy	D-door motor	○	●	●	●	●	0016
Noah/voxy	Electric power steering	○	●	●	●	●	
Noah/voxy	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Noah/voxy	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Noah/voxy	HI autoleveling	○	●	●	●	●	0042 0083 0056
Noah/voxy	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Noah/voxy	Master switch	○	●	●	●	●	0016
Noah/voxy	Meter (can)	○	●	●	●	●	
Noah/voxy	Navigation system	○	●	●	●	●	
Noah/voxy	P-door motor	○	●	●	●	●	0016
Noah/voxy	Power source control	○	●	●	●	●	0041
Noah/voxy	Rear left door	○	●	●	●	●	
Noah/voxy	Rear right door	○	●	●	●	●	
Noah/voxy	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Noah/voxy	Rl-door motor	○	●	●	●	●	0016
Noah/voxy	Rr-door motor	○	●	●	●	●	0016
Noah/voxy	Security (can)	○	●	●	●	●	
Noah/voxy	Sliding roof	○	●	●	●	●	
Noah/voxy	Srs airbag	○	●	●	●	●	0006
Noah/voxy	Starting control	○	●	●	●	●	
Noah/voxy	Stop & start	○	●	●	●	●	
Noah/voxy	Back door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Noah/voxy	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Noah/voxy	Srs airbag(sil2)	○	●	●	●	●	0006
Opa	A/C(SIL)	○	●	●	●	●	
Opa	ABS-VSC	○	●	●	●	●	
Opa	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Opa	AFS(SIL)	○	●	●	●	●	0043
Opa	ARS	○	●	●	●	●	0006
Opa	Air suspension-ahc-tems	○	●	●	●	●	
Opa	Back door	○	●	●	●	●	
Opa	Back guide monitor ipa	○	●	●	●	●	
Opa	Body	○	●	●	●	●	
Opa	Body no.2	○	●	●	●	●	
Opa	Body no.3	○	●	●	●	●	
Opa	Body no.4	○	●	○	●	●	
Opa	Body no.5	○	○	○	●	●	
Opa	Clearance sonar	○	●	●	●	●	0046
Opa	Combination switch	○	○	○	●	●	
Opa	Driver door	○	●	●	●	●	
Opa	Driver seat	○	○	○	●	●	
Opa	ECT(SIL)	○	●	●	●	●	0001 0006
Opa	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Opa	Electric power steering (sil rack type)	○	●	●	●	●	
Opa	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Opa	Gateway	○	●	●	●	●	0002 0019 0007 0020
Opa	Immobilizer	○	●	●	●	●	
Opa	Lane keeping assist	○	●	●	●	●	0153
Opa	Master switch	○	○	○	●	●	0016
Opa	Meter	○	○	○	●	●	0172 0006 0174 0072
Opa	Mirror	○	○	○	●	●	
Opa	Mirror l	○	○	○	●	●	
Opa	Mirror(left and right)	○	○	○	●	●	
Opa	Passenger door	○	●	●	●	●	
Opa	Passenger seat	○	○	○	●	●	
Opa	Rain sensor	○	○	○	●	●	
Opa	Rear left door	○	●	●	●	●	
Opa	Rear left seat	○	○	○	●	●	
Opa	Rear right door	○	●	●	●	●	
Opa	Rear right seat	○	○	○	●	●	
Opa	Rear seat switch	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Opa	Security (can)	○	●	●	●	●	
Opa	Security (sil)	○	●	●	●	●	
Opa	Sliding roof	○	○	○	●	●	
Opa	Srs airbag(sil)	○	●	●	●	●	0006
Opa	Srs airbag(sil2)	○	●	●	●	●	0006
Opa	Steering pad switch	○	○	○	●	●	
Opa	Tilt&telescopic	○	●	●	●	●	0026
Opa	VGRS	○	●	●	●	●	0005 0006
Paseo	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Passo	A/B	○	●	●	●	●	0023 0006 0174
Passo	A/T	○	●	●	●	●	0016
Passo	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Passo	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Passo	EPS	○	●	●	●	●	0023 0006 0174 0025
Passo	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
Passo	ABS/VSC	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Passo	CVT	○	●	●	●	●	0168
Passo	ITC	○	●	●	●	●	0177
Passo	Meter	○	●	●	●	●	0172 0006 0174 0072
Passo	Eco idle	○	●	●	●	●	0166 0167
Passo sette	A/B	○	●	●	●	●	0023 0006 0174
Passo sette	A/T	○	●	●	●	●	0016
Passo sette	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Passo sette	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Passo sette	EPS	○	●	●	●	●	0023 0006 0174 0025
Passo sette	ITC	○	●	●	●	●	0177
Passo sette	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
Passo sette	VSC	○	●	●	●	●	0049 0107 0006 0174 0183
Pixis epoch	A/B	○	●	●	●	●	0023 0006 0174

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Pixis epoch	ABS/VSC	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Pixis epoch	CVT	○	●	●	●	●	0168
Pixis epoch	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Pixis epoch	EPS	○	●	●	●	●	0023 0006 0174 0025
Pixis epoch	Eco idle	○	●	●	●	●	0166 0167
Pixis epoch	ITC	○	●	●	●	●	0177
Pixis epoch	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
Pixis epoch	Meter	○	●	●	●	●	0172 0006 0174 0072
Pixis epoch	PCB	○	●	●	●	●	0185
Pixis space	A/B	○	●	●	●	●	0023 0006 0174
Pixis space	ABS/VSC	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Pixis space	CVT	○	●	●	●	●	0168
Pixis space	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Pixis space	EPS	○	●	●	●	●	0023 0006 0174 0025
Pixis space	Eco idle	○	●	●	●	●	0166 0167
Pixis space	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Pixis space	ITC	○	●	●	●	●	0177
Pixis space	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
Pixis space	Meter	○	●	●	●	●	0172 0006 0174 0072
Pixis space	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Pixis truck/van	A/B	○	●	●	●	●	0023 0006 0174
Pixis truck/van	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Pixis truck/van	EPS	○	●	●	●	●	0023 0006 0174 0025
Pixis truck/van	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Platz	4WD(SIL)	○	●	●	●	●	
Platz	A/C(SIL)	○	●	●	●	●	
Platz	ABS-VSC	○	●	●	●	●	
Platz	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Platz	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Platz	AFS(SIL)	○	●	●	●	●	0043
Platz	Air suspension-ahc-tems	○	●	●	●	●	
Platz	Body	○	●	●	●	●	
Platz	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Platz	Electric power steering (sil rack type)	○	●	●	●	●	
Platz	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Platz	Gateway	○	●	●	●	●	0002 0019 0007 0020
Platz	Immobilizer	○	●	●	●	●	
Platz	Immobilizer (built-in engine)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Platz	Master switch	○	○	○	●	●	0016
Platz	Meter	○	○	○	●	●	0172 0006 0174 0072
Platz	Security (sil)	○	●	●	●	●	
Platz	Sliding roof	○	○	○	●	●	
Platz	Srs airbag(sil)	○	●	●	●	●	0006
Platz	Srs airbag(sil2)	○	●	●	●	●	0006
Platz	Steering pad switch	○	○	○	●	●	
Platz	Electric power steering	○	●	●	●	●	
Porte/spade	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Porte/spade	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Porte/spade	Srs airbag(sil)	○	●	●	●	●	0006
Porte/spade	4WD(SIL)	○	●	●	●	●	
Porte/spade	A/C(SIL)	○	●	●	●	●	
Porte/spade	ABS-VSC	○	●	●	●	●	
Porte/spade	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Porte/spade	AFS(SIL)	○	●	●	●	●	0043
Porte/spade	Air suspension-ahc-tems	○	●	●	●	●	
Porte/spade	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Porte/spade	Electric power steering (sil rack type)	○	●	●	●	●	
Porte/spade	Gateway	○	●	●	●	●	0002 0019 0007 0020
Porte/spade	Immobilizer	○	●	●	●	●	
Porte/spade	Immobilizer (built-in engine)	○	●	●	●	●	
Porte/spade	Master switch	○	○	○	●	●	0016
Porte/spade	Meter	○	○	○	●	●	0172 0006 0174 0072
Porte/spade	Security (sil)	○	●	●	●	●	
Porte/spade	Sliding roof	○	○	○	●	●	
Porte/spade	Srs airbag(sil2)	○	●	●	●	●	0006
Porte/spade	Steering pad switch	○	○	○	●	●	
Porte/spade	4WD(CAN)	○	●	●	●	●	
Porte/spade	A/C(CAN)	○	●	●	●	●	
Porte/spade	D-door motor	○	●	●	●	●	0016
Porte/spade	Electric power steering	○	●	●	●	●	
Porte/spade	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Porte/spade	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Porte/spade	HI autoleveling	○	●	●	●	●	0042 0083 0056
Porte/spade	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Porte/spade	Meter (can)	○	●	●	●	●	
Porte/spade	Power source control	○	●	●	●	●	0041
Porte/spade	Rear left door	○	●	●	●	●	
Porte/spade	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Porte/spade	Srs airbag	○	●	●	●	●	0006
Porte/spade	Starting control	○	●	●	●	●	
Porte/spade	Stop & start	○	●	●	●	●	
Porte/spade	Security (can)	○	●	●	●	●	
Porte/spade	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Previa	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Previa hv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Previa hv	Air conditioner	○	●	●	●	●	0065
Previa hv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Previa hv	Cruise control	○	●	●	●	●	0003 0036
Previa hv	D-door motor	○	●	●	●	●	0016
Previa hv	EMPS	○	●	●	●	●	0006 0025
Previa hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Previa hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Previa hv	Gateway	○	●	●	●	●	0002 0019 0007 0020
Previa hv	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Previa hv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Previa hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Previa hv	Master switch	○	●	●	●	●	0016
Previa hv	P-door motor	○	●	●	●	●	0016
Previa hv	Rear left door	○	●	●	●	●	
Previa hv	Rear right door	○	●	●	●	●	
Previa hv	RI-door motor	○	●	●	●	●	0016
Previa hv	Rr-door motor	○	●	●	●	●	0016
Previa hv	Sliding roof	○	●	●	●	●	
Previa hv	Srs airbag	○	●	●	●	●	0006
Previa hv	Vehicle proximity notification system	○	●	●	●	●	
Previa/tarago	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Previa/tarago	AFS	○	●	●	●	●	
Previa/tarago	Air conditioner	○	●	●	●	●	0065
Previa/tarago	Back door	○	●	●	●	●	
Previa/tarago	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Previa/tarago	Cruise control	○	●	●	●	●	0003 0036
Previa/tarago	D-door motor	○	●	●	●	●	0016
Previa/tarago	EMPS	○	●	●	●	●	0006 0025
Previa/tarago	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Previa/tarago	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Previa/tarago	Gateway	○	●	●	●	●	0002 0019 0007 0020
Previa/tarago	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Previa/tarago	Master switch	○	●	●	●	●	0016
Previa/tarago	Navigation system	○	●	●	●	●	
Previa/tarago	P-door motor	○	●	●	●	●	0016
Previa/tarago	Rear left door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Previa/tarago	Rear right door	○	●	●	●	●	
Previa/tarago	Rl-door motor	○	●	●	●	●	0016
Previa/tarago	Rr-door motor	○	●	●	●	●	0016
Previa/tarago	Sliding roof	○	●	●	●	●	
Previa/tarago	Srs airbag	○	●	●	●	●	0006
Previa/tarago	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Previa/tarago	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Previa/tarago	Parking assist monitor system	○	●	●	●	●	
Previa/tarago	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Previa/tarago	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Previa/tarago	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Prius	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Prius	Air conditioner	○	●	●	●	●	0065
Prius	Body	○	●	●	●	●	
Prius	Cruise control	○	●	●	●	●	0003 0036
Prius	EMPS	○	●	●	●	●	0006 0025
Prius	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Prius	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Prius	Gateway	○	●	●	●	●	0002 0019 0007 0020
Prius	Hv battery	○	●	●	●	●	0002 0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Prius	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Prius	Parking assist monitor system	○	●	●	●	●	
Prius	Power source control	○	●	●	●	●	0041
Prius	Srs airbag	○	●	●	●	●	0006
Prius	Transmission control	○	●	●	●	●	
Prius	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Prius	D-door motor	○	●	●	●	●	0016
Prius	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Prius	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Prius	Master switch	○	●	●	●	●	0016
Prius	Navigation system	○	●	●	●	●	
Prius	P-door motor	○	●	●	●	●	0016
Prius	Pm1 gateway	○	●	●	●	●	0002
Prius	Pm2 gateway	○	●	●	●	●	0002
Prius	Rl-door motor	○	●	●	●	●	0016
Prius	Rr-door motor	○	●	●	●	●	0016
Prius	Sliding roof	○	●	●	●	●	
Prius	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Prius	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Prius	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Prius	Radar cruise	○	●	●	●	●	0003 0035 0036
Prius	Telematics	○	●	●	●	●	0048 0124
Prius	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Prius	Lane keeping assist	○	●	●	●	●	0153
Prius	Occupant detection	○	●	●	●	●	0032
Prius	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Prius	Vehicle proximity notification system	○	●	●	●	●	
Prius	4WD(SIL)	○	●	●	●	●	
Prius	A/C(SIL)	○	●	●	●	●	
Prius	ABS-VSC	○	●	●	●	●	
Prius	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Prius	ARS	○	●	●	●	●	0006
Prius	Back door	○	●	●	●	●	
Prius	Body no.2	○	●	●	●	●	
Prius	Clearance sonar	○	●	●	●	●	0046
Prius	Cruise control (internal sil hv)	○	●	●	●	●	
Prius	D-seat sw	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius	Driver door	○	●	●	●	●	
Prius	Driver seat	○	○	○	●	●	
Prius	ECT(SIL)	○	●	●	●	●	0001 0006
Prius	Electric power steering	○	●	●	●	●	
Prius	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Prius	HV(SIL)	○	●	●	●	●	
Prius	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
Prius	Immobilizer	○	●	●	●	●	
Prius	Master switch	○	○	○	●	●	0016
Prius	Meter	○	○	○	●	●	0172 0006 0174 0072
Prius	Mirror	○	○	○	●	●	
Prius	Mirror l	○	○	○	●	●	
Prius	Mirror(left and right)	○	○	○	●	●	
Prius	Passenger door	○	●	●	●	●	
Prius	Passenger seat	○	○	○	●	●	
Prius	Rear left door	○	●	●	●	●	
Prius	Rear left seat	○	○	○	●	●	
Prius	Rear right door	○	●	●	●	●	
Prius	Rear right seat	○	○	○	●	●	
Prius	Rear seat switch	○	○	○	●	●	
Prius	Security (sil)	○	●	●	●	●	
Prius	Sliding roof	○	○	○	●	●	
Prius	Srs airbag(sil)	○	●	●	●	●	0006
Prius	Steering pad switch	○	○	○	●	●	
Prius	Tilt&telescopic	○	●	●	●	●	0026
Prius	Back guide monitor ipa	○	●	●	●	●	
Prius	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Prius	HV(CAN)	○	●	●	●	●	
Prius	Hv battery (can)	○	●	●	●	●	0002
Prius	Srs airbag(sil2)	○	●	●	●	●	0006
Prius	ABS- VSC	○	●	●	●	●	
Prius	HV	○	●	●	●	●	0002 0006
Prius	A/C(CAN)	○	●	●	●	●	
Prius	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Prius	Meter (can)	○	●	●	●	●	
Prius	Security (can)	○	●	●	●	●	
Prius	Pre-crash 1 (can)	○	●	●	●	●	
Prius	Radar cruise (built-dss1)	○	●	●	●	●	
Prius	Two pre-crash	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Prius	Advanced parking guidance system	○	●	●	●	●	
Prius +/-prius v	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Prius +/-prius v	Air conditioner	○	●	●	●	●	0065
Prius +/-prius v	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Prius +/-prius v	D-door motor	○	●	●	●	●	0016
Prius +/-prius v	EMPS	○	●	●	●	●	0006 0025
Prius +/-prius v	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Prius +/-prius v	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Prius +/-prius v	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Prius +/-prius v	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Prius +/-prius v	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Prius +/-prius v	Master switch	○	●	●	●	●	0016
Prius +/-prius v	Navigation system	○	●	●	●	●	
Prius +/-prius v	P-door motor	○	●	●	●	●	0016
Prius +/-prius v	Parking assist monitor system	○	●	●	●	●	
Prius +/-prius v	Pm1 gateway	○	●	●	●	●	0002
Prius +/-prius v	Pm2 gateway	○	●	●	●	●	0002
Prius +/-prius v	Power source control	○	●	●	●	●	0041
Prius +/-prius v	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Prius +/-prius v	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Prius +/-prius v	Radar cruise	○	●	●	●	●	0003 0035 0036
Prius +/-prius v	Rl-door motor	○	●	●	●	●	0016
Prius +/-prius v	Rr-door motor	○	●	●	●	●	0016
Prius +/-prius v	Sliding roof	○	●	●	●	●	
Prius +/-prius v	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius +/-prius v	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Prius +/-prius v	Transmission control	○	●	●	●	●	
Prius +/-prius v	Vehicle proximity notification system	○	●	●	●	●	
Prius alpha	A/C(CAN)	○	●	●	●	●	
Prius alpha	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Prius alpha	Back guide monitor ipa	○	●	●	●	●	
Prius alpha	Cruise control	○	●	●	●	●	0003 0036
Prius alpha	D-door motor	○	●	●	●	●	0016
Prius alpha	Diagnostic recorder	○	●	●	●	●	
Prius alpha	Electric power steering	○	●	●	●	●	
Prius alpha	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Prius alpha	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Prius alpha	HV(CAN)	○	●	●	●	●	
Prius alpha	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Prius alpha	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Prius alpha	Master switch	○	●	●	●	●	0016
Prius alpha	Meter (can)	○	●	●	●	●	
Prius alpha	Navigation system	○	●	●	●	●	
Prius alpha	P-door motor	○	●	●	●	●	0016
Prius alpha	Pm1 gateway	○	●	●	●	●	0002
Prius alpha	Pm2 gateway	○	●	●	●	●	0002
Prius alpha	Power source control	○	●	●	●	●	0041
Prius alpha	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Prius alpha	Rl-door motor	○	●	●	●	●	0016
Prius alpha	Rr-door motor	○	●	●	●	●	0016
Prius alpha	Security (can)	○	●	●	●	●	
Prius alpha	Sliding roof	○	●	●	●	●	
Prius alpha	Srs airbag	○	●	●	●	●	0006
Prius alpha	Transmission control	○	●	●	●	●	
Prius alpha	Pre-crash 1 (can)	○	●	●	●	●	
Prius alpha	Radar cruise (built-dss1)	○	●	●	●	●	
Prius alpha	Two pre-crash	○	●	●	●	●	
Prius alpha	Vehicle proximity notification system	○	●	●	●	●	
Prius c	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius c	Air conditioner	○	●	●	●	●	0065
Prius c	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Prius c	Cruise control	○	●	●	●	●	0003 0036
Prius c	D-door motor	○	●	●	●	●	0016
Prius c	EMPS	○	●	●	●	●	0006 0025
Prius c	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Prius c	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Prius c	HI autoleveling	○	●	●	●	●	0042 0083 0056
Prius c	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Prius c	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Prius c	Navigation system	○	●	●	●	●	
Prius c	Occupant detection	○	●	●	●	●	0032
Prius c	Power source control	○	●	●	●	●	0041
Prius c	Sliding roof	○	●	●	●	●	
Prius c	Srs airbag	○	●	●	●	●	0006
Prius c	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Prius c	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Prius c	Vehicle proximity notification system	○	●	●	●	●	
Prius c	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Prius c	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Prius phv	A/C(CAN)	○	●	●	●	●	
Prius phv	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Prius phv	Back guide monitor ipa	○	●	●	●	●	
Prius phv	Bluetooth communication module	○	●	●	●	●	0151
Prius phv	Cruise control	○	●	●	●	●	0003 0036

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius phv	D-door motor	○	●	●	●	●	0016
Prius phv	Diagnostic recorder	○	●	●	●	●	
Prius phv	Electric power steering	○	●	●	●	●	
Prius phv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Prius phv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Prius phv	HV	○	●	●	●	●	0002 0006
Prius phv	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Prius phv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Prius phv	Master switch	○	●	●	●	●	0016
Prius phv	Meter (can)	○	●	●	●	●	
Prius phv	Navigation system	○	●	●	●	●	
Prius phv	P-door motor	○	●	●	●	●	0016
Prius phv	Plug-in control	○	●	●	●	●	0006 0026
Prius phv	Pm1 gateway	○	●	●	●	●	0002
Prius phv	Power source control	○	●	●	●	●	0041
Prius phv	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Prius phv	Rl-door motor	○	●	●	●	●	0016
Prius phv	Rr-door motor	○	●	●	●	●	0016
Prius phv	Security (can)	○	●	●	●	●	
Prius phv	Srs airbag	○	●	●	●	●	0006
Prius phv	Transmission control	○	●	●	●	●	
Prius phv	Pre-crash 1 (can)	○	●	●	●	●	
Prius phv	Radar cruise (built-dss1)	○	●	●	●	●	
Prius phv	Two pre-crash	○	●	●	●	●	
Prius phv	Vehicle proximity notification system	○	●	●	●	●	
Prius phv	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Prius phv	HV(CAN)	○	●	●	●	●	
Prius phv	Hv battery (can)	○	●	●	●	●	0002

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius phv	Pm2 gateway	○	●	●	●	●	0002
Prius phv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Prius phv	Advanced parking guidance system	○	●	●	●	●	
Prius phv	Air conditioner	○	●	●	●	●	0065
Prius phv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Prius phv	EMPS	○	●	●	●	●	0006 0025
Prius phv	Hv battery	○	●	●	●	●	0002 0006
Prius phv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Prius phv	Occupant detection	○	●	●	●	●	0032
Prius phv	Sliding roof	○	●	●	●	●	
Prius phv	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Prius phv	Telematics	○	●	●	●	●	0048 0124
Prius phv	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Prius phv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Prius phv	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Prius phv	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Prius phv	Radar cruise	○	●	●	●	●	0003 0035 0036
Prius plug-in	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Prius plug-in	Air conditioner	○	●	●	●	●	0065
Prius plug-in	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Prius plug-in	Cruise control	○	●	●	●	●	0003 0036
Prius plug-in	D-door motor	○	●	●	●	●	0016
Prius plug-in	EMPS	○	●	●	●	●	0006 0025
Prius plug-in	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius plug-in	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Prius plug-in	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Prius plug-in	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Prius plug-in	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Prius plug-in	Master switch	○	●	●	●	●	0016
Prius plug-in	Navigation system	○	●	●	●	●	
Prius plug-in	Occupant detection	○	●	●	●	●	0032
Prius plug-in	P-door motor	○	●	●	●	●	0016
Prius plug-in	Parking assist monitor system	○	●	●	●	●	
Prius plug-in	Plug-in control	○	●	●	●	●	0006 0026
Prius plug-in	Pm1 gateway	○	●	●	●	●	0002
Prius plug-in	Power source control	○	●	●	●	●	0041
Prius plug-in	Rl-door motor	○	●	●	●	●	0016
Prius plug-in	Rr-door motor	○	●	●	●	●	0016
Prius plug-in	Srs airbag	○	●	●	●	●	0006
Prius plug-in	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Prius plug-in	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Prius plug-in	Transmission control	○	●	●	●	●	
Prius plug-in	Vehicle proximity notification system	○	●	●	●	●	
Prius plug-in	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Prius plug-in	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Prius plug-in	Radar cruise	○	●	●	●	●	0003 0035 0036
Prius plug-in	Hv battery	○	●	●	●	●	0002 0006
Prius plug-in	Pm2 gateway	○	●	●	●	●	0002
Prius v	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Prius v	Advanced parking guidance system	○	●	●	●	●	
Prius v	Air conditioner	○	●	●	●	●	0065
Prius v	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Prius v	D-door motor	○	●	●	●	●	0016
Prius v	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Prius v	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Prius v	HI autoleveling	○	●	●	●	●	0042 0083 0056
Prius v	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Prius v	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Prius v	Master switch	○	●	●	●	●	0016
Prius v	Navigation system	○	●	●	●	●	
Prius v	Occupant detection	○	●	●	●	●	0032
Prius v	P-door motor	○	●	●	●	●	0016
Prius v	Pm1 gateway	○	●	●	●	●	0002
Prius v	Pm2 gateway	○	●	●	●	●	0002
Prius v	Power source control	○	●	●	●	●	0041
Prius v	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Prius v	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Prius v	Radar cruise	○	●	●	●	●	0003 0035 0036
Prius v	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Prius v	Rl-door motor	○	●	●	●	●	0016
Prius v	Rr-door motor	○	●	●	●	●	0016
Prius v	Sliding roof	○	●	●	●	●	
Prius v	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Prius v	Srs airbag	○	●	●	●	●	0006
Prius v	Telematics	○	●	●	●	●	0048 0124
Prius v	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Prius v	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Prius v	Transmission control	○	●	●	●	●	
Prius v	Vehicle proximity notification system	○	●	●	●	●	
Probox/succeed	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Probox/succeed	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Probox/succeed	Srs airbag(sil)	○	●	●	●	●	0006
Probox/succeed	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Probox/succeed	4WD(SIL)	○	●	●	●	●	
Probox/succeed	Electric power steering	○	●	●	●	●	
Probox/succeed	Immobilizer	○	●	●	●	●	
Probox/succeed	Immobilizer (built-in engine)	○	●	●	●	●	
Probox/succeed	Meter	○	○	○	●	●	0172 0006 0174 0072
Probox/succeed	Srs airbag(sil2)	○	●	●	●	●	0006
Probox/succeed	VGRS	○	●	●	●	●	0005 0006
Probox/succeed	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Probox/succeed	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Probox/succeed	Electric power steering (sil rack type)	○	●	●	●	●	
Probox/succeed	Srs airbag	○	●	●	●	●	0006
Progres/brevis	4WD(SIL)	○	●	●	●	●	
Progres/brevis	A/C(SIL)	○	●	●	●	●	
Progres/brevis	ABS-VSC	○	●	●	●	●	
Progres/brevis	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Progres/brevis	AFS(SIL)	○	●	●	●	●	0043
Progres/brevis	ARS	○	●	●	●	●	0006
Progres/brevis	Air suspension-ahc-tems	○	●	●	●	●	
Progres/brevis	Back door	○	●	●	●	●	
Progres/brevis	Body	○	●	●	●	●	
Progres/brevis	Body no.2	○	●	●	●	●	
Progres/brevis	Body no.3	○	●	●	●	●	
Progres/brevis	Body no.4	○	●	○	●	●	
Progres/brevis	Body no.5	○	○	○	●	●	
Progres/brevis	Clearance sonar	○	●	●	●	●	0046
Progres/brevis	Combination switch	○	○	○	●	●	
Progres/brevis	Cruise control	○	●	●	●	●	0003 0036
Progres/brevis	D-seat sw	○	○	○	●	●	
Progres/brevis	Driver door	○	●	●	●	●	
Progres/brevis	Driver seat	○	○	○	●	●	
Progres/brevis	Electric power steering	○	●	●	●	●	
Progres/brevis	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Progres/brevis	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Progres/brevis	Gateway	○	●	●	●	●	0002 0019 0007 0020
Progres/brevis	Immobilizer	○	●	●	●	●	
Progres/brevis	Immobilizer (built-in engine)	○	●	●	●	●	
Progres/brevis	Master switch	○	○	○	●	●	0016
Progres/brevis	Meter	○	○	○	●	●	0172 0006 0174 0072
Progres/brevis	Mirror	○	○	○	●	●	
Progres/brevis	Mirror l	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Progres/brevis	Mirror(left and right)	○	○	○	●	●	
Progres/brevis	Movable pedal	○	○	○	●	●	
Progres/brevis	Night view	○	●	●	●	●	
Progres/brevis	Passenger door	○	●	●	●	●	
Progres/brevis	Passenger seat	○	○	○	●	●	
Progres/brevis	Power source control	○	●	●	●	●	0041
Progres/brevis	Rain sensor	○	○	○	●	●	
Progres/brevis	Rear left door	○	●	●	●	●	
Progres/brevis	Rear left seat	○	○	○	●	●	
Progres/brevis	Rear right door	○	●	●	●	●	
Progres/brevis	Rear right seat	○	○	○	●	●	
Progres/brevis	Security (sil)	○	●	●	●	●	
Progres/brevis	Sliding roof	○	○	○	●	●	
Progres/brevis	Srs airbag(sil)	○	●	●	●	●	0006
Progres/brevis	Srs airbag(sil2)	○	●	●	●	●	0006
Progres/brevis	Steering pad switch	○	○	○	●	●	
Progres/brevis	Tilt&telescopic	○	●	●	●	●	0026
Progres/brevis	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Progres/brevis	VGRS	○	●	●	●	●	0005 0006
Progres/brevis	Wiper	○	○	○	●	●	
Progres/brevis	Radar cruise	○	●	●	●	●	0003 0035 0036
Progres/brevis	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Progres/brevis	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Progres/brevis	Electric power steering (sil rack type)	○	●	●	●	●	
Progres/brevis	Stabilizer	○	●	●	●	●	
Pronard	4WD(SIL)	○	●	●	●	●	
Pronard	A/C(SIL)	○	●	●	●	●	
Pronard	ABS-VSC	○	●	●	●	●	
Pronard	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Pronard	ARS	○	●	●	●	●	0006
Pronard	Body	○	●	●	●	●	
Pronard	Body no.2	○	●	●	●	●	
Pronard	Clearance sonar	○	●	●	●	●	0046
Pronard	Combination switch	○	○	○	●	●	
Pronard	Cruise control	○	●	●	●	●	0003 0036
Pronard	D-seat sw	○	○	○	●	●	
Pronard	Driver door	○	●	●	●	●	
Pronard	Driver seat	○	○	○	●	●	
Pronard	ECT(SIL)	○	●	●	●	●	0001 0006
Pronard	Electric power steering	○	●	●	●	●	
Pronard	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Pronard	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Pronard	Gateway	○	●	●	●	●	0002 0019 0007 0020
Pronard	Immobilizer	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Pronard	Master switch	○	○	○	●	●	0016
Pronard	Meter	○	○	○	●	●	0172 0006 0174 0072
Pronard	Mirror	○	○	○	●	●	
Pronard	Mirror l	○	○	○	●	●	
Pronard	Mirror(left and right)	○	○	○	●	●	
Pronard	Passenger door	○	●	●	●	●	
Pronard	Passenger seat	○	○	○	●	●	
Pronard	Rear left door	○	●	●	●	●	
Pronard	Rear left seat	○	○	○	●	●	
Pronard	Rear right door	○	●	●	●	●	
Pronard	Rear right seat	○	○	○	●	●	
Pronard	Rear seat switch	○	○	○	●	●	
Pronard	Security (sil)	○	●	●	●	●	
Pronard	Sliding roof	○	○	○	●	●	
Pronard	Srs airbag(sil)	○	●	●	●	●	0006
Pronard	Steering pad switch	○	○	○	●	●	
Pronard	Tilt&telescopic	○	●	●	●	●	0026
Quickdelivery	4WD(SIL)	○	●	●	●	●	
Quickdelivery	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Quickdelivery	ECT(SIL)	○	●	●	●	●	0001 0006
Quickdelivery	Electric power steering	○	●	●	●	●	
Quickdelivery	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Quickdelivery	Immobilizer	○	●	●	●	●	
Quickdelivery	Immobilizer (built-in engine)	○	●	●	●	●	
Quickdelivery	Meter	○	○	○	●	●	0172 0006 0174 0072
Quickdelivery	Srs airbag(sil)	○	●	●	●	●	0006
Quickdelivery	Srs airbag(sil2)	○	●	●	●	●	0006
Quickdelivery	VGRS	○	●	●	●	●	0005 0006
Quickdelivery	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Quickdelivery	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Quickdelivery	Electric power steering (sil rack type)	○	●	●	●	●	
Quickdelivery	4WD(CAN)	○	●	●	●	●	
Quickdelivery	Accessory gateway	○	●	●	●	●	0002
Quickdelivery	Electric power steering (can brush / brushless)	○	●	●	●	●	
Quickdelivery	Electric power steering (can rack type)	○	●	●	●	●	
Quickdelivery	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Quickdelivery	HV(CAN)	○	●	●	●	●	
Quickdelivery	Hv battery (can)	○	●	●	●	●	0002
Quickdelivery	Meter (can)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Quickdelivery	Meter(sil)	○	○	○	●	●	
Quickdelivery	Srs airbag	○	●	●	●	●	0006
Quickdelivery	The motor-generator	○	●	●	●	●	
Ractis	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Ractis	Air conditioner	○	●	●	●	●	0065
Ractis	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Ractis	D-door motor	○	●	●	●	●	0016
Ractis	EMPS	○	●	●	●	●	0006 0025
Ractis	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Ractis	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Ractis	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Ractis	Srs airbag	○	●	●	●	●	0006
Ractis	4WD(CAN)	○	●	●	●	●	
Ractis	4WD(SIL)	○	●	●	●	●	
Ractis	A/C(CAN)	○	●	●	●	●	
Ractis	A/C(SIL)	○	●	●	●	●	
Ractis	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Ractis	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Ractis	AFS(SIL)	○	●	●	●	●	0043
Ractis	Accessory gateway	○	●	●	●	●	0002
Ractis	Air suspension-ahc-tems	○	●	●	●	●	
Ractis	Cruise control	○	●	●	●	●	0003 0036
Ractis	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Ractis	Electric power steering (sil rack type)	○	●	●	●	●	
Ractis	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Ractis	Gateway	○	●	●	●	●	0002 0019 0007 0020
Ractis	Immobilizer	○	●	●	●	●	
Ractis	Master switch	○	●	●	●	●	0016
Ractis	Meter (can)	○	●	●	●	●	
Ractis	Meter(sil)	○	○	○	●	●	
Ractis	P-door motor	○	●	●	●	●	0016
Ractis	Rl-door motor	○	●	●	●	●	0016
Ractis	Rr-door motor	○	●	●	●	●	0016
Ractis	Security (can)	○	●	●	●	●	
Ractis	Security (sil)	○	●	●	●	●	
Ractis	Sliding roof	○	●	●	●	●	
Ractis	Srs airbag(sil)	○	●	●	●	●	0006
Ractis	Srs airbag(sil2)	○	●	●	●	●	0006
Ractis	Steering pad switch	○	○	○	●	●	
Ractis	Immobilizer (built-in engine)	○	●	●	●	●	
Ractis	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Ractis	Electric power steering	○	●	●	●	●	
Ractis	HI autoleveling	○	●	●	●	●	0042 0083 0056
Ractis	Power source control	○	●	●	●	●	0041
Ractis	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Ractis	Starting control	○	●	●	●	●	
Ractis	Charging control	○	●	●	●	●	
Ractis	Stop & start	○	●	●	●	●	
Raum	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Raum	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Raum	Immobilizer	○	●	●	●	●	
Raum	Srs airbag(sil)	○	●	●	●	●	0006
Raum	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Rav4	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rav4	Air conditioner	○	●	●	●	●	0065
Rav4	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Rav4	Cruise control	○	●	●	●	●	0003 0036
Rav4	D-door motor	○	●	●	●	●	0016
Rav4	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rav4	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rav4	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Rav4	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Rav4	Sliding roof	○	●	●	●	●	
Rav4	Srs airbag	○	●	●	●	●	0006
Rav4	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Rav4	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Rav4	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Rav4	Navigation system	○	●	●	●	●	
Rav4	Telematics	○	●	●	●	●	0048 0124
Rav4	Accessory gateway	○	●	●	●	●	0002
Rav4	Four wheel drive	○	●	●	●	●	0016 0081
Rav4	Occupant detection	○	●	●	●	●	0032
Rav4	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Rav4	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Rav4	Back door	○	●	●	●	●	
Rav4	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Rav4	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Rav4	Charging control	○	●	●	●	●	
Rav4	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Rav4	Lane departure alert	○	●	●	●	●	
Rav4	Parking assist monitor system	○	●	●	●	●	
Rav4	Power source control	○	●	●	●	●	0041
Rav4	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rav4	Starting control	○	●	●	●	●	
Rav4	Stop and go	○	●	●	●	●	0032 0028 0033
Rav4	Driver seat	○	●	●	●	●	
Rav4	Automatic high beam	○	●	●	●	●	
Rav4	4WD(SIL)	○	●	●	●	●	
Rav4	A/C(SIL)	○	●	●	●	●	
Rav4	ABS-VSC	○	●	●	●	●	
Rav4	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Rav4	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Rav4	AFS(SIL)	○	●	●	●	●	0043
Rav4	Air suspension-ahc-tems	○	●	●	●	●	
Rav4	Body	○	●	●	●	●	
Rav4	Body no.2	○	●	●	●	●	
Rav4	Clearance sonar	○	●	●	●	●	0046
Rav4	D-seat sw	○	○	○	●	●	
Rav4	Driver door	○	●	●	●	●	
Rav4	Driver seat	○	○	○	●	●	
Rav4	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Rav4	Electric power steering (sil rack type)	○	●	●	●	●	
Rav4	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Rav4	Gateway	○	●	●	●	●	0002 0019 0007 0020
Rav4	Immobilizer	○	●	●	●	●	
Rav4	Immobilizer (built-in engine)	○	●	●	●	●	
Rav4	Master switch	○	○	○	●	●	0016
Rav4	Meter	○	○	○	●	●	0172 0006 0174 0072
Rav4	Mirror	○	○	○	●	●	
Rav4	Mirror l	○	○	○	●	●	
Rav4	Mirror(letf and right)	○	○	○	●	●	
Rav4	Passenger door	○	●	●	●	●	
Rav4	Passenger seat	○	○	○	●	●	
Rav4	Rear left door	○	●	●	●	●	
Rav4	Rear left seat	○	○	○	●	●	
Rav4	Rear right door	○	●	●	●	●	
Rav4	Rear right seat	○	○	○	●	●	
Rav4	Security (sil)	○	●	●	●	●	
Rav4	Sliding roof	○	○	○	●	●	
Rav4	Srs airbag(sil)	○	●	●	●	●	0006
Rav4	Srs airbag(sil2)	○	●	●	●	●	0006
Rav4	Steering pad switch	○	○	○	●	●	
Rav4	Tilt&telescopic	○	●	●	●	●	0026
Rav4	Electric power steering	○	●	●	●	●	
Rav4	4WD(CAN)	○	●	●	●	●	
Rav4	A/C(CAN)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rav4	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Rav4	Master switch	○	●	●	●	●	0016
Rav4	Meter (can)	○	●	●	●	●	
Rav4	P-door motor	○	●	●	●	●	0016
Rav4	Rl-door motor	○	●	●	●	●	0016
Rav4	Rr-door motor	○	●	●	●	●	0016
Rav4	AFS	○	●	●	●	●	
Rav4	Back guide monitor ipa	○	●	●	●	●	
Rav4	Electric power steering (can brush / brushless)	○	●	●	●	●	
Rav4	Electric power steering (can rack type)	○	●	●	●	●	
Rav4	Meter(sil)	○	○	○	●	●	
Rav4	Security (can)	○	●	●	●	●	
Rav4	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Rav4 ev	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rav4 ev	Air conditioner	○	●	●	●	●	0065
Rav4 ev	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Rav4 ev	Cruise control	○	○	○	●	●	0003 0036
Rav4 ev	D-door motor	○	●	●	●	●	0016
Rav4 ev	EMPS	○	●	●	●	●	0006 0025
Rav4 ev	EV	○	●	●	●	●	0006 0093 0069 0070
Rav4 ev	Electric propulsion control system	○	○	○	●	●	
Rav4 ev	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Rav4 ev	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Rav4 ev	Navigation system	○	●	●	●	●	
Rav4 ev	Occupant detection	○	●	●	●	●	0032
Rav4 ev	Pml gateway	○	●	●	●	●	0002
Rav4 ev	Srs airbag	○	●	●	●	●	0006
Rav4 ev	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Rav4 ev	Transmission control	○	●	●	●	●	
Rav4 ev	Battery	○	●	●	●	●	0135 0136 0137

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rav4 ev	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Rav4 ev	Telematics	○	●	●	●	●	0048 0124
Regius/touring hiace	4WD(SIL)	○	●	●	●	●	
Regius/touring hiace	ABS-VSC	○	●	●	●	●	
Regius/touring hiace	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Regius/touring hiace	ARS	○	●	●	●	●	0006
Regius/touring hiace	Electric power steering	○	●	●	●	●	
Regius/touring hiace	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Regius/touring hiace	Immobilizer	○	●	●	●	●	
Regius/touring hiace	Immobilizer (built-in engine)	○	●	●	●	●	
Regius/touring hiace	Meter	○	○	○	●	●	0172 0006 0174 0072
Regius/touring hiace	Srs airbag(sil)	○	●	●	●	●	0006
Reiz	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Reiz	AFS	○	●	●	●	●	
Reiz	Air conditioner	○	●	●	●	●	0065
Reiz	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Reiz	Clearance sonar	○	●	●	●	●	0046
Reiz	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Reiz	D-door motor	○	●	●	●	●	0016
Reiz	Driver seat	○	●	●	●	●	
Reiz	EMPS	○	●	●	●	●	0006 0025
Reiz	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Reiz	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Reiz	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Reiz	Master switch	○	●	●	●	●	0016
Reiz	P-door motor	○	●	●	●	●	0016
Reiz	Parking assist monitor system	○	●	●	●	●	
Reiz	Pml gateway	○	●	●	●	●	0002

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Reiz	Pm2 gateway	○	●	●	●	●	0002
Reiz	Power source control	○	●	●	●	●	0041
Reiz	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Reiz	Radar cruise	○	●	●	●	●	0003 0035 0036
Reiz	Rl-door motor	○	●	●	●	●	0016
Reiz	Rr-door motor	○	●	●	●	●	0016
Reiz	Sliding roof	○	●	●	●	●	
Reiz	Srs airbag	○	●	●	●	●	0006
Reiz	Starting control	○	●	●	●	●	
Reiz	Tilt&telescopic	○	●	●	●	●	0026
Reiz	VGRS	○	●	●	●	●	0005 0006
Reiz	Navigation system	○	●	●	●	●	
Reiz	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Reiz	Body	○	●	●	●	●	
Reiz	Body no.5	○	○	○	●	●	
Reiz	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Reiz	Cruise control	○	●	●	●	●	0003 0036
Reiz	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Reiz	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Reiz	Gateway	○	●	●	●	●	0002 0019 0007 0020
Reiz	Master switch	○	○	○	●	●	0016
Reiz	Sliding roof	○	○	○	●	●	
Reiz	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Reiz	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Rukus	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rukus	Air conditioner	○	●	●	●	●	0065
Rukus	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Rukus	Cruise control	○	●	●	●	●	0003 0036
Rukus	D-door motor	○	●	●	●	●	0016
Rukus	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rukus	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Rukus	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Rukus	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Rukus	Master switch	○	●	●	●	●	0016
Rukus	P-door motor	○	●	●	●	●	0016
Rukus	Rl-door motor	○	●	●	●	●	0016
Rukus	Rr-door motor	○	●	●	●	●	0016
Rukus	Sliding roof	○	●	●	●	●	
Rukus	Srs airbag	○	●	●	●	●	0006
Rukus	Gateway	○	●	●	●	●	0002 0019 0007 0020
Rukus	Four wheel drive	○	●	●	●	●	0016 0081
Rukus	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Rush	A/B	○	●	●	●	●	0023 0006 0174
Rush	A/T	○	●	●	●	●	0016
Rush	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Rush	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Rush	EPS	○	●	●	●	●	0023 0006 0174 0025
Rush	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
Rush	VSC	○	●	●	●	●	0049 0107 0006 0174 0183
Rush	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Rush	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Rush	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Rush	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Rush	Srs airbag	○	●	●	●	●	0006
Rush	EMPS	○	●	●	●	●	0006 0025
Sai	A/C(CAN)	○	●	●	●	●	
Sai	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Sai	Back guide monitor ipa	○	●	●	●	●	
Sai	Clearance sonar	○	●	●	●	●	0046
Sai	Cruise control	○	●	●	●	●	0003 0036
Sai	D-door motor	○	●	●	●	●	0016
Sai	Driver seat	○	●	●	●	●	
Sai	Electric power steering	○	●	●	●	●	
Sai	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Sai	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Sai	HV(CAN)	○	●	●	●	●	
Sai	HI autoleveling	○	●	●	●	●	0042 0083 0056
Sai	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Sai	Master switch	○	●	●	●	●	0016
Sai	Meter (can)	○	●	●	●	●	
Sai	Mirror	○	●	●	●	●	
Sai	Mirror l	○	●	●	●	●	
Sai	Navigation system	○	●	●	●	●	
Sai	P-door motor	○	●	●	●	●	0016
Sai	Pm1 gateway	○	●	●	●	●	0002
Sai	Pm2 gateway	○	●	●	●	●	0002
Sai	Power source control	○	●	●	●	●	0041
Sai	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Sai	Rl-door motor	○	●	●	●	●	0016
Sai	Rr-door motor	○	●	●	●	●	0016
Sai	Sliding roof	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Sai	Srs airbag	○	●	●	●	●	0006
Sai	Tilt&telescopic	○	●	●	●	●	0026
Sai	Transmission control	○	●	●	●	●	
Sai	Active headrest l	○	●	●	●	●	
Sai	Active headrest r	○	●	●	●	●	
Sai	Lane keeping assist	○	●	●	●	●	0153
Sai	Pre-crash 1 (can)	○	●	●	●	●	
Sai	Radar cruise	○	●	●	●	●	0003 0035 0036
Sai	Two pre-crash	○	●	●	●	●	
Sai	AFS	○	●	●	●	●	
Sai	Passenger seat	○	●	●	●	●	
Sdf vehicle	4WD(SIL)	○	●	●	●	●	
Sdf vehicle	ABS-VSC	○	●	●	●	●	
Sdf vehicle	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Sdf vehicle	ARS	○	●	●	●	●	0006
Sdf vehicle	Electric power steering	○	●	●	●	●	
Sdf vehicle	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Sdf vehicle	Immobilizer	○	●	●	●	●	
Sdf vehicle	Immobilizer (built-in engine)	○	●	●	●	●	
Sdf vehicle	Meter	○	○	○	●	●	0172 0006 0174 0072
Sdf vehicle	Srs airbag(sil)	○	●	●	●	●	0006
Sdf vehicle	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Sdf vehicle	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Sdf vehicle	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Sdf vehicle	Electric power steering (sil rack type)	○	●	●	●	●	
Sdf vehicle	Srs airbag(sil2)	○	●	●	●	●	0006
Sdf vehicle	VGRS	○	●	●	●	●	0005 0006
Sdf vehicle	Srs airbag	○	●	●	●	●	0006
Sequoia	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Sequoia	Air conditioner	○	●	●	●	●	0065
Sequoia	Back door	○	●	●	●	●	
Sequoia	Back door p/w	○	●	●	●	●	
Sequoia	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Sequoia	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Sequoia	Can bus gateway v	○	●	●	●	●	
Sequoia	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Sequoia	Cruise control	○	●	●	●	●	0003 0036

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Sequoia	D-door motor	○	●	●	●	●	0016
Sequoia	Driver seat	○	●	●	●	●	
Sequoia	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Sequoia	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Sequoia	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Sequoia	Mirror	○	●	●	●	●	
Sequoia	Occupant detection	○	●	●	●	●	0032
Sequoia	P-door motor	○	●	●	●	●	0016
Sequoia	PPS	○	●	●	●	●	0025 0006
Sequoia	Sliding roof	○	●	●	●	●	
Sequoia	Srs airbag	○	●	●	●	●	0006
Sequoia	Tilt&telescopic	○	●	●	●	●	0026
Sequoia	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Sequoia	Air suspension	○	●	●	●	●	0054 0006 0158 0152
Sequoia	Rl-door motor	○	●	●	●	●	0016
Sequoia	Rr-door motor	○	●	●	●	●	0016
Sequoia	Accessory gateway	○	●	●	●	●	0002
Sequoia	Laser cruise	○	●	●	●	●	0003 0035 0036
Sequoia	Body	○	●	●	●	●	
Sequoia	Driver door	○	●	●	●	●	
Sequoia	Passenger door	○	●	●	●	●	
Sequoia	Sliding roof	○	○	○	●	●	
Sequoia	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Sequoia	Driver seat	○	○	○	●	●	
Sequoia	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Sequoia	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Sequoia	Navigation system	○	●	●	●	●	
Sequoia	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Sienna	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Sienna	Air conditioner	○	●	●	●	●	0065
Sienna	Back door	○	●	●	●	●	
Sienna	Clearance sonar	○	●	●	●	●	0046
Sienna	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Sienna	Cruise control	○	●	●	●	●	0003 0036
Sienna	D-door motor	○	●	●	●	●	0016
Sienna	Driver seat	○	●	●	●	●	
Sienna	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Sienna	EMPS	○	●	●	●	●	0006 0025
Sienna	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Sienna	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Sienna	Four wheel drive	○	●	●	●	●	0016 0081
Sienna	Gateway	○	●	●	●	●	0002 0019 0007 0020
Sienna	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Sienna	Master switch	○	●	●	●	●	0016
Sienna	Mirror l	○	●	●	●	●	
Sienna	Mirror r	○	●	●	●	●	
Sienna	Navigation system	○	●	●	●	●	
Sienna	Occupant detection	○	●	●	●	●	0032
Sienna	P-door motor	○	●	●	●	●	0016
Sienna	Parking assist monitor system	○	●	●	●	●	
Sienna	Pm1 gateway	○	●	●	●	●	0002
Sienna	Pm2 gateway	○	●	●	●	●	0002
Sienna	Power source control	○	●	●	●	●	0041
Sienna	Pre-crash 2	○	●	●	●	●	0002 0021 0122 0149 0150
Sienna	Rear left door	○	●	●	●	●	
Sienna	Rear right door	○	●	●	●	●	
Sienna	Rl-door motor	○	●	●	●	●	0016
Sienna	Rr-door motor	○	●	●	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Sienna	Srs airbag	○	●	●	●	●	0006
Sienna	Starting control	○	●	●	●	●	
Sienna	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Sienna	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Sienna	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Sienna	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Sienna	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Sienna	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Sienna	Pre-crash	○	●	●	●	●	0003 0002 0021 0122 0149 0150
Sienna	Body	○	●	●	●	●	
Sienna	Combination meter	○	○	○	●	●	0126 0172 0006 0174 0072 0026
Sienna	Driver seat	○	○	○	●	●	
Sienna	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Sienna	Laser cruise	○	●	●	●	●	0003 0035 0036
Sienna	Mirror l	○	○	○	●	●	
Sienna	Mirror r	○	○	○	●	●	
Sienna	AFS	○	●	●	●	●	
Sienna	Radar cruise	○	●	●	●	●	0003 0035 0036
Sienna	Telematics	○	●	●	●	●	0048 0124
Sienna	Advanced parking guidance system	○	●	●	●	●	
Sienna	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Sienta	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Sienta	Electric power steering	○	●	●	●	●	
Sienta	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Sienta	Immobilizer	○	●	●	●	●	
Sienta	Srs airbag(sil)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Sienta	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Soarer	4WD(SIL)	○	●	●	●	●	
Soarer	A/C(SIL)	○	●	●	●	●	
Soarer	ABS-VSC	○	●	●	●	●	
Soarer	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Soarer	AFS(SIL)	○	●	●	●	●	0043
Soarer	ARS	○	●	●	●	●	0006
Soarer	Air suspension-ahc-tems	○	●	●	●	●	
Soarer	Back door	○	●	●	●	●	
Soarer	Back guide monitor ipa	○	●	●	●	●	
Soarer	Body	○	●	●	●	●	
Soarer	Body no.2	○	●	●	●	●	
Soarer	Body no.3	○	●	●	●	●	
Soarer	Body no.4	○	●	○	●	●	
Soarer	Body no.5	○	○	○	●	●	
Soarer	Clearance sonar	○	●	●	●	●	0046
Soarer	Combination switch	○	○	○	●	●	
Soarer	Cruise control	○	●	●	●	●	0003 0036
Soarer	Driver door	○	●	●	●	●	
Soarer	Driver seat	○	○	○	●	●	
Soarer	ECT(SIL)	○	●	●	●	●	0001 0006
Soarer	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Soarer	Electric power steering (sil rack type)	○	●	●	●	●	
Soarer	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Soarer	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Soarer	Gateway	○	●	●	●	●	0002 0019 0007 0020
Soarer	Immobilizer	○	●	●	●	●	
Soarer	Master switch	○	○	○	●	●	0016
Soarer	Meter	○	○	○	●	●	0172 0006 0174 0072
Soarer	Mirror	○	○	○	●	●	
Soarer	Mirror l	○	○	○	●	●	
Soarer	Mirror(left and right)	○	○	○	●	●	
Soarer	Passenger door	○	●	●	●	●	
Soarer	Passenger seat	○	○	○	●	●	
Soarer	Power source control	○	●	●	●	●	0041
Soarer	Rain sensor	○	○	○	●	●	
Soarer	Rear left door	○	●	●	●	●	
Soarer	Rear left seat	○	○	○	●	●	
Soarer	Rear right door	○	●	●	●	●	
Soarer	Rear right seat	○	○	○	●	●	
Soarer	Rear seat switch	○	○	○	●	●	
Soarer	Retractable hardtop	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Soarer	Security (can)	○	●	●	●	●	
Soarer	Security (sil)	○	●	●	●	●	
Soarer	Sliding roof	○	○	○	●	●	
Soarer	Srs airbag(sil)	○	●	●	●	●	0006
Soarer	Srs airbag(sil2)	○	●	●	●	●	0006
Soarer	Steering pad switch	○	○	○	●	●	
Soarer	Tilt&telescopic	○	●	●	●	●	0026
Soarer	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Soarer	VGRS	○	●	●	●	●	0005 0006
Soarer	Wiper	○	○	○	●	●	
Solara	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Solara	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Solara	Cruise control	○	●	●	●	●	0003 0036
Solara	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Solara	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Solara	Occupant detection	○	●	●	●	●	0032
Solara	Srs airbag	○	●	●	●	●	0006
Solara	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Spacio	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Sparky	A/B	○	●	●	●	●	0023 0006 0174
Sparky	A/T	○	●	●	●	●	0016
Sparky	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Sparky	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Sparky	KFS	○	●	●	●	●	0169 0010 0184 0180 0170 0171 0181
Supra	4WD(SIL)	○	●	●	●	●	
Supra	A/C(SIL)	○	●	●	●	●	
Supra	ABS-VSC	○	●	●	●	●	
Supra	ABS-VSC-TRC(SIL)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Supra	ARS	○	●	●	●	●	0006
Supra	Air suspension-ahc-tems	○	●	●	●	●	
Supra	Back door	○	●	●	●	●	
Supra	Body	○	●	●	●	●	
Supra	Body no.2	○	●	●	●	●	
Supra	Body no.3	○	●	●	●	●	
Supra	Body no.4	○	●	○	●	●	
Supra	Body no.5	○	○	○	●	●	
Supra	Clearance sonar	○	●	●	●	●	0046
Supra	Combination switch	○	○	○	●	●	
Supra	D-seat sw	○	○	○	●	●	
Supra	Driver door	○	●	●	●	●	
Supra	Driver seat	○	○	○	●	●	
Supra	Electric power steering	○	●	●	●	●	
Supra	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Supra	Gateway	○	●	●	●	●	0002 0019 0007 0020
Supra	Immobilizer	○	●	●	●	●	
Supra	Immobilizer (built-in engine)	○	●	●	●	●	
Supra	Master switch	○	○	○	●	●	0016
Supra	Meter	○	○	○	●	●	0172 0006 0174 0072
Supra	Mirror	○	○	○	●	●	
Supra	Mirror l	○	○	○	●	●	
Supra	Mirror(left and right)	○	○	○	●	●	
Supra	Night view	○	●	●	●	●	
Supra	Passenger door	○	●	●	●	●	
Supra	Passenger seat	○	○	○	●	●	
Supra	Rain sensor	○	○	○	●	●	
Supra	Rear left door	○	●	●	●	●	
Supra	Rear left seat	○	○	○	●	●	
Supra	Rear right door	○	●	●	●	●	
Supra	Rear right seat	○	○	○	●	●	
Supra	Security (sil)	○	●	●	●	●	
Supra	Sliding roof	○	○	○	●	●	
Supra	Srs airbag(sil)	○	●	●	●	●	0006
Supra	Steering pad switch	○	○	○	●	●	
Supra	Tilt&telescopic	○	●	●	●	●	0026

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Supra	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Supra	Cruise control	○	●	●	●	●	0003 0036
T100	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Tacoma	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Tacoma	Accessory gateway	○	●	●	●	●	0002
Tacoma	Cruise control	○	●	●	●	●	0003 0036
Tacoma	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Tacoma	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Tacoma	Occupant detection	○	●	●	●	●	0032
Tacoma	Srs airbag	○	●	●	●	●	0006
Tacoma	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Tacoma	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
							0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Townace	4WD(SIL)	○	●	●	●	●	
Townace	ABS-VSC	○	●	●	●	●	
Townace	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Townace	ARS	○	●	●	●	●	0006
Townace	Electric power steering	○	●	●	●	●	
Townace	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Townace	Immobilizer	○	●	●	●	●	
Townace	Immobilizer (built-in engine)	○	●	●	●	●	
Townace	Meter	○	○	○	●	●	0172 0006 0174 0072
Townace	Srs airbag(sil)	○	●	●	●	●	0006
Townace	Srs airbag(sil2)	○	●	●	●	●	0006
Townace	VGRS	○	●	●	●	●	0005 0006
Townace	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Townace	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Townace	Electric power steering (sil rack type)	○	●	●	●	●	
Townace	A/B	○	●	●	●	●	0023 0006 0174
Townace	A/T	○	●	●	●	●	0016
Townace	ABS	○	●	●	●	●	0049 0006 0174 0107 0004 0016 0023
Townace	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Toyoace/dyna 150/100	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Toyoace/dyna 150/100	ECT(SIL2)	○	●	●	●	●	0026 0006 0016
Toyoace/dyna 150/100	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Toyoace/dyna 150/100	Srs airbag(sil)	○	●	●	●	●	0006
Toyoace/dyna 150/100	Srs airbag(sil2)	○	●	●	●	●	0006
Toyoace/dyna 150/100	ECT(CAN)	○	●	●	●	●	0026 0006 0027 0016 0030

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Toyoace/dyna 150/100	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Toyoace/dyna 150/100	Immobilizer	○	●	●	●	●	
Toyoace/dyna 150/100	4WD(CAN)	○	●	●	●	●	
Toyoace/dyna 150/100	4WD(SIL)	○	●	●	●	●	
Toyoace/dyna 150/100	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Toyoace/dyna 150/100	Accessory gateway	○	●	●	●	●	0002
Toyoace/dyna 150/100	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Toyoace/dyna 150/100	Electric power steering (sil rack type)	○	●	●	●	●	
Toyoace/dyna 150/100	Immobilizer (built-in engine)	○	●	●	●	●	
Toyoace/dyna 150/100	Meter (can)	○	●	●	●	●	
Toyoace/dyna 150/100	Meter(sil)	○	○	○	●	●	
Toyoace/dyna 150/100	VGRS	○	●	●	●	●	0005 0006
Toyoace/dyna 150/100	Electric power steering	○	●	●	●	●	
Toyoace/dyna 150/100	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Toyoace/dyna 150/100	Meter	○	○	○	●	●	0172 0006 0174 0072
Toyoace/dyna 200	4WD(SIL)	○	●	●	●	●	
Toyoace/dyna 200	ABS-VSC	○	●	●	●	●	
Toyoace/dyna 200	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Toyoace/dyna 200	ARS	○	●	●	●	●	0006
Toyoace/dyna 200	ECT(SIL)	○	●	●	●	●	0001 0006
Toyoace/dyna 200	Electric power steering	○	●	●	●	●	
Toyoace/dyna 200	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Toyoace/dyna 200	Immobilizer	○	●	●	●	●	
Toyoace/dyna 200	Immobilizer (built-in engine)	○	●	●	●	●	
Toyoace/dyna 200	Meter	○	○	○	●	●	0172 0006 0174 0072
Toyoace/dyna 200	Srs airbag(sil)	○	●	●	●	●	0006
Toyoace/dyna 200	Srs airbag(sil2)	○	●	●	●	●	0006
Toyoace/dyna 200	VGRS	○	●	●	●	●	0005 0006
Toyoace/dyna 200	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Toyoace/dyna 200	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Toyoace/dyna 200	Electric power steering (sil rack type)	○	●	●	●	●	
Toyoace/dyna 200	Srs airbag	○	●	●	●	●	0006
Toyoace/dyna 200	Vehicle control	○	●	●	●	●	0030
Toyoace/dyna 200	Engine (sil2)	○	●	●	●	●	0026 0006 0057 0061 0052 0016 0015 0050 0051 0060 0030
Toyoace/dyna 200	AMT	○	●	●	●	●	0178
Toyoace/dyna 200	Auto-leveling	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Toyoace/dyna 200	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Toyoace/dyna 200	HV	○	●	●	●	●	0002 0006
Toyoace/dyna 200	Hv battery (can)	○	●	●	●	●	0002
Toyoace/dyna 200	The motor-generator	○	●	●	●	●	
Toyoace/dyna 200	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Toyoace/dyna 200	HV(CAN)	○	●	●	●	●	
Tundra	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Tundra	Body	○	●	●	●	●	
Tundra	Cruise control	○	●	●	●	●	0003 0036
Tundra	Driver door	○	●	●	●	●	
Tundra	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Tundra	Occupant detection	○	●	●	●	●	0032
Tundra	Passenger door	○	●	●	●	●	
Tundra	Sliding roof	○	○	○	●	●	
Tundra	Srs airbag	○	●	●	●	●	0006
Tundra	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Tundra	Air conditioner	○	●	●	●	●	0065
Tundra	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Tundra	Driver seat	○	●	●	●	●	
Tundra	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Tundra	Sliding roof	○	●	●	●	●	
Tundra	Tilt&telescopic	○	●	●	●	●	0026
Tundra	D-door motor	○	●	●	●	●	0016
Tundra	Mirror	○	●	●	●	●	
Tundra	P-door motor	○	●	●	●	●	0016
Tundra	PPS	○	●	●	●	●	0025 0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Tundra	Accessory gateway	○	●	●	●	●	0002
Tundra	Blind spot monitor master	○	●	●	●	●	0037 0038 0089 0090
Tundra	Blind spot monitor slave	○	●	●	●	●	0087 0091 0092
Tundra	Four wheel drive	○	●	●	●	●	0016 0081
Tundra	Gateway	○	●	●	●	●	0002 0019 0007 0020
Tundra	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Tundra	Navigation system	○	●	●	●	●	
Tundra	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Tundra	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Urban cruiser	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Urban cruiser	Air conditioner	○	●	●	●	●	0065
Urban cruiser	Charging control	○	●	●	●	●	
Urban cruiser	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Urban cruiser	D-door motor	○	●	●	●	●	0016
Urban cruiser	EMPS	○	●	●	●	●	0006 0025
Urban cruiser	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Urban cruiser	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Urban cruiser	Four wheel drive	○	●	●	●	●	0016 0081
Urban cruiser	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Urban cruiser	Srs airbag	○	●	●	●	●	0006
Urban cruiser	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Urban cruiser	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Urban cruiser	Stop and go	○	●	●	●	●	0032 0028 0033
Vanguard	4WD(CAN)	○	●	●	●	●	
Vanguard	A/C(CAN)	○	●	●	●	●	
Vanguard	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Vanguard	Accessory gateway	○	●	●	●	●	0002
Vanguard	Back guide monitor ipa	○	●	●	●	●	
Vanguard	Cruise control	○	●	●	●	●	0003 0036
Vanguard	D-door motor	○	●	●	●	●	0016
Vanguard	Electric power steering	○	●	●	●	●	
Vanguard	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Vanguard	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Vanguard	Gateway	○	●	●	●	●	0002 0019 0007 0020
Vanguard	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Vanguard	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Vanguard	Master switch	○	●	●	●	●	0016
Vanguard	Meter (can)	○	●	●	●	●	
Vanguard	Navigation system	○	●	●	●	●	
Vanguard	P-door motor	○	●	●	●	●	0016
Vanguard	Rl-door motor	○	●	●	●	●	0016
Vanguard	Rr-door motor	○	●	●	●	●	0016
Vanguard	Sliding roof	○	●	●	●	●	
Vanguard	Srs airbag(sil2)	○	●	●	●	●	0006
Vanguard	Immobilizer	○	●	●	●	●	
Vellfire	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Vellfire	AFS	○	●	●	●	●	
Vellfire	Air conditioner	○	●	●	●	●	0065
Vellfire	Back door	○	●	●	●	●	
Vellfire	Clearance sonar	○	●	●	●	●	0046
Vellfire	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Vellfire	Cruise control	○	●	●	●	●	0003 0036
Vellfire	D-door motor	○	●	●	●	●	0016
Vellfire	Driver seat	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Vellfire	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Vellfire	EMPS	○	●	●	●	●	0006 0025
Vellfire	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Vellfire	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Vellfire	Gateway	○	●	●	●	●	0002 0019 0007 0020
Vellfire	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Vellfire	Master switch	○	●	●	●	●	0016
Vellfire	Mirror	○	●	●	●	●	
Vellfire	Navigation system	○	●	●	●	●	
Vellfire	P-door motor	○	●	●	●	●	0016
Vellfire	Parking assist monitor system	○	●	●	●	●	
Vellfire	Rear left door	○	●	●	●	●	
Vellfire	Rear right door	○	●	●	●	●	
Vellfire	Rl-door motor	○	●	●	●	●	0016
Vellfire	Rr-door motor	○	●	●	●	●	0016
Vellfire	Sliding roof	○	●	●	●	●	
Vellfire	Srs airbag	○	●	●	●	●	0006
Venza	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Venza	AFS	○	●	●	●	●	
Venza	Air conditioner	○	●	●	●	●	0065
Venza	Back door	○	●	●	●	●	
Venza	Clearance sonar	○	●	●	●	●	0046
Venza	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Venza	Cruise control	○	●	●	●	●	0003 0036
Venza	D-door motor	○	●	●	●	●	0016
Venza	Driver seat	○	●	●	●	●	
Venza	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Venza	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Venza	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Venza	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Venza	Four wheel drive	○	●	●	●	●	0016 0081
Venza	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Venza	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Venza	Master switch	○	●	●	●	●	0016
Venza	Mirror l	○	●	●	●	●	
Venza	Mirror r	○	●	●	●	●	
Venza	Navigation system	○	●	●	●	●	
Venza	Occupant detection	○	●	●	●	●	0032
Venza	P-door motor	○	●	●	●	●	0016
Venza	Pm1 gateway	○	●	●	●	●	0002
Venza	Pm2 gateway	○	●	●	●	●	0002
Venza	Power source control	○	●	●	●	●	0041
Venza	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Venza	Rl-door motor	○	●	●	●	●	0016
Venza	Rr-door motor	○	●	●	●	●	0016
Venza	Sliding roof	○	●	●	●	●	
Venza	Srs airbag	○	●	●	●	●	0006
Venza	Starting control	○	●	●	●	●	
Venza	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Venza	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Venza	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164
Venza	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Verossa	4WD(SIL)	○	●	●	●	●	
Verossa	A/C(SIL)	○	●	●	●	●	
Verossa	ABS-VSC	○	●	●	●	●	
Verossa	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Verossa	AFS(SIL)	○	●	●	●	●	0043
Verossa	ARS	○	●	●	●	●	0006
Verossa	Air suspension-ahc-tems	○	●	●	●	●	
Verossa	Back door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Verossa	Body	○	●	●	●	●	
Verossa	Body no.2	○	●	●	●	●	
Verossa	Body no.3	○	●	●	●	●	
Verossa	Body no.4	○	●	○	●	●	
Verossa	Body no.5	○	○	○	●	●	
Verossa	Clearance sonar	○	●	●	●	●	0046
Verossa	Combination switch	○	○	○	●	●	
Verossa	D-seat sw	○	○	○	●	●	
Verossa	Driver door	○	●	●	●	●	
Verossa	Driver seat	○	○	○	●	●	
Verossa	Electric power steering	○	●	●	●	●	
Verossa	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Verossa	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Verossa	Gateway	○	●	●	●	●	0002 0019 0007 0020
Verossa	Immobilizer	○	●	●	●	●	
Verossa	Immobilizer (built-in engine)	○	●	●	●	●	
Verossa	Master switch	○	○	○	●	●	0016
Verossa	Meter	○	○	○	●	●	0172 0006 0174 0072
Verossa	Mirror	○	○	○	●	●	
Verossa	Mirror l	○	○	○	●	●	
Verossa	Mirror(left and right)	○	○	○	●	●	
Verossa	Night view	○	●	●	●	●	
Verossa	Passenger door	○	●	●	●	●	
Verossa	Passenger seat	○	○	○	●	●	
Verossa	Power source control	○	●	●	●	●	0041
Verossa	Rain sensor	○	○	○	●	●	
Verossa	Rear left door	○	●	●	●	●	
Verossa	Rear left seat	○	○	○	●	●	
Verossa	Rear right door	○	●	●	●	●	
Verossa	Rear right seat	○	○	○	●	●	
Verossa	Security (sil)	○	●	●	●	●	
Verossa	Sliding roof	○	○	○	●	●	
Verossa	Srs airbag(sil)	○	●	●	●	●	0006
Verossa	Srs airbag(sil2)	○	●	●	●	●	0006
Verossa	Steering pad switch	○	○	○	●	●	
Verossa	Tilt&telescopic	○	●	●	●	●	0026
Verossa	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Verossa	VGRS	○	●	●	●	●	0005 0006
Verossa	Wiper	○	○	○	●	●	
Verossa	Cruise control	○	●	●	●	●	0003 0036
Verso	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Verso	Air conditioner	○	●	●	●	●	0065

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Verso	Charging control	○	●	●	●	●	
Verso	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Verso	Cruise control	○	●	●	●	●	0003 0036
Verso	D-door motor	○	●	●	●	●	0016
Verso	EMPS	○	●	●	●	●	0006 0025
Verso	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Verso	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Verso	HI autoleveling	○	●	●	●	●	0042 0083 0056
Verso	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Verso	Master switch	○	●	●	●	●	0016
Verso	P-door motor	○	●	●	●	●	0016
Verso	Pm1 gateway	○	●	●	●	●	0002
Verso	Pm2 gateway	○	●	●	●	●	0002
Verso	Power source control	○	●	●	●	●	0041
Verso	Rl-door motor	○	●	●	●	●	0016
Verso	Rr-door motor	○	●	●	●	●	0016
Verso	Sliding roof	○	●	●	●	●	
Verso	Srs airbag	○	●	●	●	●	0006
Verso	Starting control	○	●	●	●	●	
Verso	Stop and go	○	●	●	●	●	0032 0028 0033
Verso	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Verso	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Verso	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Verso-s/ractis	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Verso-s/ractis	Air conditioner	○	●	●	●	●	0065
Verso-s/ractis	Charging control	○	●	●	●	●	
Verso-s/ractis	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Verso-s/ractis	D-door motor	○	●	●	●	●	0016
Verso-s/ractis	EMPS	○	●	●	●	●	0006 0025
Verso-s/ractis	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Verso-s/ractis	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Verso-s/ractis	HI autoleveling	○	●	●	●	●	0042 0083 0056
Verso-s/ractis	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Verso-s/ractis	Navigation system	○	●	●	●	●	
Verso-s/ractis	Power source control	○	●	●	●	●	0041
Verso-s/ractis	Sliding roof	○	●	●	●	●	
Verso-s/ractis	Srs airbag	○	●	●	●	●	0006
Verso-s/ractis	Starting control	○	●	●	●	●	
Verso-s/ractis	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Verso-s/ractis	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Verso-s/ractis	Stop and go	○	●	●	●	●	0032 0028 0033
Verso-s/ractis	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Verso-s/ractis	Cruise control	○	●	●	●	●	0003 0036
Vios	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Vios	Air conditioner	○	●	●	●	●	0065
Vios	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Vios	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Vios	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Vios	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Vios	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Vios	Srs airbag	○	●	●	●	●	0006
Vios	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Vios	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Vios	Power source control	○	●	●	●	●	0041
Vios	Starting control	○	●	●	●	●	
Vios	D-door motor	○	●	●	●	●	0016
Vios	Sliding roof	○	●	●	●	●	
Vios	Cruise control	○	●	●	●	●	0003 0036
Vios	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Vios	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Vista/vista ardeo	4WD(SIL)	○	●	●	●	●	
Vista/vista ardeo	A/C(SIL)	○	●	●	●	●	
Vista/vista ardeo	ABS-VSC	○	●	●	●	●	
Vista/vista ardeo	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Vista/vista ardeo	ARS	○	●	●	●	●	0006
Vista/vista ardeo	Back door	○	●	●	●	●	
Vista/vista ardeo	Body	○	●	●	●	●	
Vista/vista ardeo	Body no.2	○	●	●	●	●	
Vista/vista ardeo	Clearance sonar	○	●	●	●	●	0046
Vista/vista ardeo	D-seat sw	○	○	○	●	●	
Vista/vista ardeo	Driver door	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Vista/vista ardeo	Driver seat	○	○	○	●	●	
Vista/vista ardeo	ECT(SIL)	○	●	●	●	●	0001 0006
Vista/vista ardeo	Electric power steering	○	●	●	●	●	
Vista/vista ardeo	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Vista/vista ardeo	Gateway	○	●	●	●	●	0002 0019 0007 0020
Vista/vista ardeo	Immobilizer	○	●	●	●	●	
Vista/vista ardeo	Master switch	○	○	○	●	●	0016
Vista/vista ardeo	Meter	○	○	○	●	●	0172 0006 0174 0072
Vista/vista ardeo	Mirror	○	○	○	●	●	
Vista/vista ardeo	Mirror l	○	○	○	●	●	
Vista/vista ardeo	Mirror(letf and right)	○	○	○	●	●	
Vista/vista ardeo	Passenger door	○	●	●	●	●	
Vista/vista ardeo	Passenger seat	○	○	○	●	●	
Vista/vista ardeo	Rear left door	○	●	●	●	●	
Vista/vista ardeo	Rear left seat	○	○	○	●	●	
Vista/vista ardeo	Rear right door	○	●	●	●	●	
Vista/vista ardeo	Rear right seat	○	○	○	●	●	
Vista/vista ardeo	Rear seat switch	○	○	○	●	●	
Vista/vista ardeo	Security (sil)	○	●	●	●	●	
Vista/vista ardeo	Sliding roof	○	○	○	●	●	
Vista/vista ardeo	Srs airbag(sil)	○	●	●	●	●	0006
Vista/vista ardeo	Steering pad switch	○	○	○	●	●	
Vista/vista ardeo	Tilt&telescopic	○	●	●	●	●	0026
Vista/vista ardeo	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Vista/vista ardeo	Air suspension-ahc-tems	○	●	●	●	●	
Vista/vista ardeo	Body no.3	○	●	●	●	●	
Vista/vista ardeo	Body no.4	○	●	○	●	●	
Vista/vista ardeo	Body no.5	○	○	○	●	●	
Vista/vista ardeo	Combination switch	○	○	○	●	●	
Vista/vista ardeo	Immobilizer (built-in engine)	○	●	●	●	●	
Vista/vista ardeo	Night view	○	●	●	●	●	
Vista/vista ardeo	Rain sensor	○	○	○	●	●	
Vitz	4WD(CAN)	○	●	●	●	●	
Vitz	4WD(SIL)	○	●	●	●	●	
Vitz	A/C(CAN)	○	●	●	●	●	
Vitz	A/C(SIL)	○	●	●	●	●	
Vitz	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Vitz	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Vitz	AFS(SIL)	○	●	●	●	●	0043
Vitz	Accessory gateway	○	●	●	●	●	0002
Vitz	Air suspension-ahc-tems	○	●	●	●	●	
Vitz	Body	○	●	●	●	●	
Vitz	D-door motor	○	●	●	●	●	0016
Vitz	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Vitz	Electric power steering (sil rack type)	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Vitz	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Vitz	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Vitz	Gateway	○	●	●	●	●	0002 0019 0007 0020
Vitz	Hv battery (other than the system sil nhw11)	○	●	●	●	●	
Vitz	Immobilizer	○	●	●	●	●	
Vitz	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Vitz	Master switch	○	●	●	●	●	0016
Vitz	Meter (can)	○	●	●	●	●	
Vitz	Meter(sil)	○	○	○	●	●	
Vitz	P-door motor	○	●	●	●	●	0016
Vitz	Rl-door motor	○	●	●	●	●	0016
Vitz	Rr-door motor	○	●	●	●	●	0016
Vitz	Security (can)	○	●	●	●	●	
Vitz	Security (sil)	○	●	●	●	●	
Vitz	Sliding roof	○	●	●	●	●	
Vitz	Srs airbag(sil)	○	●	●	●	●	0006
Vitz	Srs airbag(sil2)	○	●	●	●	●	0006
Vitz	Steering pad switch	○	○	○	●	●	
Vitz	Stop & go	○	●	●	●	●	
Vitz	Immobilizer (built-in engine)	○	●	●	●	●	
Vitz	Charging control	○	●	●	●	●	
Vitz	Electric power steering	○	●	●	●	●	
Vitz	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Vitz	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Vitz	Power source control	○	●	●	●	●	0041
Vitz	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Vitz	Srs airbag	○	●	●	●	●	0006
Vitz	Starting control	○	●	●	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Vitz	Stop & start	○	●	●	●	●	
Vitz	ABS-VSC	○	●	●	●	●	
Vitz	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Vitz	Master switch	○	○	○	●	●	0016
Vitz	Meter	○	○	○	●	●	0172 0006 0174 0072
Vitz	Sliding roof	○	○	○	●	●	
Vitz	Electric power steering (can brush / brushless)	○	●	●	●	●	
Vitz	Electric power steering (can rack type)	○	●	●	●	●	
Voltz	4WD(SIL)	○	●	●	●	●	
Voltz	A/C(SIL)	○	●	●	●	●	
Voltz	ABS-VSC	○	●	●	●	●	
Voltz	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Voltz	AFS(SIL)	○	●	●	●	●	0043
Voltz	Air suspension-ahc-tems	○	●	●	●	●	
Voltz	Back door	○	●	●	●	●	
Voltz	Body	○	●	●	●	●	
Voltz	Body no.2	○	●	●	●	●	
Voltz	Clearance sonar	○	●	●	●	●	0046
Voltz	D-seat sw	○	○	○	●	●	
Voltz	Driver door	○	●	●	●	●	
Voltz	Driver seat	○	○	○	●	●	
Voltz	Electric power steering	○	●	●	●	●	
Voltz	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Voltz	Gateway	○	●	●	●	●	0002 0019 0007 0020
Voltz	Immobilizer	○	●	●	●	●	
Voltz	Immobilizer (built-in engine)	○	●	●	●	●	
Voltz	Master switch	○	○	○	●	●	0016
Voltz	Meter	○	○	○	●	●	0172 0006 0174 0072
Voltz	Mirror	○	○	○	●	●	
Voltz	Mirror l	○	○	○	●	●	
Voltz	Mirror(left and right)	○	○	○	●	●	
Voltz	Passenger door	○	●	●	●	●	
Voltz	Passenger seat	○	○	○	●	●	
Voltz	Power source control	○	●	●	●	●	0041
Voltz	Rear left door	○	●	●	●	●	
Voltz	Rear left seat	○	○	○	●	●	
Voltz	Rear right door	○	●	●	●	●	
Voltz	Rear right seat	○	○	○	●	●	
Voltz	Security (sil)	○	●	●	●	●	
Voltz	Sliding roof	○	○	○	●	●	
Voltz	Srs airbag(sil)	○	●	●	●	●	0006
Voltz	Srs airbag(sil2)	○	●	●	●	●	0006
Voltz	Steering pad switch	○	○	○	●	●	
Voltz	Tilt&telescopic	○	●	●	●	●	0026
Wigo	A/B	○	●	●	●	●	0023 0006 0174

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Wigo	A/T	○	●	●	●	●	0016
Wigo	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Wigo	EFI	○	●	●	●	●	0016 0127 0006 0186 0174
Wigo	EPS	○	●	●	●	●	0023 0006 0174 0025
Will cypha	4WD(SIL)	○	●	●	●	●	
Will cypha	A/C(SIL)	○	●	●	●	●	
Will cypha	ABS-VSC	○	●	●	●	●	
Will cypha	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Will cypha	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Will cypha	AFS(SIL)	○	●	●	●	●	0043
Will cypha	Air suspension-ahc-tems	○	●	●	●	●	
Will cypha	Body	○	●	●	●	●	
Will cypha	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Will cypha	Electric power steering (sil rack type)	○	●	●	●	●	
Will cypha	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Will cypha	Gateway	○	●	●	●	●	0002 0019 0007 0020
Will cypha	Immobilizer	○	●	●	●	●	
Will cypha	Immobilizer (built-in engine)	○	●	●	●	●	
Will cypha	Master switch	○	○	○	●	●	0016
Will cypha	Meter	○	○	○	●	●	0172 0006 0174 0072
Will cypha	Security (sil)	○	●	●	●	●	
Will cypha	Sliding roof	○	○	○	●	●	
Will cypha	Srs airbag(sil)	○	●	●	●	●	0006
Will cypha	Srs airbag(sil2)	○	●	●	●	●	0006
Will cypha	Steering pad switch	○	○	○	●	●	
Will cypha	Electric power steering	○	●	●	●	●	
Will vi	4WD(SIL)	○	●	●	●	●	
Will vi	A/C(SIL)	○	●	●	●	●	
Will vi	ABS-VSC	○	●	●	●	●	
Will vi	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Will vi	Air suspension-ahc-tems	○	●	●	●	●	
Will vi	Body	○	●	●	●	●	
Will vi	Electric power steering	○	●	●	●	●	
Will vi	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Will vi	Gateway	○	●	●	●	●	0002 0019 0007 0020
Will vi	Immobilizer	○	●	●	●	●	
Will vi	Immobilizer (built-in engine)	○	●	●	●	●	
Will vi	Master switch	○	○	○	●	●	0016
Will vi	Meter	○	○	○	●	●	0172 0006 0174 0072
Will vi	Security (sil)	○	●	●	●	●	
Will vi	Sliding roof	○	○	○	●	●	
Will vi	Srs airbag(sil)	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Will vi	Steering pad switch	○	○	○	●	●	
Will vi	AFS(SIL)	○	●	●	●	●	0043
Will vi	Srs airbag(sil2)	○	●	●	●	●	0006
Will vs	4WD(SIL)	○	●	●	●	●	
Will vs	A/C(SIL)	○	●	●	●	●	
Will vs	ABS-VSC	○	●	●	●	●	
Will vs	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Will vs	AFS(SIL)	○	●	●	●	●	0043
Will vs	Air suspension-ahc-tems	○	●	●	●	●	
Will vs	Body	○	●	●	●	●	
Will vs	Electric power steering	○	●	●	●	●	
Will vs	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Will vs	Gateway	○	●	●	●	●	0002 0019 0007 0020
Will vs	Immobilizer	○	●	●	●	●	
Will vs	Immobilizer (built-in engine)	○	●	●	●	●	
Will vs	Master switch	○	○	○	●	●	0016
Will vs	Meter	○	○	○	●	●	0172 0006 0174 0072
Will vs	Security (sil)	○	●	●	●	●	
Will vs	Sliding roof	○	○	○	●	●	
Will vs	Srs airbag(sil)	○	●	●	●	●	0006
Will vs	Srs airbag(sil2)	○	●	●	●	●	0006
Will vs	Steering pad switch	○	○	○	●	●	
Windom	4WD(SIL)	○	●	●	●	●	
Windom	A/C(SIL)	○	●	●	●	●	
Windom	ABS-VSC	○	●	●	●	●	
Windom	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Windom	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Windom	AFS(SIL)	○	●	●	●	●	0043
Windom	ARS	○	●	●	●	●	0006
Windom	Air suspension-ahc-tems	○	●	●	●	●	
Windom	Back door	○	●	●	●	●	
Windom	Body	○	●	●	●	●	
Windom	Body no.2	○	●	●	●	●	
Windom	Body no.3	○	●	●	●	●	
Windom	Body no.4	○	●	○	●	●	
Windom	Body no.5	○	○	○	●	●	
Windom	Clearance sonar	○	●	●	●	●	0046
Windom	Combination switch	○	○	○	●	●	
Windom	Cruise control	○	●	●	●	●	0003 0036
Windom	D-seat sw	○	○	○	●	●	
Windom	Driver door	○	●	●	●	●	
Windom	Driver seat	○	○	○	●	●	
Windom	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Windom	Electric power steering (sil rack type)	○	●	●	●	●	
Windom	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Windom	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Windom	Gateway	○	●	●	●	●	0002 0019 0007 0020
Windom	Immobilizer	○	●	●	●	●	
Windom	Immobilizer (built-in engine)	○	●	●	●	●	
Windom	Master switch	○	○	○	●	●	0016
Windom	Meter	○	○	○	●	●	0172 0006 0174 0072
Windom	Mirror	○	○	○	●	●	
Windom	Mirror l	○	○	○	●	●	
Windom	Mirror(left and right)	○	○	○	●	●	
Windom	Night view	○	●	●	●	●	
Windom	Passenger door	○	●	●	●	●	
Windom	Passenger seat	○	○	○	●	●	
Windom	Power source control	○	●	●	●	●	0041
Windom	Rain sensor	○	○	○	●	●	
Windom	Rear left door	○	●	●	●	●	
Windom	Rear left seat	○	○	○	●	●	
Windom	Rear right door	○	●	●	●	●	
Windom	Rear right seat	○	○	○	●	●	
Windom	Security (sil)	○	●	●	●	●	
Windom	Sliding roof	○	○	○	●	●	
Windom	Srs airbag(sil)	○	●	●	●	●	0006
Windom	Srs airbag(sil2)	○	●	●	●	●	0006
Windom	Stabilizer	○	●	●	●	●	
Windom	Steering pad switch	○	○	○	●	●	
Windom	Tilt&telescopic	○	●	●	●	●	0026
Windom	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Windom	VGRS	○	●	●	●	●	0005 0006
Windom	Wiper	○	○	○	●	●	
Windom	Electric power steering	○	●	●	●	●	
Wish	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Wish	Air conditioner	○	●	●	●	●	0065
Wish	Charging control	○	●	●	●	●	
Wish	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Wish	D-door motor	○	●	●	●	●	0016
Wish	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Wish	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Wish	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Wish	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Wish	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Wish	Master switch	○	●	●	●	●	0016
Wish	P-door motor	○	●	●	●	●	0016
Wish	Pm2 gateway	○	●	●	●	●	0002
Wish	Power source control	○	●	●	●	●	0041
Wish	Rl-door motor	○	●	●	●	●	0016
Wish	Rr-door motor	○	●	●	●	●	0016
Wish	Sliding roof	○	●	●	●	●	
Wish	Srs airbag	○	●	●	●	●	0006
Wish	Starting control	○	●	●	●	●	
Wish	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Wish	Cruise control	○	●	●	●	●	0003 0036
Wish	Navigation system	○	●	●	●	●	
Wish	Parking assist monitor system	○	●	●	●	●	
Wish	Pm1 gateway	○	●	●	●	●	0002
Wish	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Wish	4WD(SIL)	○	●	●	●	●	
Wish	A/C(SIL)	○	●	●	●	●	
Wish	ABS-VSC	○	●	●	●	●	
Wish	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Wish	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Wish	AFS(SIL)	○	●	●	●	●	0043
Wish	Air suspension-ahc-tems	○	●	●	●	●	
Wish	Back door	○	●	●	●	●	
Wish	Body	○	●	●	●	●	
Wish	Body no.2	○	●	●	●	●	
Wish	Clearance sonar	○	●	●	●	●	0046
Wish	D-seat sw	○	○	○	●	●	

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Wish	Driver door	○	●	●	●	●	
Wish	Driver seat	○	○	○	●	●	
Wish	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Wish	Electric power steering (sil rack type)	○	●	●	●	●	
Wish	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057
Wish	Gateway	○	●	●	●	●	0002 0019 0007 0020
Wish	Immobilizer	○	●	●	●	●	
Wish	Immobilizer (built-in engine)	○	●	●	●	●	
Wish	Master switch	○	○	○	●	●	0016
Wish	Meter	○	○	○	●	●	0172 0006 0174 0072
Wish	Mirror	○	○	○	●	●	
Wish	Mirror l	○	○	○	●	●	
Wish	Mirror(left and right)	○	○	○	●	●	
Wish	Passenger door	○	●	●	●	●	
Wish	Passenger seat	○	○	○	●	●	
Wish	Rear left door	○	●	●	●	●	
Wish	Rear left seat	○	○	○	●	●	
Wish	Rear right door	○	●	●	●	●	
Wish	Rear right seat	○	○	○	●	●	
Wish	Security (sil)	○	●	●	●	●	
Wish	Sliding roof	○	○	○	●	●	
Wish	Srs airbag(sil)	○	●	●	●	●	0006
Wish	Srs airbag(sil2)	○	●	●	●	●	0006
Wish	Steering pad switch	○	○	○	●	●	
Wish	Tilt&telescopic	○	●	●	●	●	0026
Wish	Electric power steering	○	●	●	●	●	
Wish	4WD(CAN)	○	●	●	●	●	
Wish	A/C(CAN)	○	●	●	●	●	
Wish	Back guide monitor ipa	○	●	●	●	●	
Wish	Engine (can)	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Wish	Meter (can)	○	●	●	●	●	
Wish	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Wish	Security (can)	○	●	●	●	●	
Yaris	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Yaris	Air conditioner	○	●	●	●	●	0065
Yaris	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Yaris	D-door motor	○	●	●	●	●	0016

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Yaris	EMPS	○	●	●	●	●	0006 0025
Yaris	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Yaris	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Yaris	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Yaris	Srs airbag	○	●	●	●	●	0006
Yaris	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Yaris	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Yaris	Charging control	○	●	●	●	●	
Yaris	Stop and go	○	●	●	●	●	0032 0028 0033
Yaris	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Yaris	Navigation system	○	●	●	●	●	
Yaris	Power source control	○	●	●	●	●	0041
Yaris	Starting control	○	●	●	●	●	
Yaris	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Yaris	Cruise control	○	●	●	●	●	0003 0036
Yaris	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Yaris	Occupant detection	○	●	●	●	●	0032
Yaris	Accessory gateway	○	●	●	●	●	0002
Yaris	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Yaris hv	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Yaris hv	Air conditioner	○	●	●	●	●	0065
Yaris hv	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Yaris hv	Cruise control	○	●	●	●	●	0003 0036
Yaris hv	D-door motor	○	●	●	●	●	0016
Yaris hv	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Yaris hv	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Yaris hv	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Yaris hv	Hybrid control	○	●	●	●	●	0022 0006 0057 0016 0002 0068 0069 0034 0071 0070 0026 0027
Yaris hv	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Yaris hv	Navigation system	○	●	●	●	●	
Yaris hv	Power source control	○	●	●	●	●	0041
Yaris hv	Srs airbag	○	●	●	●	●	0006
Yaris hv	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Yaris hv	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Yaris hv	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Yaris verso/echo verso	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Yaris verso/echo verso	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Yaris verso/echo verso	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Yaris verso/echo verso	Srs airbag	○	●	●	●	●	0006

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Yaris/echo	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Yaris/echo	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Yaris/echo	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Yaris/echo	Srs airbag	○	●	●	●	●	0006
Yaris/echo	EMPS	○	●	●	●	●	0006 0025
Yaris/echo	Air conditioner	○	●	●	●	●	0065
Yaris/echo	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Yaris/echo	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Yaris/echo	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Yaris/echo	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Yaris/echo	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Yaris/echo	Free-tronic	○	●	●	●	●	0004 0001
Yaris/echo	Stop and go	○	●	●	●	●	0032 0028 0033
Zelas	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Zelas	Air conditioner	○	●	●	●	●	0065
Zelas	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Zelas	Cruise control	○	●	●	●	●	0003 0036
Zelas	D-door motor	○	●	●	●	●	0016
Zelas	ECT	○	●	●	●	●	0026 0006 0027 0016 0030 0001
Zelas	EMPS	○	●	●	●	●	0006 0025

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Zelas	Engine	○	●	●	●	●	0026 0006 0057 0110 0053 0027 0016 0111 0112 0113 0114 0076 0015 0030 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163
Zelas	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187
Zelas	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Zelas	Master switch	○	●	●	●	●	0016
Zelas	P-door motor	○	●	●	●	●	0016
Zelas	Power source control	○	●	●	●	●	0041
Zelas	Sliding roof	○	●	●	●	●	
Zelas	Srs airbag	○	●	●	●	●	0006
Zelas	Starting control	○	●	●	●	●	
Zelas	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Zelas	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Zelas	Occupant detection	○	●	●	●	●	0032
Zelas	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Zelas	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Levin	ABS/VSC/TRC	○	●	●	●	●	0004 0016 0023 0024 0080 0022 0073 0088 0006 0074
Levin	Air conditioner	○	●	●	●	●	0065
Levin	Cruise control	○	●	●	●	●	0003 0036
Levin	D-door motor	○	●	●	●	●	0016
Levin	EMPS	○	●	●	●	●	0006 0025
Levin	Engine and ect	○	●	●	●	●	0006 0016 0053 0030 0057 0026 0110 0027 0111 0112 0113 0114 0076 0015 0058 0061 0077 0062 0078 0079 0052 0066 0050 0051 0060 0059 0063 0129 0162 0163 0067 0082 0064 0095 0116 0117 0118 0119 0120 0096 0097 0098 0099 0100 0101 0102
Levin	Entry&start	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0187

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Levin	Hl autoleveling	○	●	●	●	●	0042 0083 0056
Levin	Main body	○	●	●	●	●	0002 0007 0019 0020 0094 0133 0010 0013
Levin	Sliding roof	○	●	●	●	●	
Levin	Srs airbag	○	●	●	●	●	0006
Levin	Theft deterrent	○	●	●	●	●	0019 0007 0020 0044 0010 0009 0045 0014 0133 0012 0164
Levin	Immobiliser	○	●	●	●	●	0012 0008 0133 0104 0105 0045 0014 0013 0011 0147 0010 0009
Levin	Accessory gateway	○	●	●	●	●	0002
Levin	Combination meter	○	●	●	●	●	0126 0172 0006 0174 0072 0026
Levin	Charging control	○	●	●	●	●	
Levin	Multi-mode m/t	○	●	●	●	●	0001 0075 0004
Levin	Power source control	○	●	●	●	●	0041
Levin	Starting control	○	●	●	●	●	
Levin	Clearance sonar	○	●	●	●	●	0046
Levin	Navigation system	○	●	●	●	●	
Levin	Stop and go	○	●	●	●	●	0032 0028 0033
Levin	Tire pressure monitor	○	●	●	●	●	0055 0006 0084
Levin	Master switch	○	●	●	●	●	0016
Levin	P-door motor	○	●	●	●	●	0016
Levin	Rl-door motor	○	●	●	●	●	0016
Levin	Rr-door motor	○	●	●	●	●	0016
Levin	Occupant detection	○	●	●	●	●	0032
Levin	Remote engine starter	○	●	●	●	●	0047 0013 0085 0086
Levin	Parking assist monitor system	○	●	●	●	●	
Levin	Telematics	○	●	●	●	●	0048 0124
Levin	Gateway	○	●	●	●	●	0002 0019 0007 0020
Levin	4WD(SIL)	○	●	●	●	●	
Levin	A/C(SIL)	○	●	●	●	●	
Levin	ABS-VSC	○	●	●	●	●	
Levin	ABS-VSC-TRC(CAN)	○	●	●	●	●	
Levin	ABS-VSC-TRC(SIL)	○	●	●	●	●	
Levin	AFS(SIL)	○	●	●	●	●	0043
Levin	Air suspension-ahc-tems	○	●	●	●	●	
Levin	Back door	○	●	●	●	●	
Levin	Body	○	●	●	●	●	
Levin	Body no.2	○	●	●	●	●	
Levin	D-seat sw	○	●	●	●	●	
Levin	Driver door	○	●	●	●	●	
Levin	Driver seat	○	●	●	●	●	
Levin	Electric power steering (non-system type brush sil nhw11)	○	●	●	●	●	
Levin	Electric power steering (sil rack type)	○	●	●	●	●	
Levin	Engine (sil)	○	●	●	●	●	0006 0016 0053 0030 0057

Model	Systems Name	Information	Read TroubleCode	Clear TroubleCode	DataStream	Active test	Special function NO.
Levin	Immobilizer	○	●	●	●	●	
Levin	Immobilizer (built-in engine)	○	●	●	●	●	
Levin	Master switch	○	●	●	●	●	0016
Levin	Meter	○	●	●	●	●	0172 0006 0174 0072
Levin	Mirror	○	●	●	●	●	
Levin	Mirror l	○	●	●	●	●	
Levin	Mirror(left and right)	○	●	●	●	●	
Levin	Passenger door	○	●	●	●	●	
Levin	Passenger seat	○	●	●	●	●	
Levin	Rear left door	○	●	●	●	●	
Levin	Rear left seat	○	●	●	●	●	
Levin	Rear right door	○	●	●	●	●	
Levin	Rear right seat	○	●	●	●	●	
Levin	Security (sil)	○	●	●	●	●	
Levin	Sliding roof	○	●	●	●	●	
Levin	Srs airbag(sil)	○	●	●	●	●	0006
Levin	Srs airbag(sil2)	○	●	●	●	●	0006
Levin	Steering pad switch	○	●	●	●	●	
Levin	Tilt&telescopic	○	●	●	●	●	0026
Levin	Electric power steering	○	●	●	●	●	
Levin	Smart key	○	●	●	●	●	0002 0044 0013 0010 0009 0106 0020 0133 0138 0139 0019 0007 0045 0014 0012 0164

Special function NO.	Special function name
0001	Parts Exchange
0002	Initialization
0003	Beam Axis Adjustment
0004	Air Bleeding
0005	Steering Angle Adjust
0006	Check Mode
0007	Wireless Code Registration
0008	Transponder Code Registration
0009	Key Code Registration
0010	Key Code Erasure
0011	Auto Registration Closure
0012	Transponder Code Erasure
0013	ECU Communication ID Registration
0014	Key Number Registration
0015	Secondary Air Injection Check
0016	Reset Memory
0017	Activate Rear Steering Motor
0018	DRS Off-center Correction
0019	Wireless Code Erasure
0020	Wireless Door Lock Diagnosis Mode
0021	Rear Beam Axis Adjustment
0022	Inspection Mode
0023	Test Mode
0024	ECB Utility
0025	Torque Sensor Adjustment
0026	All Readiness
0027	A/T Code Reset
0028	Starter Exchange
0029	Reset A/C Information
0030	Deceleration Sensor Zero Point Calibration
0031	Deceleration Sensor Zero Point Clear
0032	ECU Exchange
0033	Oil Pump Air Bleeding
0034	B1 Air Bleeding
0035	Laser/Radar Cruise Initialization
0036	Beam Axis Misalignment Reading
0037	BSM Master Abnormal History
0038	BSM Master Beam Axis Inspection
0039	Rear Wing Zero Point Calibration
0040	Grill Shutter Control Mode Switching
0041	Auto Power OFF Cancel
0042	ECU Information Sync
0043	Steering Sensor Initialization
0044	Communication Check(Key Diag Mode)
0045	Key Number Change
0046	Steering Initialization
0047	Trouble Factor Code Clear
0048	DCM Mode Setting
0049	2nd Sys. Air Bleeding
0050	Pilot Quantity Learning
0051	Pilot Quantity Learning(Detail)
0052	Supply Pump Initialization

Special function NO.	Special function name
0053	Electric Throttle Learning
0054	Height Offset
0055	ID Registration
0056	Height Sensor Initialization
0057	VIN
0058	Pilot Quantity Learning Values Reset
0059	DPF Deterioration Record Clear
0060	A/F Sensor Compensation Reset
0061	Crank Time Compensation Reset
0062	Catalyst Record Clear
0063	Vehicle Mileage Write
0064	Shift Control Synchronization
0065	Refrigerant Gas Volume Check
0066	i-ART Learning Value Reset
0067	Learning Value Reset
0068	HV Batt Cell Low Volt READY ON Prevention Cancel
0069	Temporary Vehicle Start Up
0070	Battery Diagnosis
0071	Predagnostic Battery Charge
0072	Initializing meter usage
0073	ECB-R Utility
0074	ES Calibration
0075	Clutch Adjust Count
0076	HICM Resistance Learning Value Reset
0077	Pilot Quantity Learning Values Clear
0078	Catalyst Record Read
0079	Catalyst Record Transferring
0080	ECB2.0/2.5 Utility
0081	4WD Control Prevention Mode
0082	ATF Thermal Degradation Estimate Reset
0083	AHS Shade Angle Adjustment
0084	Tire Position Write
0085	Remote Engine Starter Initial Registration
0086	Remote Engine Starter ID Registration
0087	BSM Slave Beam Axis Inspection
0088	Vehicle Information Synchronization
0089	BSM Master Beam Axis Adjustment
0090	BSM Master Beam Axis Display
0091	BSM Slave Beam Axis Adjustment
0092	BSM Slave Beam Axis Display
0093	EV Batt Cell Low Volt READY ON Prevention Cancel
0094	Remote Door Lock Setting
0095	Glow Control Unit Inspection
0096	O2 Sensor Learning Value Reset
0097	EGR Learning Value Reset
0098	Supply Pump Learning Value Reset
0099	Idle Speed Adjustment
0100	DPF History Information Reset
0101	DPF Rejuvenation Timing Reset
0102	Air Flow Meter Learning Value Reset
0103	Sensor Adjustment
0104	Transponder Code Erasure 2

Special function NO.	Special function name
0105	Transponder Code Registration 2
0106	Driver Information Registration
0107	3rd Sys. Air Bleeding
0108	Seat Belt Reminder Setting
0109	Actuator Air Bleeding
0110	Fuel Density Learning Value Reset
0111	Injector Maintenance Learning Value Reset
0112	Switch Oil Maintenance Display
0113	iMT Installation Information Reset
0114	Switch Battery Type
0115	Total Number of Engine Starts Reset
0116	Upstream Turbine Pressure Learning Value Reset
0117	Differential Pressure Learning Value Reset
0118	NOx Storage Catalyst Learning Value Reset
0119	Swirl Valve Learning Value Reset
0120	Fuel PCV Compensation Value Reset
0121	Parts Exchange Learning
0122	Front Beam Axis Adjustment
0123	AHB-R Utility
0124	Backup Battery Replacement Reset
0125	Headlight Type Setting
0126	Cruising Range Reset
0127	Initializing meter vehicle information
0128	Initializing body ECU
0129	DOC Removal Check Mode
0130	Grill Shutter Initialization
0131	Resolver Learning/Initialization
0132	Steering angle sensor learning value reset
0133	Key Registration
0134	FC Coolant Air Bleeding
0135	Battery Discharge
0136	Discharge Data Monitoring
0137	System Calibration
0138	Smart Code Erasure
0139	Forced Ignition ON
0140	DSC Sensor Initialization
0141	TPMS Reset
0142	Key Registration
0143	Auto Registration Closure
0144	Transponder Code Erasure
0145	ECU Communication ID Registration
0146	Key Number Registration
0147	Wait Time Cancellation
0148	Wireless Code Registration
0149	Left Lateral Radar Beam Axis Adjustment
0150	Right Lateral Radar Beam Axis Adjustment
0151	Reset the Mobile Information
0152	Height Adjust
0153	Beam Axis Fine Adjustment
0154	Oil Pump Air Bleeding
0155	Laser/Radar Cruise Initialization
0156	Trouble Factor Code Clear

Special function NO.	Special function name
0157	Electric Throttle Learning
0158	Vehicle height sensor automatic adjustment
0159	ID Registration
0160	DPF Deterioration Record Clear
0161	Catalyst Record Clear
0162	Engine Control Value Initialization
0163	Engine Configuration Change
0164	Wireless Diagnosis Mode
0165	Battery ECU Initialization
0166	Initial learning
0167	Starter operating times reset/writing
0168	CVT ECU Initial Learning
0169	Antenna Communication Check
0170	Transponder Communication Check
0171	Wireless Communication Check
0172	Meter Specification Reset
0173	SOC Learning
0174	Return to Normal Mode
0175	SOC Overwrite
0176	V80 Control Flag Permission
0177	ITC Initialization
0178	AMT Configuration Change
0179	Driver Information Registration
0180	Smart Key Communication Check
0181	New Rotary Key Registration
0182	ABS Air Bleeding
0183	DVS Air Bleeding
0184	New Key Registration
0185	Laser Beam Axis Adjustment
0186	Meter Vehicle Information Reset
0187	Wireless Door Lock Diag Mode